

Navigating the settings menu



Volume Adjust

- To begin navigating the menu press the OK or down arrow button to wake the screen.
- Once awake, you can navigate to any setting you need to using the down arrow button.
- To navigate between the pages, simply press the left or right arrow.
- To enter/change a setting, press the OK button and then use the left and right arrows to change the value.
- To exit out of a setting once a value has been changed, press the OK button.
- To exit a sub menu, or go back to the game, press and hold the left arrow button for 2 seconds.
- Pressing the left arrow button while on the main menu will enter a service credit.

Menu Options

- Historical Data: Bookkeeping information
- Parameter Settings: Game settings
- Factory Data Reset: Resets game settings to default and coin/ticket information to zero
- Other Settings: Language options, test options and coin/ticket clear

Default Settings

£/\$/€1 per play

Avg tickets: 33

No.	Parameter Name	Default	Range	Comments
1	Coins per Play	1	0-20	0 Coin is free play
2	Ticket Payout	On	ON-OFF	Turns ON the ticket function
3	Mercy Tickets	5	0-100	Dispenses mercy tickets if no points are scored
4	Level 1 Time	40	10/600 Seconds a Game	Game time of the first level
5	Level 2 Time	20	10/600 Seconds a Game	Game time of the second level
6	Level 3 Time	20	10/600 Seconds a Game	Game time of the third level
7	Level 1 Score Pass	401		Cannot be changed
8	Level 2 Score Pass	701		Cannot be changed
9	Double score frequency	High	High-Normal-Low-OFF	Changes how often double score holes appear
10	Double score target time	7	5-7-10 seconds	How long double time targets last
11	Level 2 - Double score light time	3	0.5-5 Second	How long targets are lit up for in level 2
12	Level 3 - Double score light time	2	0.5-5 Second	How long targets are lit up for in level 3
13	Ticket for score range 1	10	1-500	How many tickets are given for this score range
14	Ticket for score range 2	20	2-500	How many tickets are given for this score range
15	Ticket for score range 3	30	3-500	How many tickets are given for this score range
16	Ticket for score range 4	40	4-500	How many tickets are given for this score range
17	Ticket for score range 5	50	5-500	How many tickets are given for this score range
18	Ticket for score range 6	60	6-500	How many tickets are given for this score range
19	Bonus Score	1000	100-5000 Score	The base score required to win the bonus
20	Bonus Tickets	500	10-5000 Tickets	How many tickets are given for this score range
21	High score reduction (Score)	100	0-200 points	The amount of score the high score is reduced by
22	High score reduction (Games)	50	1-50 game	The number of games before the high score starts reducing
23	High score set by player	YES	YES-NO	Allows player high scores to become the new bonus score
24	VS winner extra tickets	20	0-250 Tickets	Extra tickets earned by winner in vs play
25	Demo music	ON	On, 2 Min, 3 Min, 4 Min, 5 Min, Off	Frequency of the demo music
26	Ticket empty alert	ON	ON-OFF	There will be an audible prompt when there is a ticket error
27	Error alert	OFF	ON-OFF	There will be an audible prompt in the case of failure
28	Infrared fault notify	No	YES-NO	Error alarm if the infrared system fails
29	Retain coin/ticket data	YES	YES-NO	When this function is enabled, the coins and tickets will be saved when the machine is powered off
30	Link ID	2	Address 1-8	The cabinet ID when multiple cabinets are connected
31	LED patterns (Cage)	Col-1	Col-1 --- Col-7	Seven patterns to choose from during attract mode
32	PIR sensor	ON	ON-OFF	Toggles the cheat sensor
33	Motor Stop time ahead of time	3	0-10 Seconds	Amount of time before game ends that belt motor switches off

Suggested Settings

£/\$/€1 per play

Ticket Value: £/\$/€0.01
Avg tickets: 33

13	Ticket for score range 1	10	1-500
14	Ticket for score range 2	20	2-500
15	Ticket for score range 3	30	3-500
16	Ticket for score range 4	40	4-500
17	Ticket for score range 5	50	5-500
18	Ticket for score range 6	60	6-500
19	Bonus Score	1000	100-5000 Score
20	Bonus Tickets	500	10-5000 Tickets

£/\$/€1 per play

Ticket Value: £/\$/€0.005
Avg tickets: 65

13	Ticket for score range 1	20	1-500
14	Ticket for score range 2	40	2-500
15	Ticket for score range 3	60	3-500
16	Ticket for score range 4	80	4-500
17	Ticket for score range 5	100	5-500
18	Ticket for score range 6	120	6-500
19	Bonus Score	1000	100-5000 Score
20	Bonus Tickets	1000	10-5000 Tickets

£/\$/€1.5 per play

Ticket Value: £/\$/€0.01
Avg tickets: 50

13	Ticket for score range 1	15	1-500
14	Ticket for score range 2	30	2-500
15	Ticket for score range 3	45	3-500
16	Ticket for score range 4	60	4-500
17	Ticket for score range 5	75	5-500
18	Ticket for score range 6	90	6-500
19	Bonus Score	1000	100-5000 Score
20	Bonus Tickets	500	10-5000 Tickets

£/\$/€2 per play

Ticket Value: £/\$/€0.01
Avg tickets: 65

13	Ticket for score range 1	20	1-500
14	Ticket for score range 2	40	2-500
15	Ticket for score range 3	60	3-500
16	Ticket for score range 4	80	4-500
17	Ticket for score range 5	100	5-500
18	Ticket for score range 6	120	6-500
19	Bonus Score	1000	100-5000 Score
20	Bonus Tickets	1000	10-5000 Tickets

Adjusting Ticket Payout

To change the ticket payout to better suit your location, we recommend changing the **Ticket Score Range** (Highlighted in green), increasing or decreasing to suit your site. You can also change the **Bonus Score** and **Bonus Tickets** (Highlighted in green).

In cases where sites operate a lower tickets value than £/\$/€ 0.01 or higher value cost per play than £/\$/€ 1 you can increase the default values, from **10,20,30,40,50,60** to **20,40,60,80,100,120**.

Ticket for score range 1	10
Ticket for score range 2	20
Ticket for score range 3	30
Ticket for score range 4	40
Ticket for score range 5	50
Ticket for score range 6	60

Ticket for score range 1	20
Ticket for score range 2	40
Ticket for score range 3	60
Ticket for score range 4	80
Ticket for score range 5	100
Ticket for score range 6	120

The **Bonus Tickets** can also be increased from **500** to **1000**

Bonus Tickets	500
---------------	-----

Bonus Tickets	1000
---------------	------

If, however, you believe you are paying out too much or too little, you can further increase or decrease these values.

(Refer to **Default Settings** for min/max values)

Advanced Settings

If you wish to change the payout but do not wish to alter the primary ticket values, you can instead change some of the gameplay settings. The following settings are the ones we advise looking at in these situations:

Level 1/2/3 Time; This alters the amount of time the player has per round.

Double Score Frequency; This alters how often the double points targets appear during the first round of play.

Double Score Time; This alters how long the double points targets remain active for the respective round.

Mercy Tickets; This alters how many tickets are paid out if the player ends a game with a score of 0.

VS winner extra tickets; This alters how many tickets the winning player receives in a VS game (Only available with multiple cabinets).

Please be aware you should only change these settings once you have a good understanding of how the game works.

These settings are changed at the operators own risk.