



2.6 Install Direction

Cabinet Assembly of ATV SLAM STD


Step 1: Remove the 4 screws fixing the steering assembly, move it to the outside, and then fix it to the screw hole on the outside with four screws.

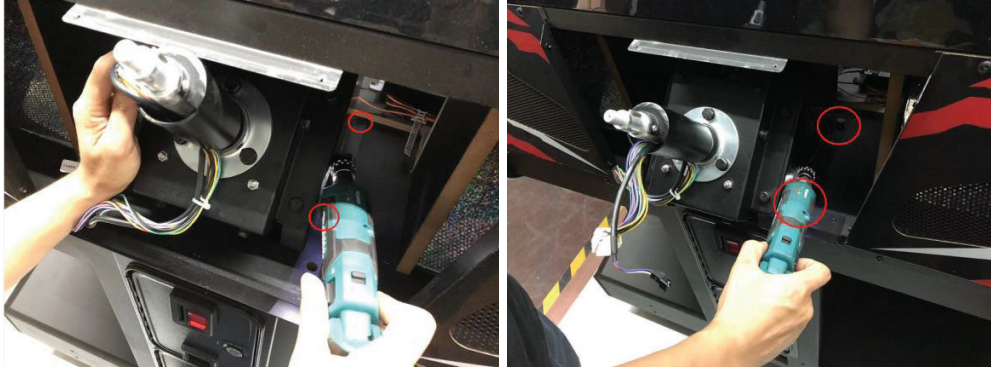


Step 2: Fix the console cover on the frame with 8 screws.

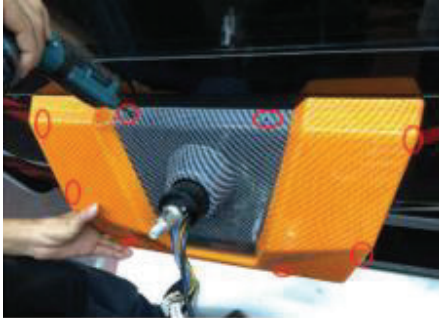

Step 3: Remove the cover plate from the handle assembly and put it on the steering assembly.

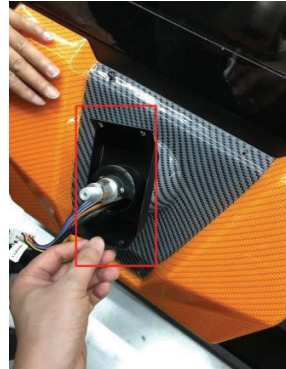

Step 4: Remove the button assembly, control panel and support plate on the handle assembly, and fix the handle assembly on the steering assembly (be careful with the wire).

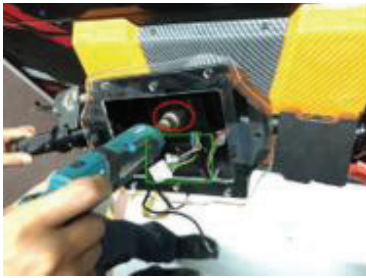

Step 5: Fix the cover plate on the handle assembly with 4 screws.



Step 6: Connect the throttle wire, fix the support plate on the handle assembly with 2 screws.




Step 7: Fix the control panel on the handle assembly with 4 screws.



Step 8: Connect the wires of button assembly, brake and boost button.




Step 9: Fix the button assembly the handle assembly with 3 screws.

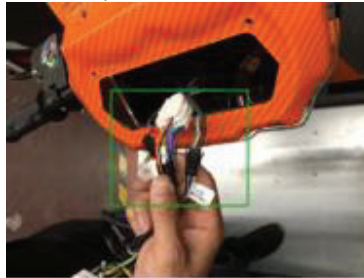

Step 10: Fix the vibration assembly on the seat with 4 screws.




Step 11: Connect the wires between the seat and the base assembly.

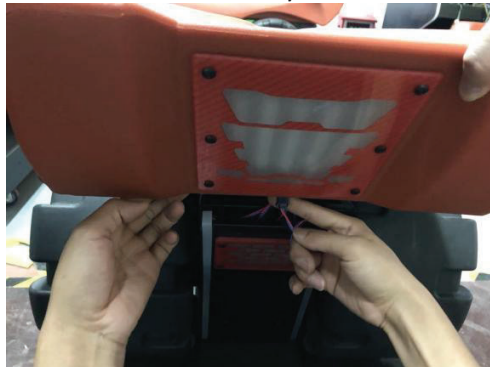

Step 12: Fix the seat on the base assembly with 6 screws.



Step 13: Fix the base assembly on the monitor frame with 4 screws.

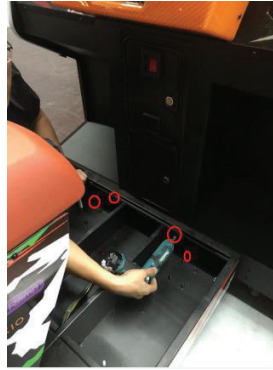

Step 14: Connect the wires between the monitor frame assembly and the base assembly.



Step 15: Fix the Foot pedal on the base assembly with 4 screws.



Step 16: Fix the LOGO on the monitor frame assembly with 6 screws.



Game cabinet assembly completed!

2.7 Warranty

■ Scope

- Inquiry regarding product can be assisted for free.
- The warranty scope for consumables and durables may differ from product to product. Please contact our after-sales service center for detailed information. The right of final interpretation is reserved.

■ Exclusive

- Damage caused by force majeure.
- Failure caused by carelessness, such as water contact, falling down, toppling, knocking.
- Failure caused by disobeying the instructions in this manual.
- Failure caused by operating the machine on inappropriate site.
- Change the original design and configuration for the game without notice.
- Failure to perform regular service and clean.
- Failure to fix the product in line with the manual's requirement.
- Malfunction or part damage caused by electromagnetic interference other electronic equipments generated.


■ Non-warranty Consumables

- Light tube and bulb
- Button lamp and switch
- Fragile items
- Solenoid
- Other spare parts

3. Linking and Networking

In the below figure, it shows how the cabinets (no. of cabinets from 2 to 4) should be linked up with the router by cables separately.

Note: Please make sure all games are in the same version in order to be linked with.

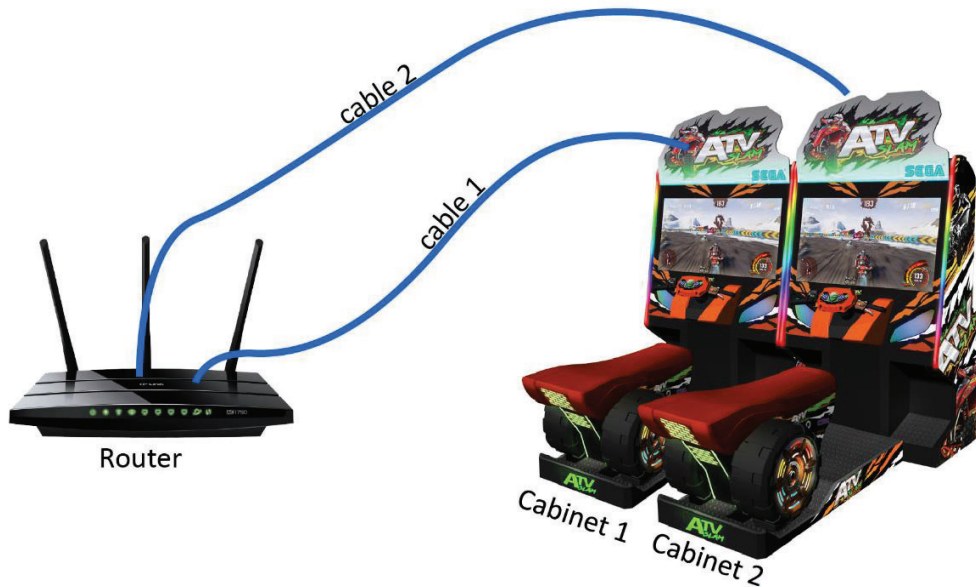

In the router, the LAN ports are where cable(s) to PCS should be inserted; the WAN port is where the Internet cable should be inserted.

