


| | |
|---|---|
| | |
| J. Basket up sensor error | <p>1、 Check communication connector on basket up sensor. Or sensor is blocked by something.</p> <p>2、 A failure of this sensor will be reflected as an error.</p> |
| K. Baffle motor error | <p>1、 Check communication connector on ball gate motor or if motor is working.</p> <p>2、 Check communication connector on basket up/down sensor.</p> |
| L. I/O board disconnected, please check | <p>Check communication connector on I/O board.</p> |
| M. Coin Tech error | <p>1、 Check coin line is not pulled low. Coin line should be 5vdc when inactive.</p> <p>2、 Check I/O board is working.</p> |

10. Limited Parts list

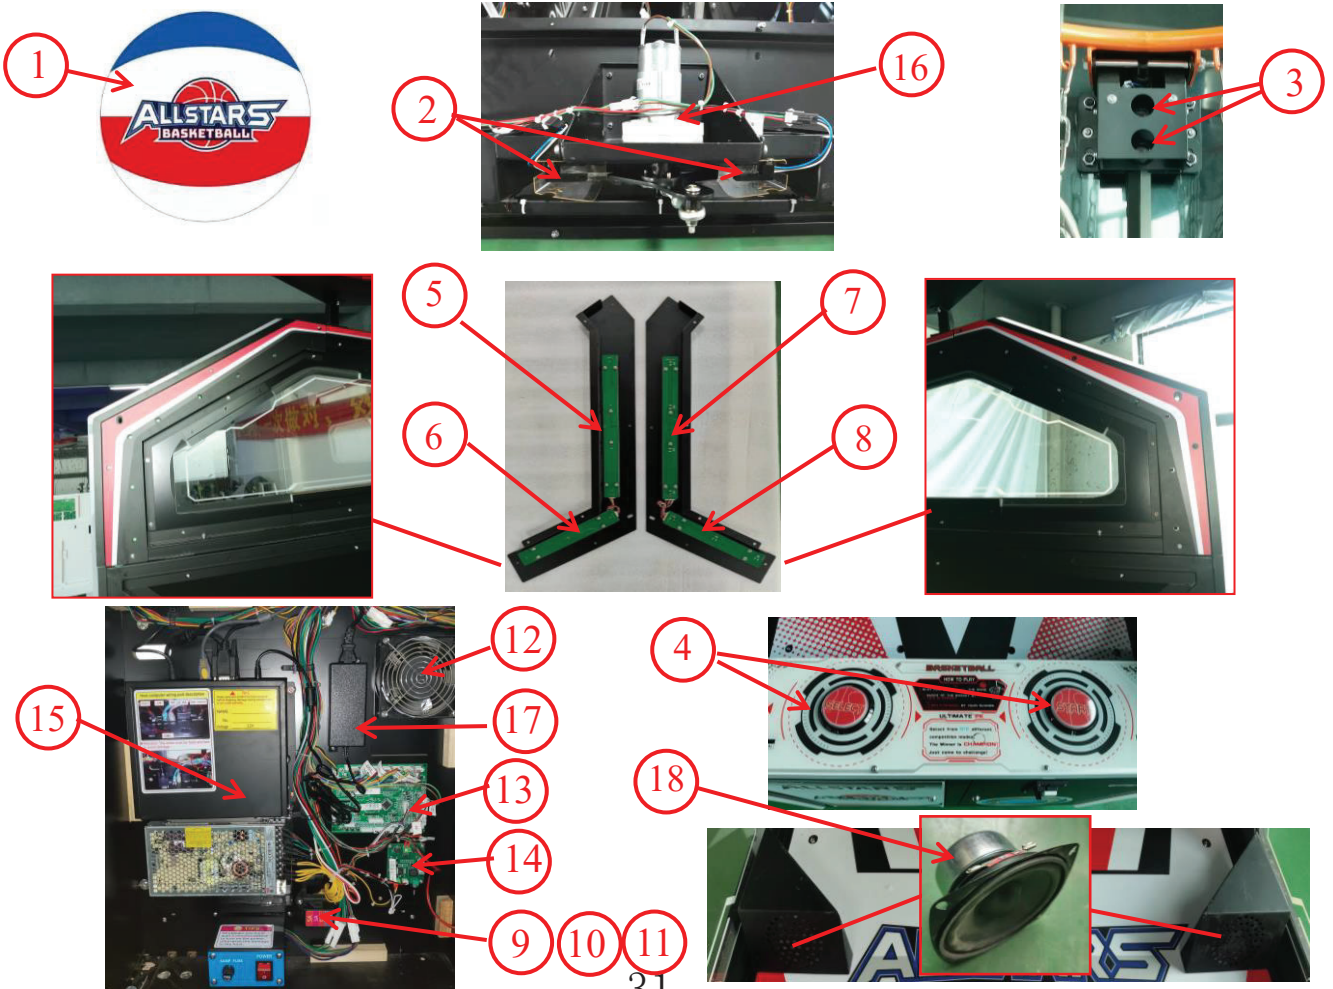

| No. | Product code | Name | Qty | Remarks |
|-----|--------------|-------------------------------------|--------|---------|
| 1 | 1.SL.YZ.0146 | Ball | | |
| 2 | 1.DZ.DQ.0295 | Baffle sensor (Ball Gate) | 2 | |
| 3 | 1.DZ.DQ.0377 | Basket sensor | 2 | |
| 4 | 1.DZ.KG.2112 | Start Button ,Select Button | 1 each | |
| 5 | 2.XB.ET.0095 | Basketball transmitter board (UP) | 1 | |
| 6 | 2.XB.ET.0096 | Basketball transmitter board (down) | 1 | |
| 7 | 2.XB.ET.0097 | Basketball receiver board (UP) | 1 | |
| 8 | 2.XB.ET.0098 | Basketball receiver board (down) | 1 | |
| 9 | 1.DZ.QT.0041 | 3A Fuse | 1 | |
| 10 | 1.DZ.QT.0050 | 5A Fuse | 1 | |
| 11 | 1.DZ.QT.0052 | 7.5A Fuse | 1 | |
| 12 | 1.DZ.FS.2002 | Fan (220V-240V) | 1 | |
| 13 | 2.XB.ET.0011 | IO board | 1 | |
| 14 | 1.DZ.XB.0155 | AMP | 1 | |
| 15 | 2.ZJ.YZ.0064 | Computer host | 1 | |
| 16 | 9.DZ.DJ.0026 | Baffle motor | 1 | |
| 17 | 1.DZ.DY.0133 | Adapter – PC PSU | 1 | |
| 18 | 1.DZ.LB.0064 | Speaker | 2 | |