



Big Sea Fishing

UCL CONNECTOR PINOUT ISSUE

If your UCL (Universal Card Link) harness is not driving or counting e-tickets, it could be because of a pinout issue with the harness in your game. To correct this, please read below.

1. Check harness is pinned correctly

- I. Locate the UCL harness in the coin door of each player position
- II. Check the pinouts match the correct allocation.

Correct allocation



UCL Pin out	
1	12v
2	Coin
3	Empty
4	Empty
5	Empty
6	Ticket Notch
7	Empty
8	Ticket run
9	Ground (0v)

2. Move the pin positions

- I. If incorrect, you will need to move 2 wires;
Ticket Notch and Ticket Run
 - Move Pin 3 (Green) to Empty hole 6
 - Move Pin 5 (White) to empty hole 8

