



## First Time Set Up Guide

Thank you for your purchase of Cosmic Tower by LAI Games. Provided below are the default settings installed on your unit.

This unit is already programmed to achieve the following results with the default settings:

OVERVIEW	TICKET VALUE 1 CENT				
PRICE PER PLAY	\$ 1.00	\$ 1.25	\$ 1.50	\$ 1.75	\$ 2.00
TICKET VALUE	0.01	0.01	0.01	0.01	0.01
PAYOUT %	46%	37%	31%	26%	23%

Default Settings:

- To access the main settings menu press and hold the “MODE” button:
- Select “SETUP MENU”

Option	Description	Default
<b>1 CREDIT/COIN</b>	COINS PER 1 CREDIT	1
<b>COIN/1 CREDIT</b>	NUMBER OF COINS FOR SINGLE CREDIT	6/1
<b>GAME TIME</b>	TIME BEFORE GAME AUTO PLAYS	20
<b>TICKETS/1 COIN</b>	FIXED VALUE	10
<b>EVENT TIME</b>	PARTY TIME	15
<b>S.P TIME</b>	SUPER PARTY TIME	0
<b>S.P BONUS</b>	VALUE OF SUPER BONUS	1000
<b>S.P BONUS LIMIT</b>	MAXIMUM VALUE OF SUPER BONUS	1000
<b>S.P BONUS INC</b>	SUPER BONUS INCREMENT PER CREDIT	0
<b>MERCY TICKET</b>	MERCY TICKET	0
<b>TICKET/SCORE</b>	TICKET RATIO PER PHYSICAL TICKET	1
<b>COIN LIMIT</b>	NUMBER OF COINS THAT CAN BE ENTERED	500
<b>TILT ERROR</b>	SECONDS BEFORE TILT ACTIVATES	3
<b>DEMO SOUND</b>	INTERVAL OF SOUND DURING ATTRACT	ON
<b>DEMO PLAY</b>	INTERVAL OF PUSHER MOVEMENT (ATRCT)	ON

- These are the **default** settings, please make sure to select “**SAVE & EXIT**” after adjustments.

## Adjust Ticket Values:

- At the main menu, select "TICKET SCORE":

Option	Default
Ticket 1st	2
Ticket 2nd	3
Ticket 3rd	4
Ticket 4th	5
Ticket 5th	6
Ticket Event	10
Save & Exit	
Cancel and Exit	

- After completing any changes, select "**SAVE & EXIT**"


## Adjust Ticket Values:

- At the main menu, scroll down and select "**EXIT**"

The game should start initializing, while in this state.

- Access the **Hidden Menu** by Pressing and Holding the following buttons:

**LEFT + RIGHT + SELECT + MODE**

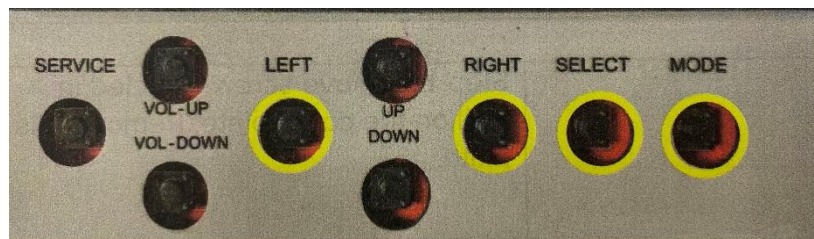

- Enter Password: **000** and press **SELECT** to confirm.
- Select "SCORE LIMIT SET" > "PEARL SCORE"

Option	Default
Coin 1st	2
Coin 2nd	3
Coin 3rd	4
Coin 4th	5
Coin 5th	6
Coin Event	10
Save & Exit	
Cancel and Exit	

- After completing any changes, select “**SAVE & EXIT**”


### **Tower Value Adjustments:**

Provided is a step-by-step guide to set Wheel Tower values!

**NOTE:** You should only adjust the Wheel Settings if you plan to modify the default Tower Values

- Access the **Hidden Menu** by Pressing and Holding the following buttons:

**LEFT + RIGHT + SELECT + MODE**

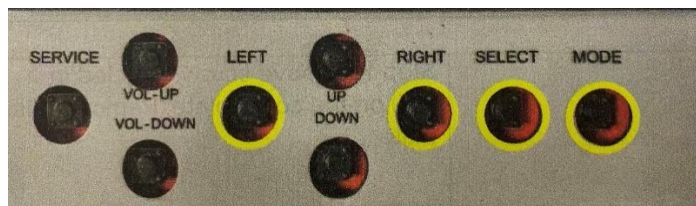

- Enter Password: **000** and press **SELECT** to confirm.
- Select “**SCORE LIMIT SET**” > “**WHEEL SCORE**”

Example of WHEEL SCORE Menu below:



- Reference the **number** on the Default Tower Value Decal (Highlighted in Yellow)
  - Example Below:



Provided is a chart referencing **settings options** to the **number** found on the **Default Tower Values**.

[WHEEL No. 1]			[WHEEL No. 2]		
<i>Wheel Position</i>	<i>Default</i>	<i>Decal Number</i>	<i>Wheel Position</i>	<i>Default</i>	<i>Decal Number</i>
Wheel O 1st	0		Wheel O 1st	0	
Wheel T 2nd	10	1-17	Wheel T 2nd	16	2-2
Wheel O 3rd	0		Wheel O 3rd	0	
Wheel O 4th	0		Wheel T 4th	16	2-3
Wheel O 5th	0		Wheel O 5th	0	
Wheel O 6th	0		Wheel T 6th	16	2-4
Wheel O 7th	0		Wheel O 7th	0	
Wheel T 8th	10	1-11	Wheel T 8th	16	2-5
Wheel O 9th	0		Wheel O 9th	0	
Wheel O 10th	0		Wheel T 10th	16	2-6
Wheel O 11th	0		Wheel O 11th	0	
Wheel O 12th	0		Wheel T 12th	16	2-7
Wheel O 13th	0		Wheel O 13th	0	
Wheel T 14th	10	1-5	Wheel T 14th	16	2-8
Wheel O 15th	0		Wheel O 15th	0	
Wheel O 16th	0		Wheel T 16th	16	2-9
Wheel O 17th	0		Wheel O 17th	0	
Wheel O 18th	0		Wheel T 18th	16	2-1
Save & Exit			Save & Exit		
Cancel & Exit			Cancel & Exit		

<b>[WHEEL No. 3]</b>			<b>[WHEEL No. 4]</b>		
<i>Wheel Position</i>	<i>Default</i>	<i>Decal Number</i>	<i>Wheel Position</i>	<i>Default</i>	<i>Decal Number</i>
Wheel T 1st	50	3-8	Wheel O 1st	0	
Wheel O 2nd	0		Wheel T 2nd	150	4-2
Wheel T 3rd	75	3-7	Wheel T 3rd	180	4-3
Wheel T 4th	50	3-6	Wheel O 4th	0	
Wheel O 5th	0		Wheel T 5th	150	4-4
Wheel T 6th	150	3-5	Wheel T 6th	300	4-5
Wheel T 7th	50	3-4	Wheel O 7th	0	
Wheel O 8th	0		Wheel T 8th	150	4-6
Wheel T 9th	75	3-3	Wheel T 9th	180	4-7
Wheel T 10th	50	3-2	Wheel O 10th	0	
Wheel O 11th	0		Wheel T 11th	150	4-8
Wheel T 12th	150	3-1	Wheel T 12th	300	4-1
Save & Exit			Save & Exit		
Cancel & Exit			Cancel & Exit		

<b>[WHEEL No. 5]</b>			<b>[No. 6]</b>	
<i>Wheel Position</i>	<i>Default</i>	<i>Decal Number</i>	<i>Wheel Position</i>	<i>Default</i>
Wheel T 1st	500	5-3	Wheel T 1st	JP
Wheel T 2nd	350	5-2	Wheel T 2nd	JP
Wheel O 3rd	0		Save & Exit	
Wheel T 4th	350	5-1	Cancel & Exit	
Wheel T 5th	500	5-6		
Wheel T 6th	350	5-5		
Wheel O 7th	0			
Wheel T 8th	350	5-4		
Save & Exit				
Cancel & Exit				

Each slot on the tower can be changed between Coin, Ticket or Ball reward.

- Adjust accordingly by referencing the number on the default tower decal to the option in settings.
- Make your adjustments and replace the decal with the options provided with your unit.
- After Completing Changes, select **“SAVE & EXIT”**

Adjustable Ranges:		
Wheel O	No Rewards	0 ~ 500
Wheel T	Rewards Tickets	0 ~ 500
Wheel C	Rewards Coins	0 ~ 500
Wheel B	Rewards Big Balls	0 ~ 500

**NOTE:** "T" Ticket values can only be adjusted in increments of 10 and "C" Coin values can be adjusted in increments of 1

**Example:**

If "T" Value needs to be adjusted to a value of 35, you can adjust in increments of 1 by selecting the "C" Coin value to 35, then switching over to "T" Value.



**LAIGAMES**

*Any Questions?* Feel free to contact our support team: [support@laigames.com](mailto:support@laigames.com)