


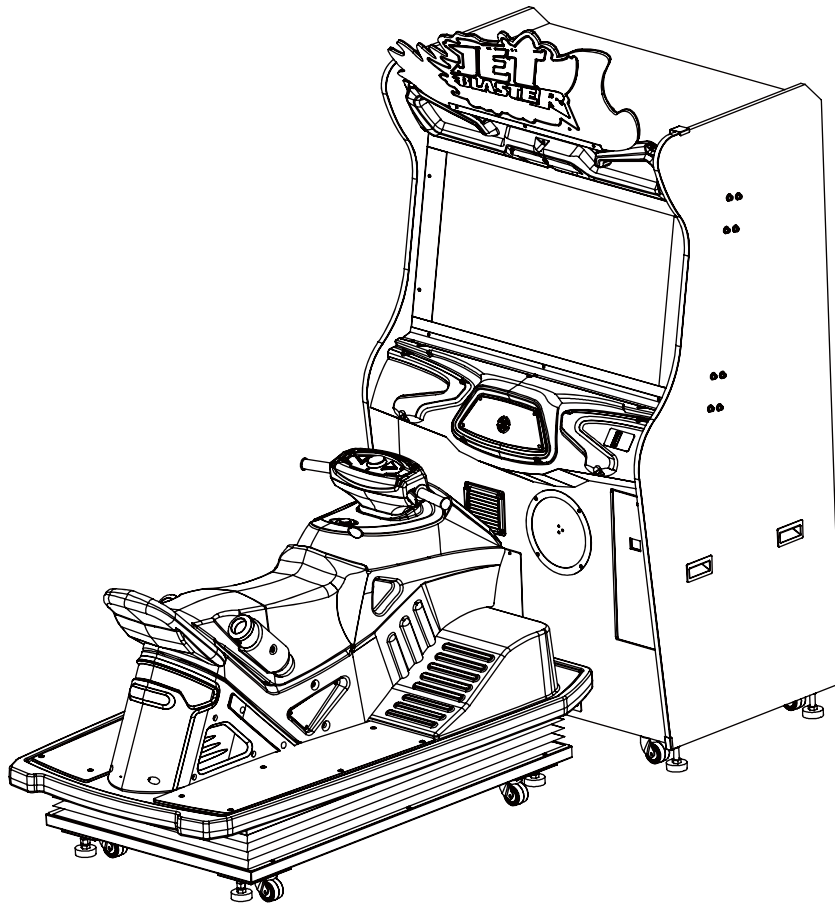

OWNER'S MANUAL

Ver.1.00



WARNING

- For safety reasons, please read the manual first before plugging in machine.
- Please keep this manual properly for convenient reference as needed.

About This Manual

Thank you for purchasing this product.

The manual describes how to install, set up, use and maintain the product. The main purpose of the manual is to instruct how to operate the product correctly and safely. Please follow all the safety and warning instructions in the manual to avoid personal injury and product damage.

This product may only be maintained by a technician. A technician mainly refers to a person who has obtained a certificate of senior middle school related to mechanical engineering, electrical engineering or at a level equal to that of technical senior middle school graduates, and is engaged routinely in the maintenance, management, repair of amusement machine.

When transferring the ownership of this product, be sure to provide this manual with the machine.

For further information about the game and repair (including consumables), please contact our company.

© GuangZhou Wahlap Technology Corporation Limited All Rights Reserved.

Unauthorized reproduction of this document or any of its contents in any form is strictly forbidden.

Table of Contents

About This Manual

1. Safety Precautions.	1
1.1 Warning Stickers	1
1.2 Placing Site	1
1.3 Safety Precautions	2
1.4 Precaution during Play	3
1.5 Transporting and Moving	3
1.6 Installing and Placing	4
1.7 Caution & Warning Stickers	5
2. Product Description.	6
2.1 Product Specification	6
2.2 Overview	7
2.3 Parts Name	8
2.4 Shipment List	9
2.5 Packing List	12
2.6 Install Direction	13
2.7 Warranty	16
3. Game Description.	17
3.1 Appearance Design	17
3.2 Game introduction	17
3.3 How to play	17
4. Test and Setting.	18
4.1 Description of service panel	18
4.2 Arcade operator	19
4.2.1 Information	20
4.2.2 Game settings	21
4.2.3 Bookkeeping	22
4.2.4 Credit settings	25
4.2.5 Input Settings	26
4.2.6 Output settings	29
4.2.7 Clock settings	30
4.2.8 Network	31
4.2.9 Language	32
4.2.10 Exit	32
5. Maintenance and Service.	33
5.1 Maintenance and service	33
5.2 Part Replacement	34
5.2.1 Replacement of coin box	34
5.2.2 Replacement of woofer	35
5.2.3 Replacement of fluid control valve	36

5.2.4 Replacement of filter	37
5.2.5 Replacement of LCD	38
5.2.6 Replacement of air blower	39
5.2.7 Replacement of light box and light strip	39
5.2.8 Replacement of button (inching)	40
5.2.9 Replacement of pedal light strips at two sides of body	40
5.2.10 Replacement of light panel for exhaust pipe	41
6. Assembly	42
6.1 Assembly tree diagram	42
6.2 Final Assembly of the Machine(JBS-0000000)	43
6.3 Assembly of seat dynamic parts(JBS-0100000)	44
6.3.1 Assembly of seat base(JBS-0101000)	46
6.3.2 Pedal assembly(JBS-0102000)	47
6.3.3 Body assembly(JBS-0103000)	48
6.3.4 Motor assembly(JBS-0104000)	49
6.3.5 Rear decoration assembly(JBS-0105000)	50
6.3.6 Handle assembly(JBS-0106000)	51
6.3.7 Assembly of front housing(JBS-0107000)	52
6.3.8 Assembly of button panel(JBS-0108000)	53
6.3.9 Airbag assembly(JBS-0109000)	54
6.4 General assembly of LED frame(JBS-0200000)	55
6.4.1 Assembly of LCD wooden frame(JBS-0200000A)	58
6.4.1.1 LCD frame assembly(JBS-0201000)	60
6.4.2 Assembly of main machine(JBS-0202000)	61
6.4.3 Assembly of power box(JBS-0203000)	62
6.4.4 PCB board assembly(JBS-0204000)	63
6.4.5 Power switch Assembly(JBS-0205000)	64
6.4.6 LCD assembly(JBS-0206000)	65
6.4.7 Assembly of air blower (JBS-0207000)	66
6.4.8 Speaker assembly(JBS-0208000)	67
6.4.9 Camera assembly(JBS-0209000)	68
6.4.10 LCD upper right lamp assembly(JBS-0210000)	69
6.4.11 LCD upper left lamp assembly(JBS-0211000)	70
6.4.12 Console decoration assembly(JBS-0212000)	71
6.4.13 Assembly of front cover of light box(JBS-0213000)	72
6.4.14 Coin-box assembly(JBS-0214000)	73
6.4.15 Assembly of service panel (JBS-0215000)	74
6.4.16 Fan assembly(JBS-0216000)	75
6.4.17 Assembly of pneumatic control valve(JBS-0217000)	76
6.4.18 Air compressor assembly(JBS-0218000)	77
6.4.19 Transformer assembly(JBS-0219000)	78
6.4.20 Glass frame assembly(JBS-0220000)	79
6.4.21 Filter assembly (JBS-0221000)	80
6.4.22 Water catcher assembly(JBS-0222000)	81

6.4.23 Coin door assembly(JBS-0223000)	82
6.4.24 Fluid control valve assembly (JBS-0224000).....	83
6.5 Board components(JBS-0300000)	84
6.6 Air compressor door assembly(JBS-0400000)	85
6.7 Assembly of main machine door(JBS-0500000).....	86
7.Printing Pattern	87
8.Wiring Diagram	88
After-sales Service	

1. Safety Precautions

1.1 Warning Stickers

In order to avoid injury to related people and damage to property, please observe the followings:

PLEASE READ FIRST

- The following marks can be used to indicate the magnitudes of risk and damage caused by ignorance or improper operation:



means “may result in serious injury or death”



means “may result in minor injury or property damage”

Serious Injury: refers to the situations in which hospital treatment or long-term treatment will be accepted because of losing sight, getting hurt, getting burnt, electric shock, fracture or intoxication.

Minor Injury: refers to the cases that there is no need to go to hospital or accept long-term treatment.

Property Damage: refers to the damage of house, facility, or hurt of livestock and pet

1.2 Placing Site

Warning

- please make sure the place line has been grounded before product installation, setup, testing, operation or repair
- This machine is designed for indoor use only. Never install the machine outdoors. Meanwhile, please avoid the following locations indoor:
 - Direct sunlight, water leakage, damp and high temperature places.
 - Near Flammable, volatile, or/and dangerous substance.
 - Slope, unstable places or locations subject to frequent vibration.
 - Near emergency exit, fire extinguisher or similar equipment.
- The rear part has the vent for heat emission from PC or screen. Don't place anything nearby to avoid game failure.
- Provide a space of minimum 30cm between the rear of the machine and the wall for good ventilation and heat emission

1.3 Safety Precautions

The owner shall pay attention to the followings when placing, checking and repairing machine to insure player's security and avoid damage:

Warning

- please check the voltage is 110V or 220V before the machine connects to the power supply, or it may cause a fire or electric shock.
- Make sure to plug the game into 110V or 220V main outlet to avoid fire and electric shock.
- Make sure to turn off the power when performing maintenance and service to avoid electric shock or short circuit.
- Do not unplug or plug the plug instantly.
- Don't touch the power plug with a wet hand to avoid electric shock.
- Don't expose the power cord/grounding line on the passageway. Failure to do this will damage the power cord, causing electric shock or short circuit.
- Don't lay anything near the power cord to avoid fire.
- Do not pull the power cord when unplugging, please hold the plug to avoid power cord damage, causing fire or electric shock.
- In case of power cord damage, please contact the local distributor for replacement
- Only use fuse and spare parts specified by our company
- Connect the connector firmly and tighten the screws.
- Do not dismount, replace or convert the product without our permission in order to avoid damage and human injury due to improper operation.
- Check and maintain the machine regularly.
- Keep "Warning stickers" clean and legible. Replace it immediately when the words are not legible or the dirt can't be removed.
- Please contact our service center when performing any work that is not described in this manual, and follow the instruction provided.

1.4 Precautions during Play

Caution

- In order to avoid injury and accident during play, the following people shall not play the game:
 - People who are injured or less mobile.
 - Person with poor health condition, such as hypertension or heart disease.
 - Person wearing high-heeled or slippery shoes.
 - Person who can't touch the pedal.
 - Pregnant woman, drunk people.
 - Person over 150KG
- When a player feels uncomfortable during play, remind the person to have a break, or stop playing.
- Make sure the player reads the warning labels and other indications, and plays in accordance with the instructions to avoid accidents such as electric shock and short circuit
- Bystander shall not operate any button when the player is playing the game to avoid unnecessary trouble.

1.5 Transporting and moving

Caution

Transporting

- When transporting the machine with an elevator, be sure to employ "Lift Point" to prevent accident and damage to the machine.
- To prevent movement when transporting the machine on a vehicle, please fix the casters and fully retract the adjusters. Failure to do this may cause damage to the machine.
- When carrying the machine with a forklift, be sure to insert the fork to fork position and lift stably. If not, it may cause accident and damage to the machine.
- The glass and LCD screen are fragile. Avoid violent vibration or shock when transporting.

Moving

- Before moving the machine, unplug the power plug to prevent accident. Don't damage the cord.
- Pay attention to the obstructions and uneven surface when moving the machine to prevent accident and damage to the machine.
- Fully retract all adjusters before moving to prevent accident and hazard.
- Make sure to use at least two persons to conduct the above work to avoid accident and injury
- Pay attention to the moving direction, see fig.



1.6 Installing and Placing

Pay attention to the following when placing the machine.

Caution

- Place the machine on the flat and slip resistant area.
- Use the adjusters to fix the machine (See diagram 1)
 1. Loosen the nuts for the adjusters (clockwise), tighten the bolts with a wrench (clockwise).
 2. Tighten the nut firmly (counter clockwise) and fix it well.

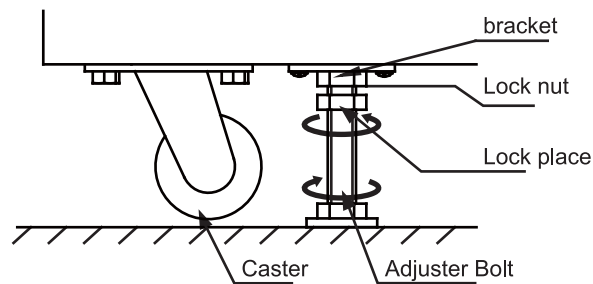


Diagram (1)

- Provide a space of minimum 30cm between the rear of the machine and the wall for good ventilation and heat emission (See diagram 2 and diagram 3).

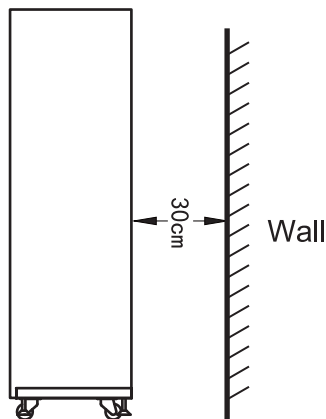


Diagram (2)


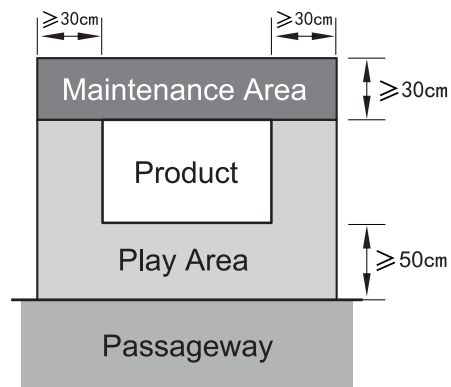


Diagram (3)

1.7 Caution & Warning Stickers

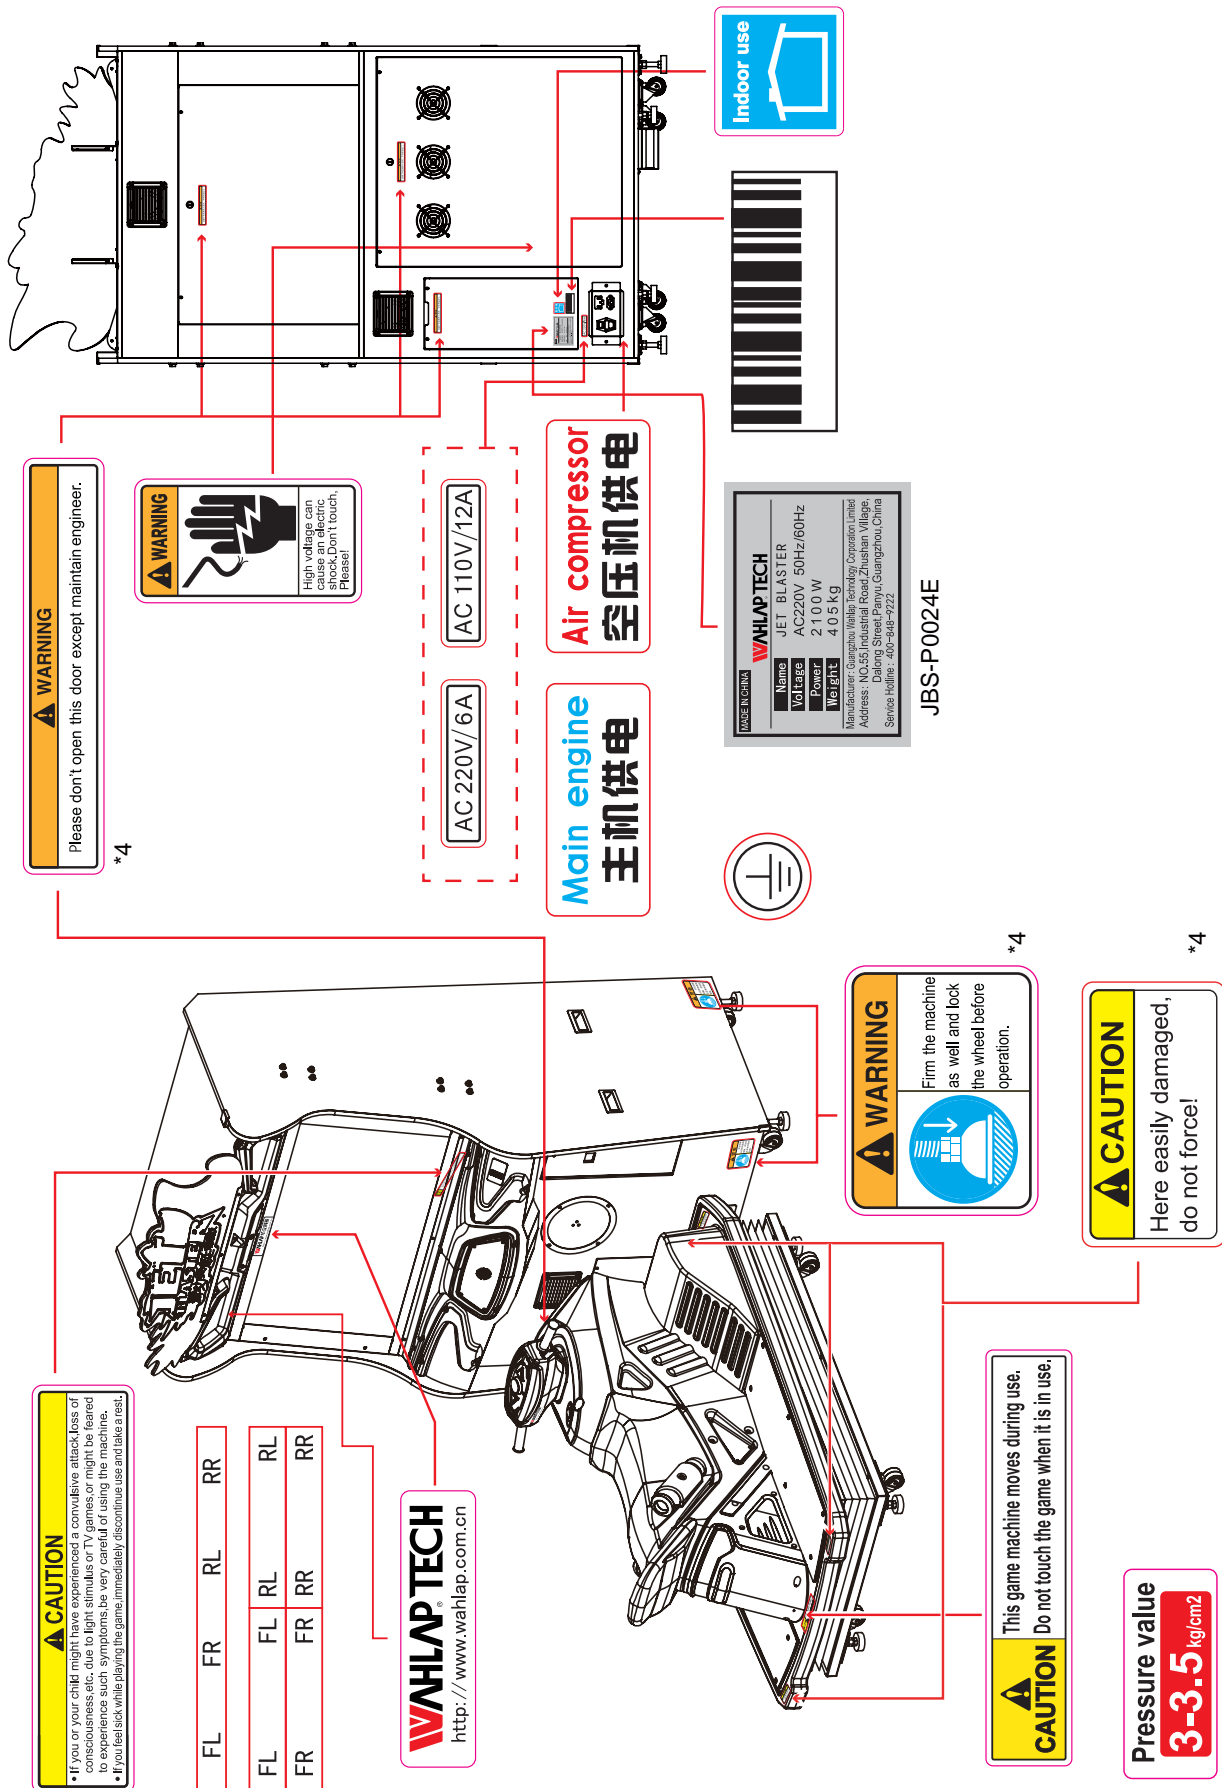


2. Product Description

2.1 Product Specification


■ Location	Indoor Only
■ Dimension	1135(W)×2630(D)×2380(H)mm
■ Rated Voltage, Frequency	AC220V 50Hz/60Hz
	AC110V 50Hz/60Hz
■ Power Consumption	2100W
■ Weight	405kg
■ Temperature Range	5~40 °C

*110V voltage can be set through the transformer and fuse. Please contact the distributor for details.

NOTE: The contents herein described are subject to change without notice.

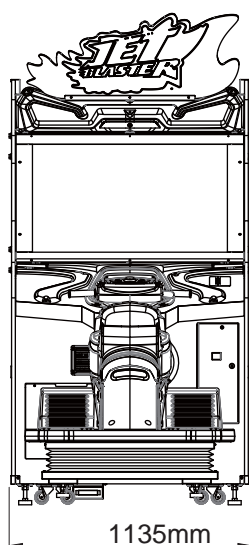


■ Front View

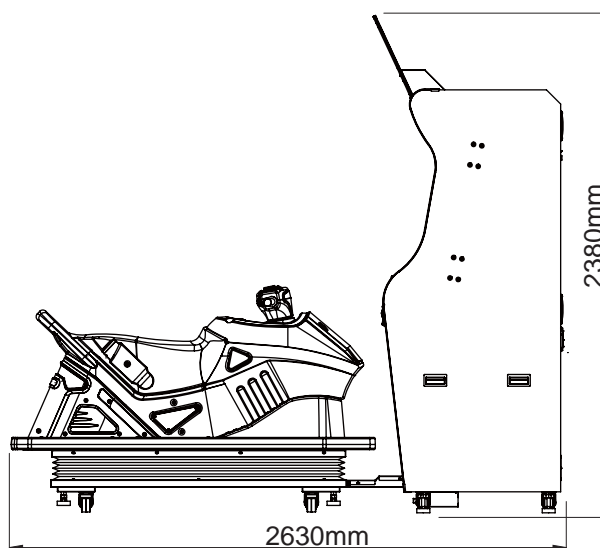


■ Side View

2.2 Overview


■ Side View

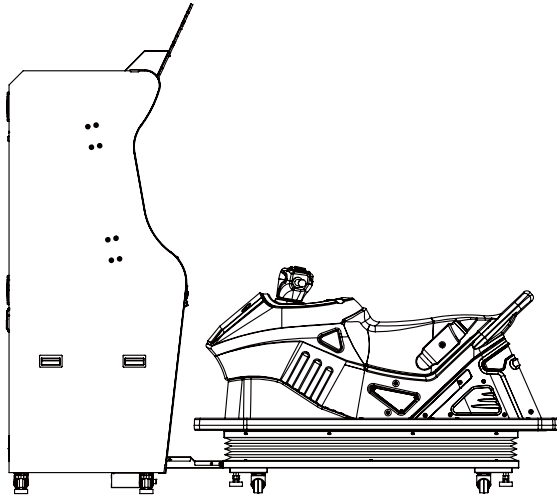


■ Rear View

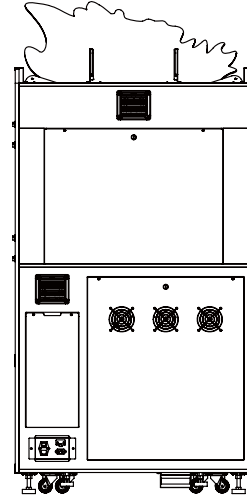


■ Top View

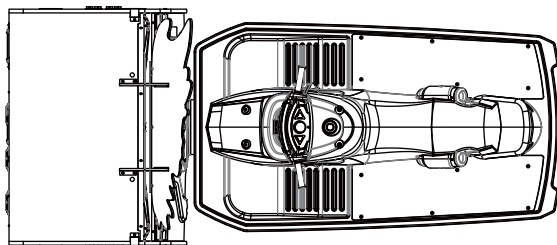

■ Bottom View

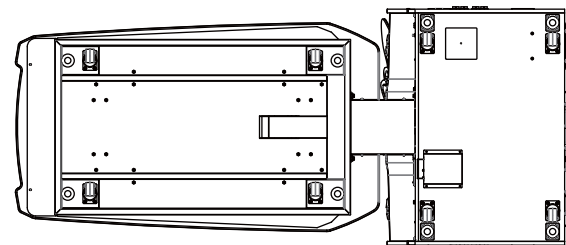


2.3 Parts Name

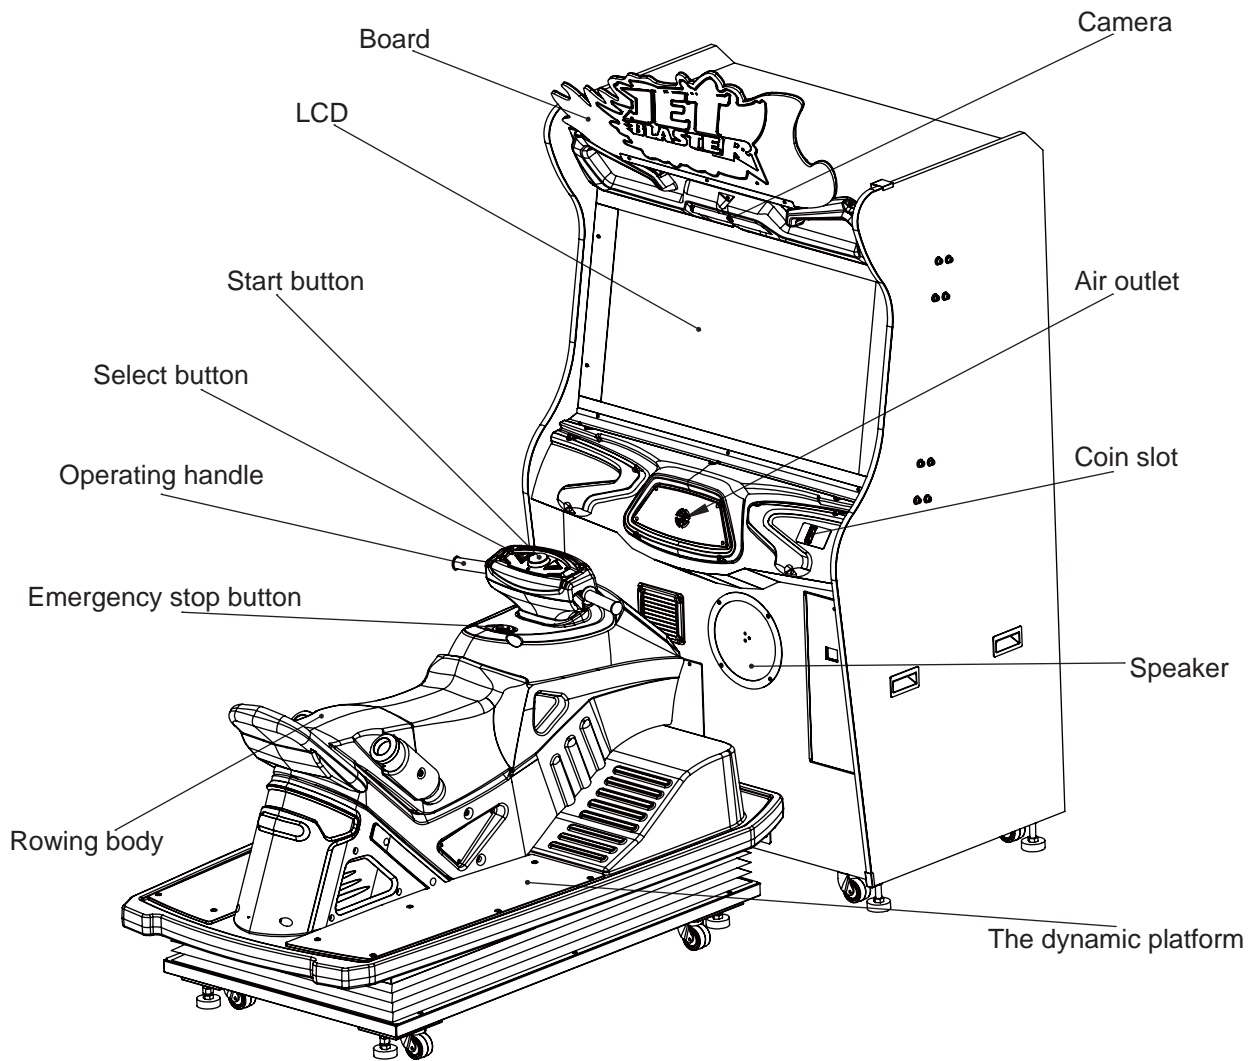

2.4 Shipment List


■ Packing Carton 1

产品名称 Product Name	
箱体重量 Box Weight	190 kg
箱体尺寸 Box Dimension	1860 × 1030 × 1220 mm (W) (D) (H)
箱体备注 Box Remark	座椅包装、附属品箱
C/NO.	1/2

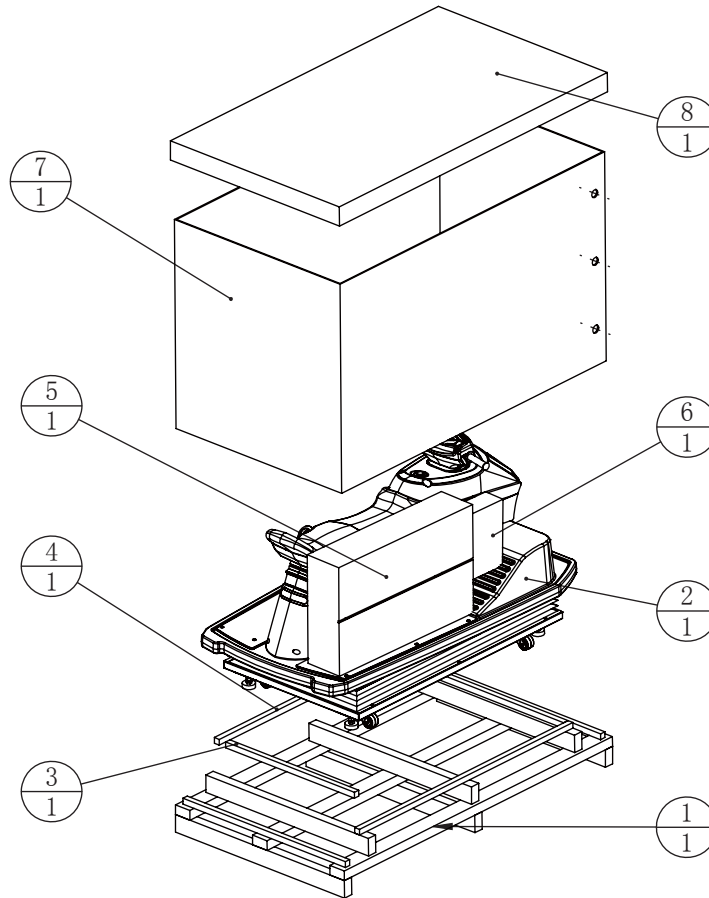

8	JBS-9901E05	seat cover	2C 850g T-7	1	
7	JBS-9901E04	Seat fence	2C 850g T-7	1	
6		Accessory List		1	
5	JBS-9903000	Light box packing		1	
4	JBS-9901E03	Limit bar 2	wood	1	
3	JBS-9901E02	Limit bar 1	wood	1	
2	JBS-0100000	Assembly of dynamic parts of seat		1	
1	JBS-9901E01	seat Platform	wood	1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code


■ Light box packing

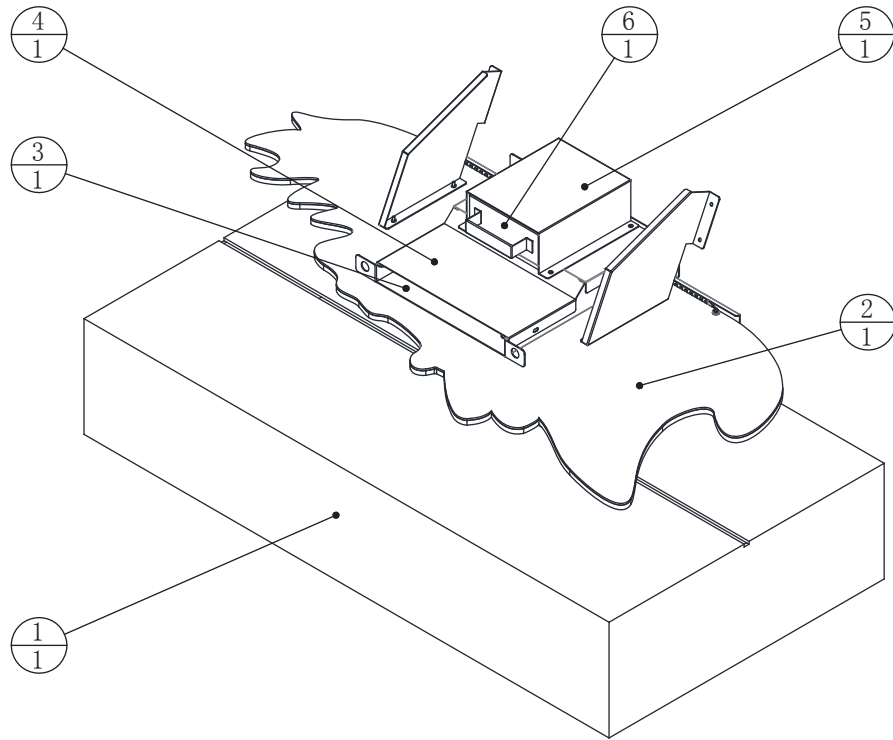

6	JBS-0222A02	To sink		1	
5	JBS-0222A01	Water trough fixing plate		1	
4	JBS-0000A02	Connecting the cover plate	SPCC-1.2T	1	
3	JBS-0000A01	Connecting plate	SPCC-1.5T	1	
2	JBS-0300000	Kanban assembly		1	
1	JBS-9903E01	Light box carton	K=K	1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

■ Packing Carton 1

产品名称 Product Name	
箱体重量 Box Weight	290 kg
箱体尺寸 Box Size	1250 × 950 × 2180 mm (W) (D) (H)
箱体备注 Note	主题看板、液晶组件
C/NO.	2/2

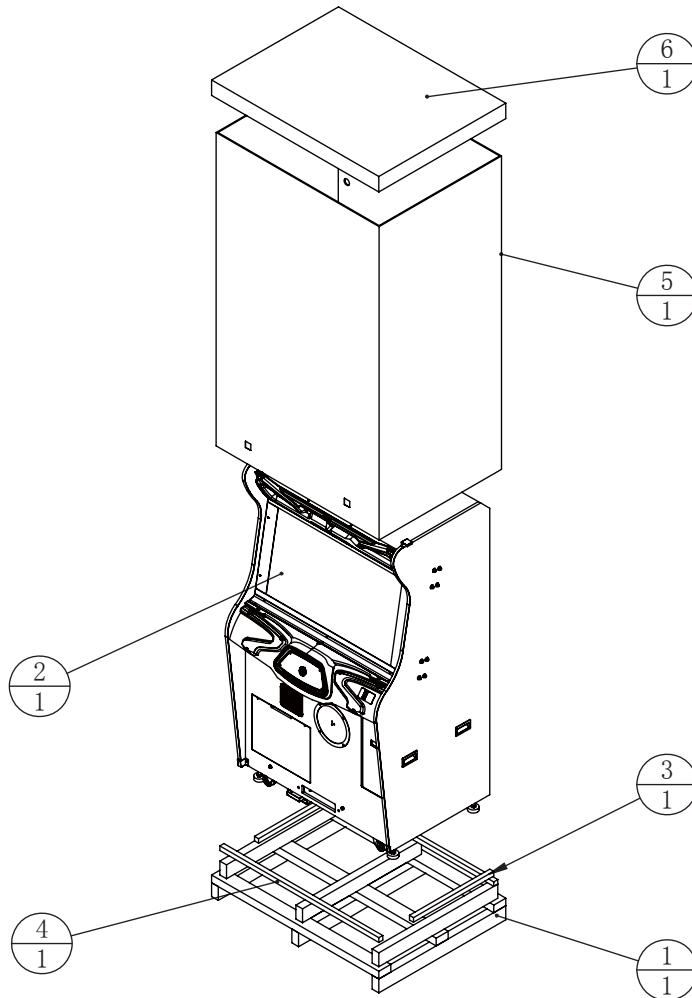

6	JBS-9902E05	LCD frame canopy	2C 850g T-7	1	
5	JBS-9902E04	LCD frame fence	2C 850g T-7	1	
4	JBS-9902E03	limit wood 4	wood	1	
3	JBS-9902E02	limit wood 3	wood	1	
2		LCD frame assembly		1	
1	JBS-9902E01	LCD frame platform	wood	1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

2.5 Packing List

Please check the following items after purchasing our product. If any part missing or damaged, please contact our sales person!


Description	Specification	Quantity	Remarks
User's manual		1	
key		2	
Fuse tube	F6A/5*20 250V	1	
Network cable	AMP 5M	1	
AC cable	3m (1.0mm ²)	4	
Cross large flat head screw	M4*20 (Chrome)	4	
Cross round head three combination screws	M4*12 (black)	4	
Cross round head three combination screws	M4*16 (black)	4	
Outer hexagonal triple combination	8*30*16*1.5(black)	4	
Spacer column	black POM	2	

2.6 Install Direction

■ Step 1:


I: Installation of light box

1. Take out light box assembly from carton;
2. Fix light box with four screws as shown in figure below;
3. Connect the wires.

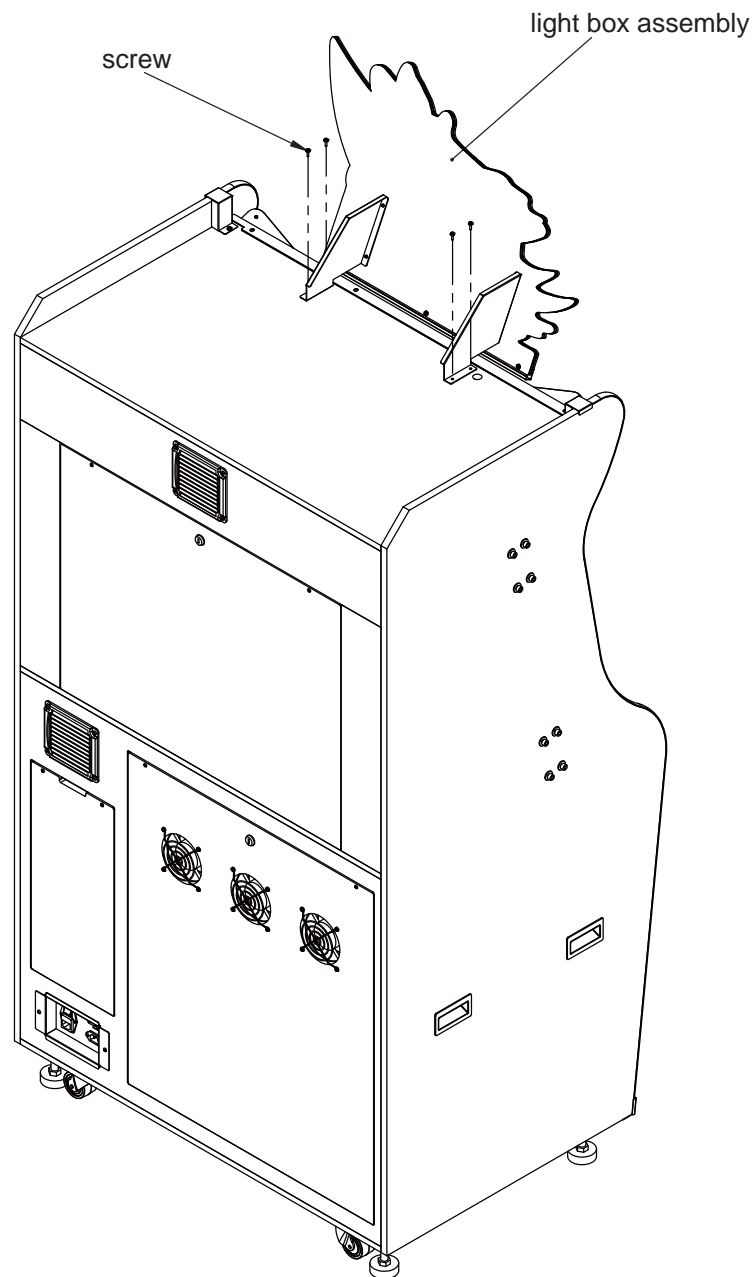


II: Installation of water catcher

1. Loosen two screws and remove the front door;
2. Take out fixing plate for water tank and water catcher from carton;
3. Fix fixing plate for water tank with four screws as shown in figure below;
4. Insert water catcher into the fixing plate for water tank.

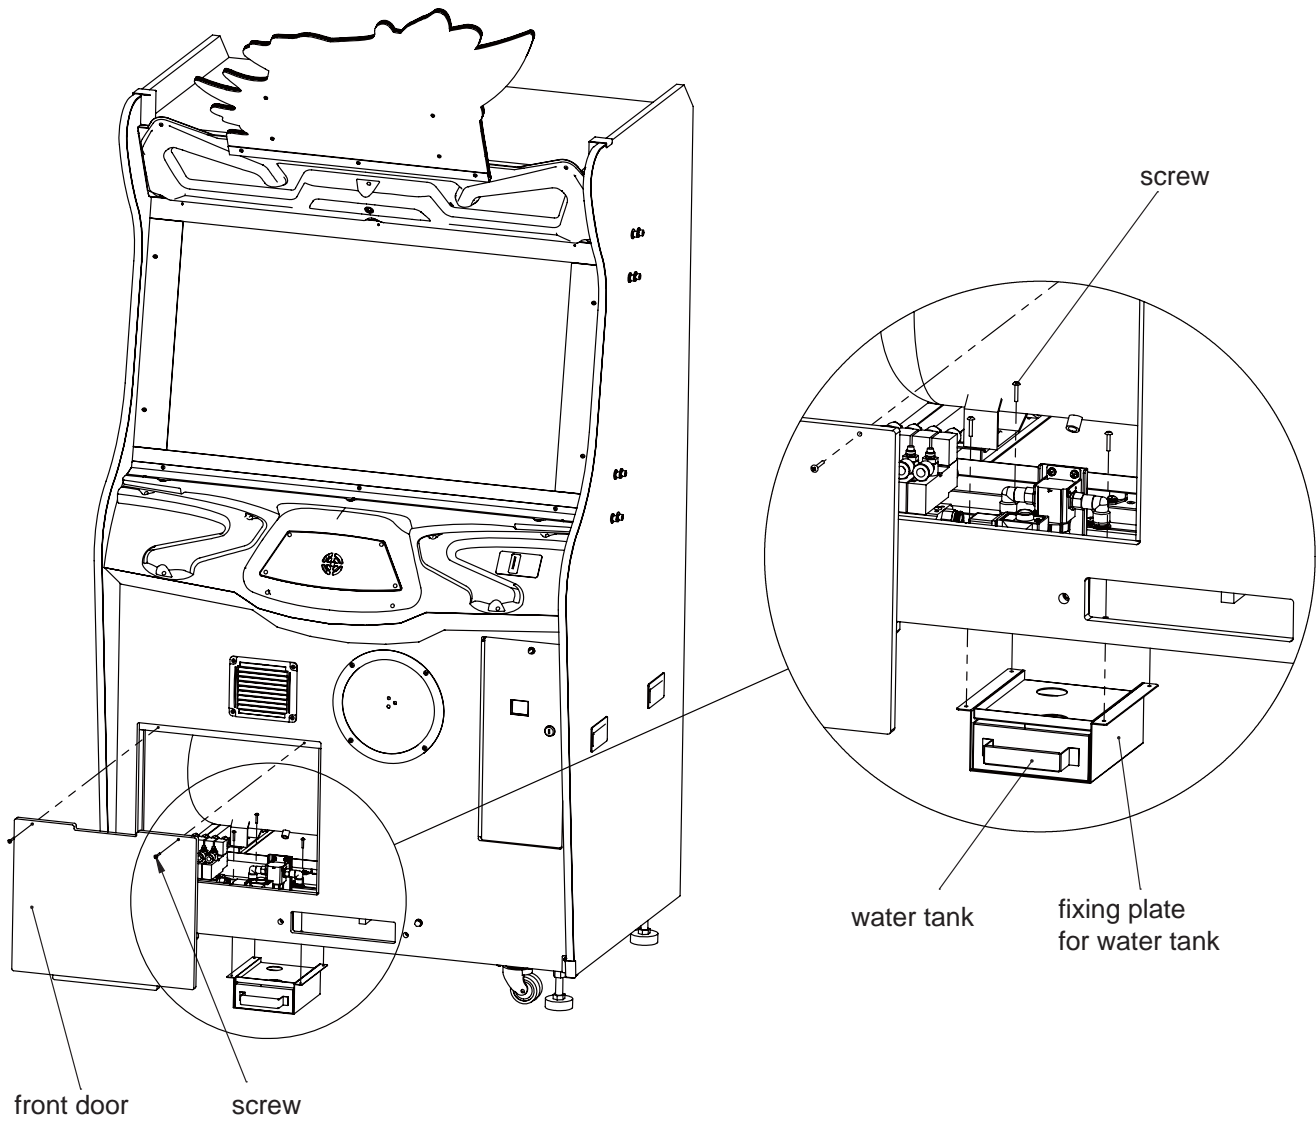

III. Connect front and rear frames

1. Take out the connecting plate, connecting cover plate and spacing column (accessory box) from carton;
2. Fix the connecting plate with four screws and two spacing columns, as shown in figure below;
3. Connect all wires and air pipes, please note that air pipe shall be inserted according to label instructions;
4. Fix and connect the cover plate with four screws;
5. Secure the front door.

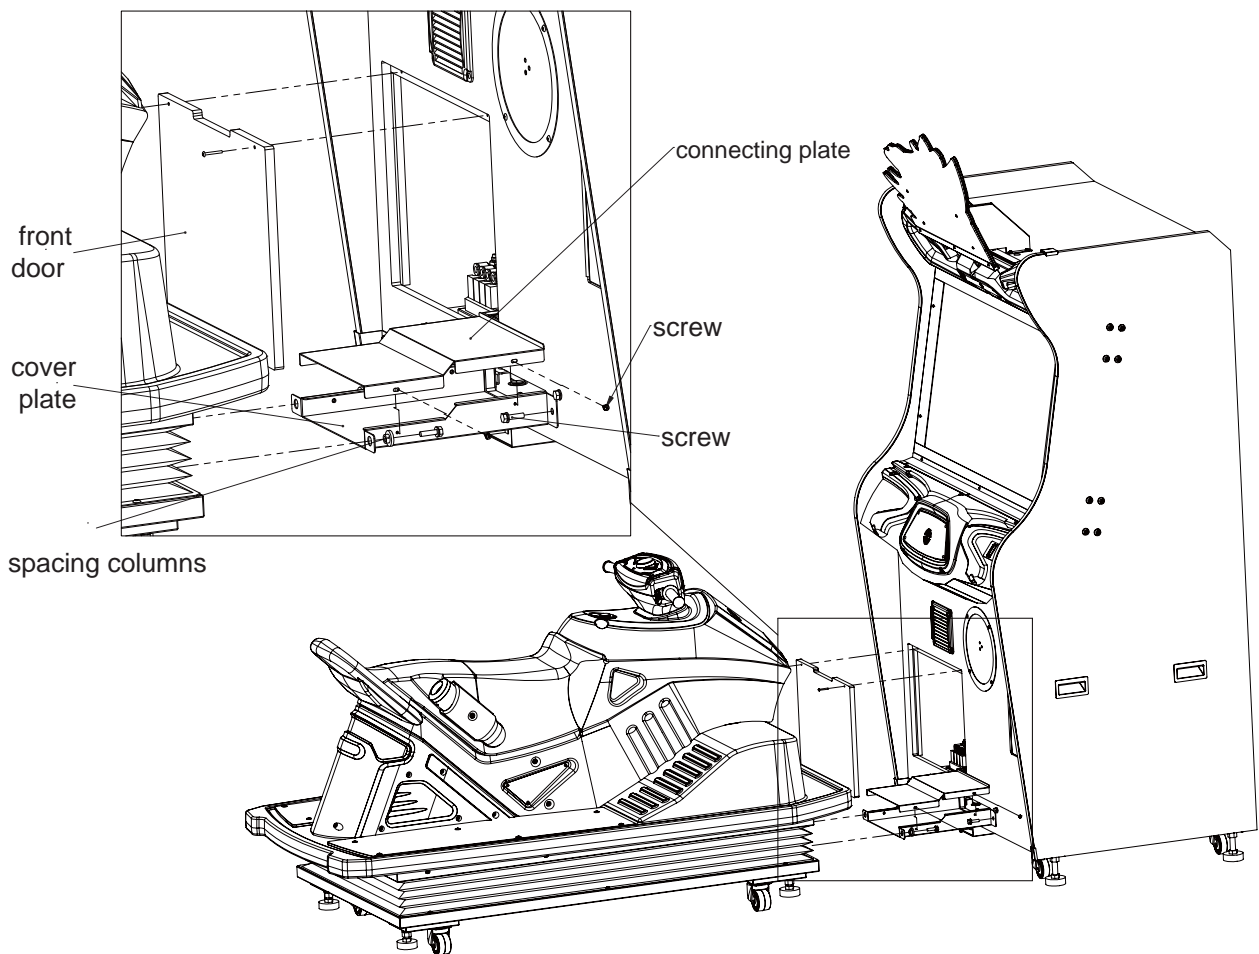

Special attention: When special case occurs in shipment, please check “Installation guide” in attachment box of shipment, and make assembly according to installation guide; special supplement will not be made in this instruction.

2.7 Warranty

■ Scope

- Inquiry regarding product can be assisted for free.
- The warranty scope for consumables and durables may differ from product to product. Please contact our after-sales service center for detailed information. The right of final interpretation is reserved.

■ Exclusive

- Damage caused by force majeure such as god will.
- Failure caused by carelessness, such as water contact, falling down, toppling, knocking.
- Failure caused by disobeying the instructions in this manual.
- Failure caused by operating the machine on inappropriate site.
- Change the original design and configuration for the game without notice.
- Failure to perform regular service and clean.
- Failure to fix the product in line with the manual's requirement.
- Malfunction or part damage caused by electromagnetic interference other electronic equipments generated.

■ Non-warranty Consumables

- Light tube and bulb
- Button lamp and switch
- Fragile items
- Solenoid
- Other spare parts

3. Game Description

3.1 Appearance Design

JET BLASTER is an athletic game related with jet ski. The overall appearance of machine adopts the shape of jet ski, so it is more suitable to game, giving players more real experience in jet ski. The machine adopts a 43-inch high-definition LCD display with red and blue as main colors. The appearance design is gorgeous and colorful. For motor boat as operation part of machine player, ergonomic design is adopted, it is suitable for all types of players. The pedal platform can simulate the effect of water waves realistically; with lengthened seats, players will be more comfortable during the game. With curved seat design, as well as pedals and dynamic platform, players can enjoy an immersive game experience.

3.2 Game introduction


JET BLASTER is an athletic game related with jet ski, where, body shape of jet ski is simulated completely, and effect of wavy water lamp is provided; the large-screen LCD can provide high-definition screen for game operation; with dynamic platform that keeps moving with game scene, player can enjoy real driving experience for jet ski.

3.3 How to play

1. Adopt the operation mode of simulating real jet ski, at the same time, characteristic dynamic system is added;
2. Game play: after inserting coin, press START button to enter selection screen for characters, rowing boat and track, rotate the steering wheel to select left or right, press the START button to start game, and rotate the throttle to play game; accelerometer data is displayed at bottom right of screen; after collecting certain amount of thunderous value, press the acceleration button to start acceleration function of jet ski.
3. Complete safety protection system including emergency stop button is adopted, so safety of players can be guaranteed.

4. Test and Setting

4.1 Description of service panel

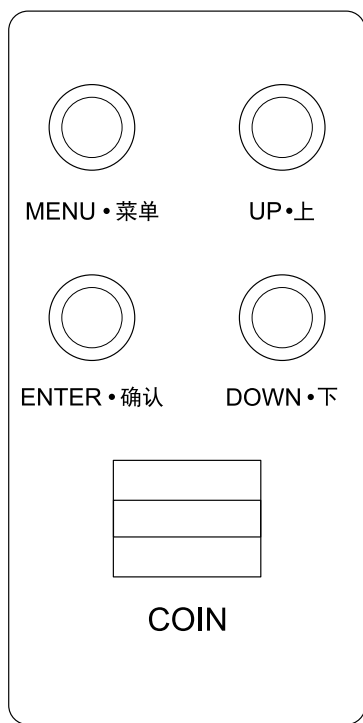

Menu: press this key to enter Arcade operator mode

Confirm: execute item and change setting value in test mode.


Up: select previous item in test mode;

Down: select next item in test mode;

COIN: Coin counter

4.2 Arcade operator


1. In Demo screen, press [Menu] key on service panel in coin door of machine to enter [Arcade operator] as shown in figure below.

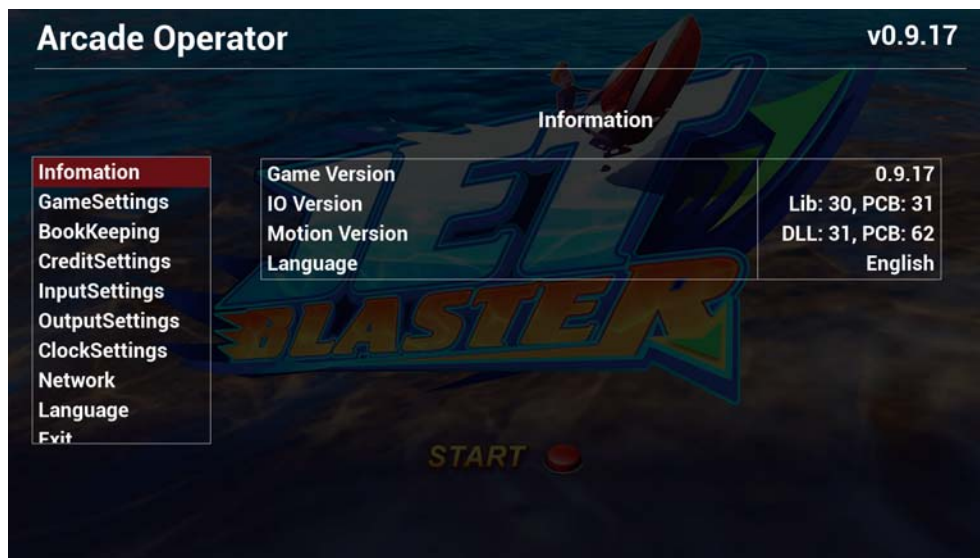

2. After entering the menu, select the menu items by using up/down buttons on service panel or left/right buttons on steering wheel, and press "Confirm" button on service panel or Start button on steering wheel to enter sub-menu.
3. After setting or testing, select [Exit] from main menu, and then press "Confirm" button on service panel or Start button on steering wheel to save all modifications directly, or exit operation interface.


4.2.1 Information

1. In [Arcade operator] > [Information] page, game, I/O, dynamic version and language of machine will be shown, see figure below.

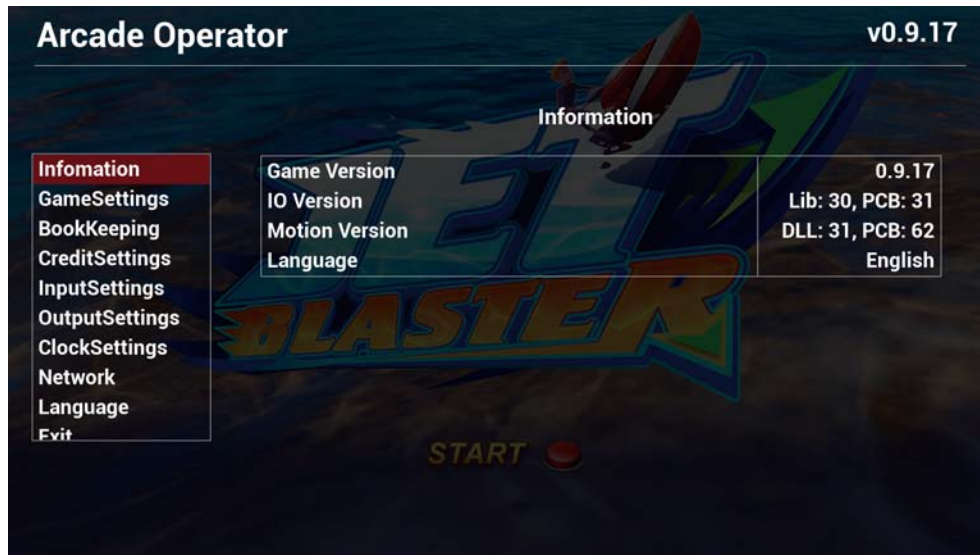


4.2.2 Game settings

1. In [Arcade operator] > [Game settings] page, you can set various parameters corresponding to game, as shown in figure below.

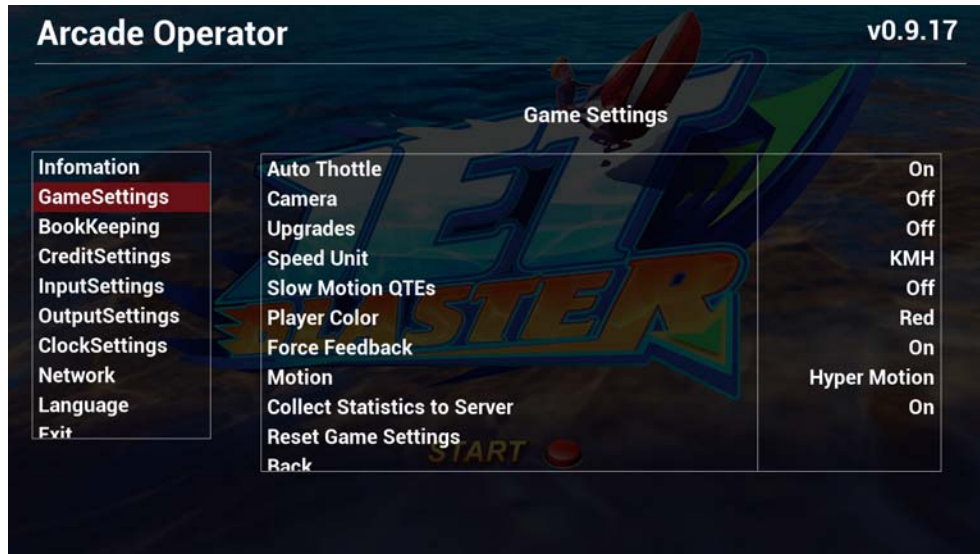


2. Exit after setting.

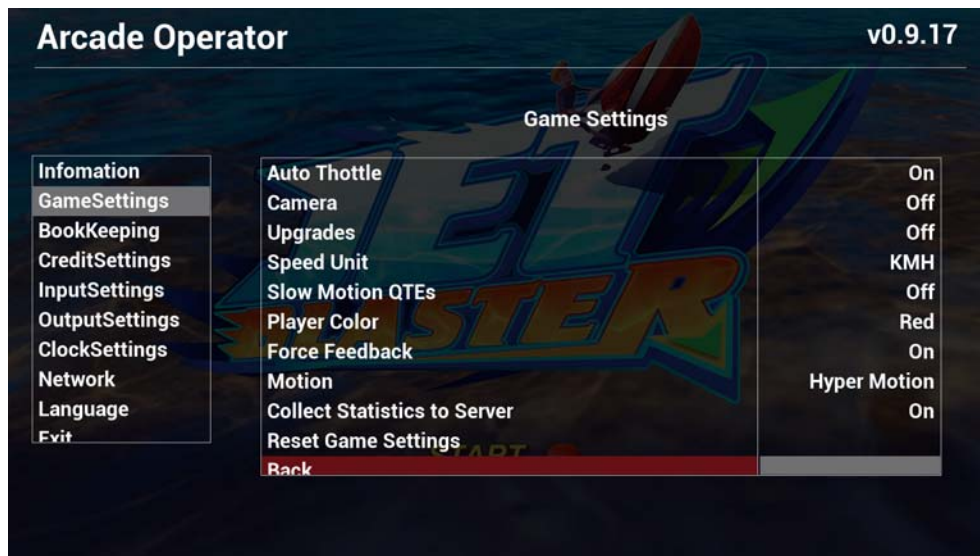

4.2.3 Bookkeeping

In [Arcade operator] > [Bookkeeping] page, relevant revenue records from machine will be displayed, see figure below.


1.General:

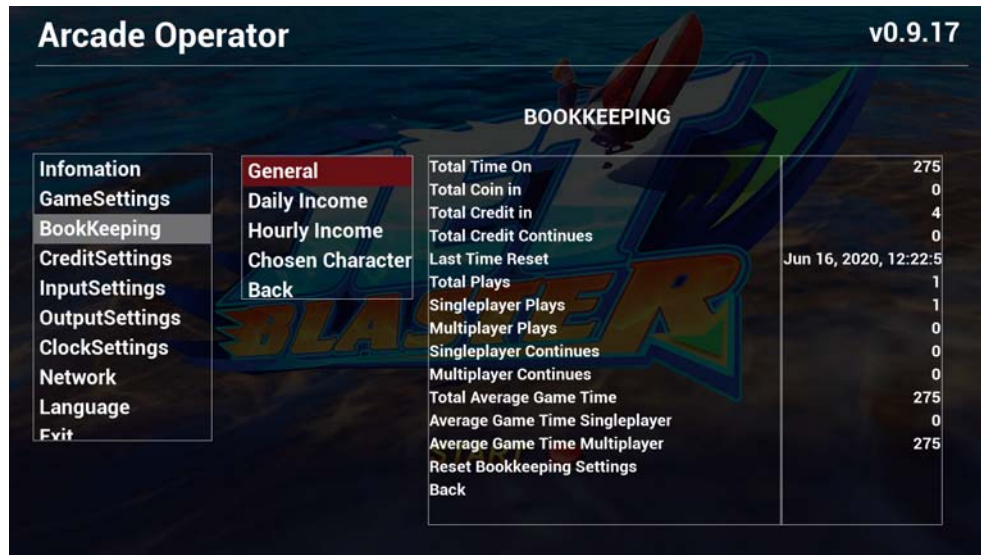

The screenshot shows the 'Arcade Operator v0.9.17' interface. The 'BOOKKEEPING' menu is open, and the 'General' option is selected. The menu items on the left are: Infomation, GameSettings, BookKeeping, CreditSettings, InputSettings, OutputSettings, ClockSettings, Network, Language, and Exit. The 'General' sub-menu items are: General, Daily Income, Hourly Income, Chosen Character, and Back. The main data table is as follows:

Item	Value
Total Time On	275
Total Coin in	0
Total Credit in	4
Total Credit Continues	0
Last Time Reset	Jun 16, 2020, 12:22:5
Total Plays	1
Singleplayer Plays	1
Multiplayer Plays	0
Singleplayer Continues	0
Multiplayer Continues	0
Total Average Game Time	275
Average Game Time Singleplayer	0
Average Game Time Multiplayer	275
Reset Bookkeeping Settings	
Back	

2.Daily Income:

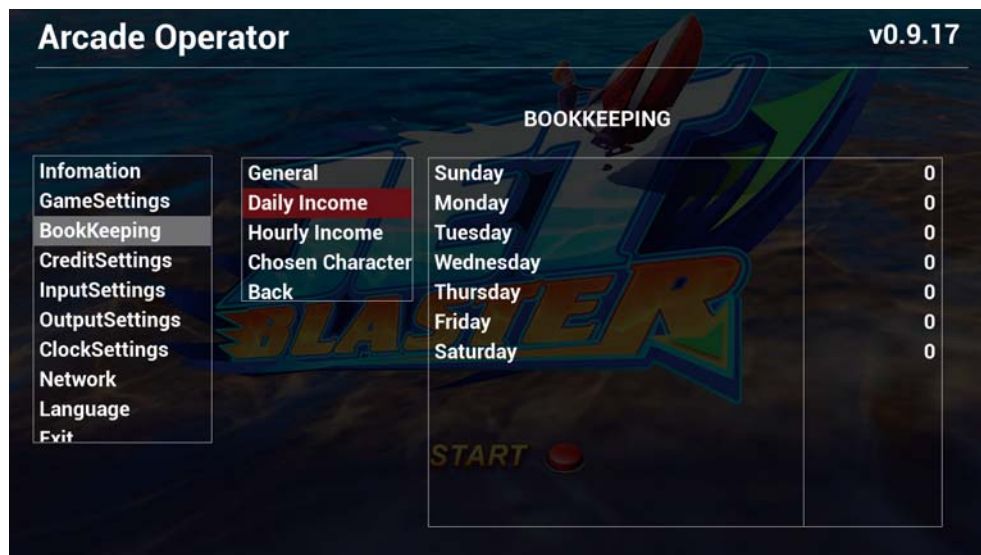

The screenshot shows the 'Arcade Operator v0.9.17' interface. The 'BOOKKEEPING' menu is open, and the 'Daily Income' option is selected. The menu items on the left are: Infomation, GameSettings, BookKeeping, CreditSettings, InputSettings, OutputSettings, ClockSettings, Network, Language, and Exit. The 'Daily Income' sub-menu items are: General, Daily Income, Hourly Income, Chosen Character, and Back. The main data table is as follows:

Day	Value
Sunday	0
Monday	0
Tuesday	0
Wednesday	0
Thursday	0
Friday	0
Saturday	0

A 'START' button with a red circle icon is visible at the bottom of the screen.

3.Hourly Income:

Arcade Operator v0.9.17

BOOKKEEPING

<ul style="list-style-type: none"> Infomation GameSettings BookKeeping CreditSettings InputSettings OutputSettings ClockSettings Network Language Exit 	General	00:00 - 01:00	0	12:00 - 13:00	0
	Daily Income	01:00 - 02:00	0	13:00 - 14:00	0
	Hourly Income	02:00 - 03:00	0	14:00 - 15:00	0
	Chosen Character	03:00 - 04:00	0	15:00 - 16:00	0
	Back	04:00 - 05:00	0	16:00 - 17:00	0
		05:00 - 06:00	0	17:00 - 18:00	0
		06:00 - 07:00	0	18:00 - 19:00	0
		07:00 - 08:00	0	19:00 - 20:00	0
		08:00 - 09:00	0	20:00 - 21:00	0
		09:00 - 10:00	0	21:00 - 22:00	0
		10:00 - 11:00	0	22:00 - 23:00	0
		11:00 - 12:00	0	23:00 - 24:00	0

4.Chosen Character:


Arcade Operator v0.9.17

BOOKKEEPING

<ul style="list-style-type: none"> Infomation GameSettings BookKeeping CreditSettings InputSettings OutputSettings ClockSettings Network Language Exit 	General	Hunter	0
	Daily Income	Gyasi	0
	Hourly Income	Sugar	0
	Chosen Character	Lieut.J	0
	Back	Mila	0


START

5. Back

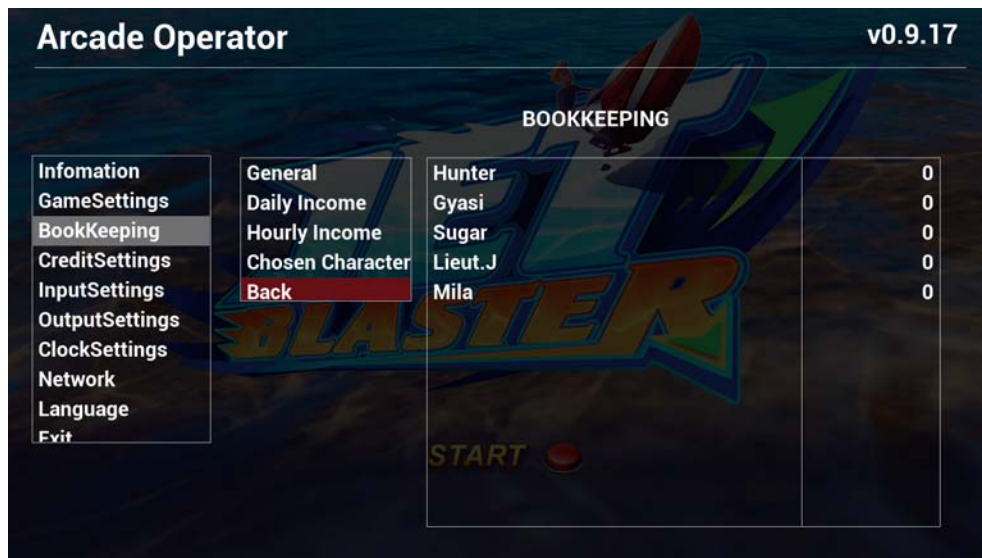

4.2.4 Credit settings


1. In [Arcade operator] > [Credit settings] page, you can set number of coins to be inserted for each game by yourself, as shown in figure below.

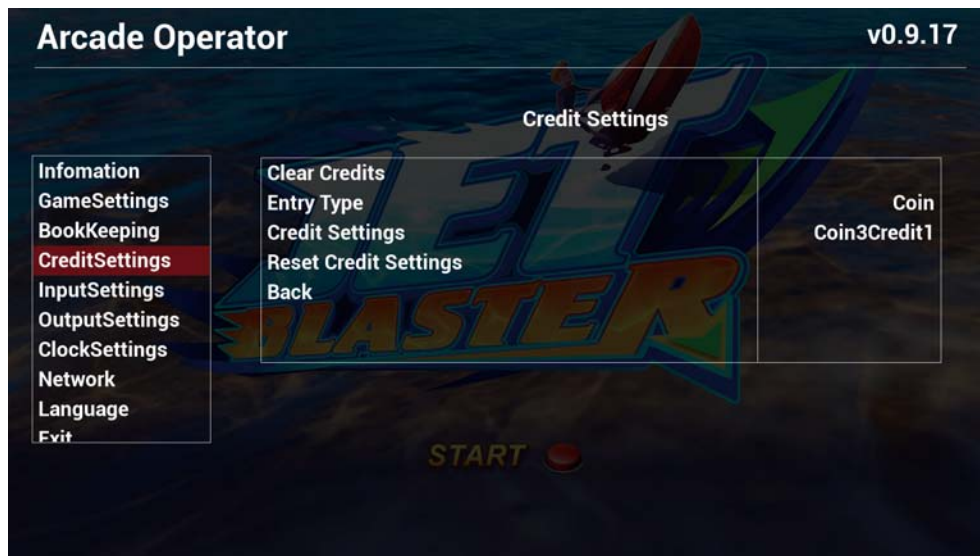


4.2.5 Input Settings

In the [Arcade operator] > [Input Settings] page, you can operate according to prompts on screen, and make input settings for various functions of system, as shown in figure below.

1. Steering & pedal range;
 - a. Keep the steering wheel in the center of steering wheel, release pedal, and wait for 3 seconds;

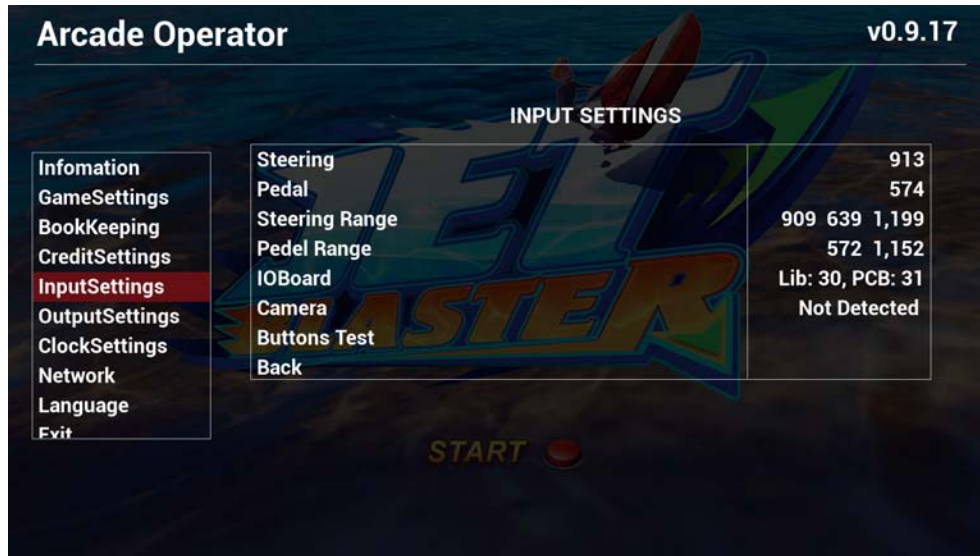

- b. Turn the steering wheel to left most, and wait for 3 seconds;

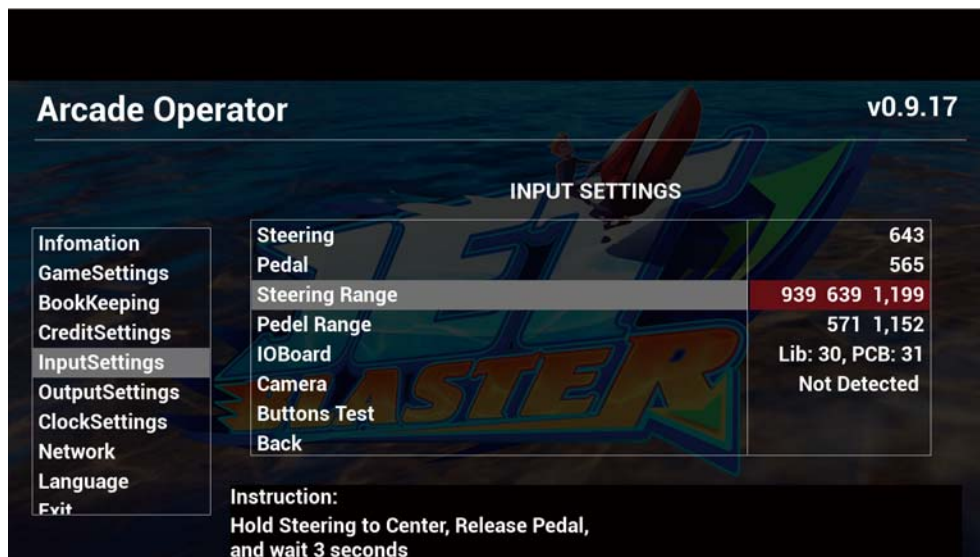

c. Turn the steering wheel to right most, and wait for 3 seconds;

Arcade Operator v0.9.17

INPUT SETTINGS

Steering	647
Pedal	575
Steering Range	909 639 1,199
Pedel Range	572 1,152
IOBoard	Lib: 30, PCB: 31
Camera	Not Detected
Buttons Test	
Back	

Instruction:
Hold Steering to Center, Release Pedal,
and wait 3 seconds

d. Pedal, release pedal, and wait for 3 seconds;

Arcade Operator v0.9.17


INPUT SETTINGS

Steering	1,124
Pedal	1,164
Steering Range	895 638 1,197
Pedel Range	571 1,152
IOBoard	Lib: 30, PCB: 31
Camera	Not Detected
Buttons Test	
Back	


Instruction:
Release Pedal and wait 3 seconds

Press 'START' to back

e. Hold pedal, and wait for 3 seconds;

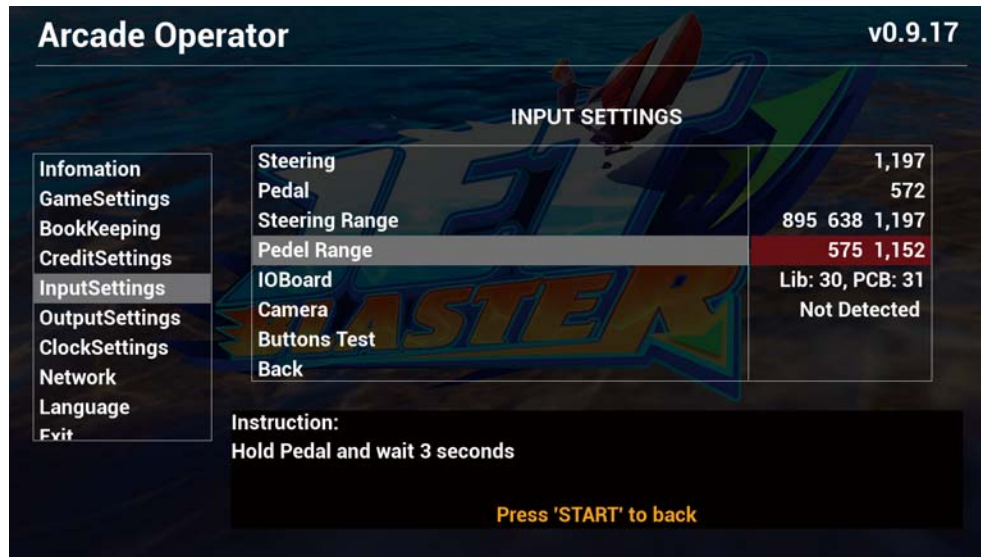

2. Key test: test each input switch, ON/OFF;

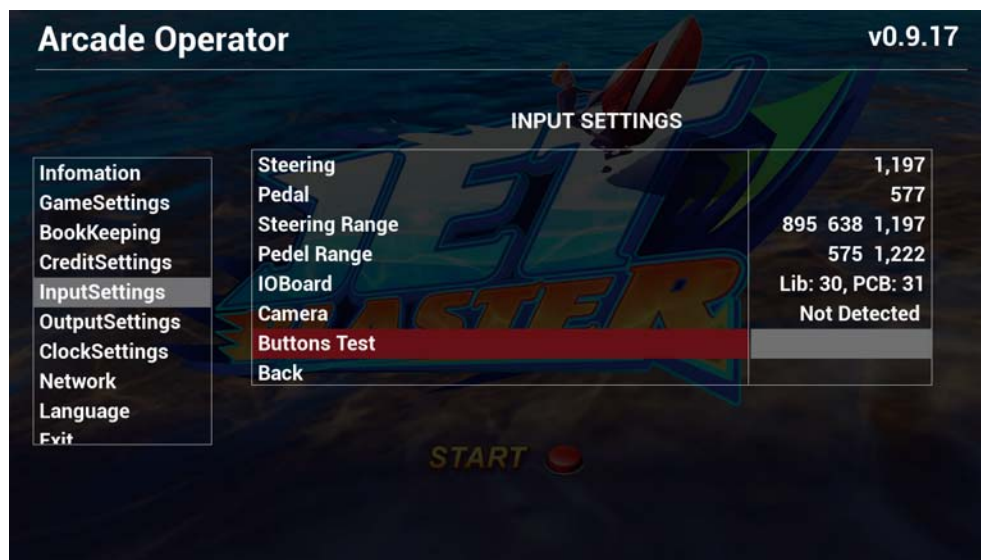

4.2.6 Output settings

In [Arcade operator] > [Output settings] page, you can make output settings for various functions of system, as shown in figure below.



- Main volume: adjustment range within 0 to 100.
- Idle/promotion volume: adjustment range within 0 to 100.
- Sound setting: cycle test in sequence of Off → Left → Right → Bass.
- Light test: cycle test for white light in sequence of Off → Upper LED (not used) → Lower LED → Left LED → Right LED → Bottom LED → Round LED → Left button → Middle button → Right button → Stop button.
- Screen test: cycle test in sequence of Gray scale → Color scale → Grid.
- Fan test: cycle test in sequence of Off and On.
- Dynamic test: carry out air inflating/discharging cycle test in sequence of Off → Left front → Right front → Left rear → Right rear.
- Dynamic equipment: DLL:31, PCB:62
- Return: Exit and return to main menu.

4.2.7 Clock settings

In [Arcade operator] > [Clock settings] page, you can set system date/time as shown in figure below.



4.2.8 Network

In [Arcade operator] > [Network] page, you can make network settings as shown in figure below.



- A. the network group ID should be set to the same number when the machine is connected;
- B. The machine can be connected with up to four connections.

4.2.9 Language

In [Arcade operator] > [Language] page, you can set the machine language: Chinese or English as shown in figure below



4.2.10 Exit

In [Arcade operator] > [Exit] page, you can return to Game interface

5. Maintenance and Service

5.1 Maintenance and service

Even though the machine works normally for a long time, the fault will occur. Therefore, please perform routine check and maintenance concerning the following to ensure a long-term use.

■ External Inspection

- Stick “Warning” stickers correctly, keep it legible.
- Firmly tighten the bolt for each adjuster.
- Tighten screws for speaker assembly.
- Tighten the signboard firmly.
- Check if the screws fixing the parts loose.
- Check if the connectors loose or missing.

■ Operation Inspection (With power on)

- Sound is normally emitted from the speakers or not.
- Fluorescent lamps and LED and button lamps light up or not
- Coin acceptor works properly or not.
- Lifting and falling devices work properly or not.
- YZ sensor works properly or not.

After completing all the checks, operate the game again and check the above items with full care!


■ Servicing (conducted by a technician only)

- Cut off the main power supply to avoid injury or electric shock when performing maintenance.
- Please contact our service center when performing any work that is not specified in this Manual, and follow the instruction provided by the service center.
- For consumables and spare parts (including screws), please use products specified by Wahlap Technology.
- Even though the main power is cut off, there is still high temperature and high pressure in the power board and the monitor. The person will be burnt or get an electric shock if he touches such parts. Please pay full attention to avoid contact.
- Be sure to cut off the main power when you alter a spare part or unplug a connector.


5.2 Part Replacement

5.2.1 Replacement of coin box

1. Open the coin door with the key, and rotate to position shown in figure 2;
2. Loosen the fixing buckle for coin channel, remove coin box after removing wires;
3. Replace coin box, and install in reverse order.

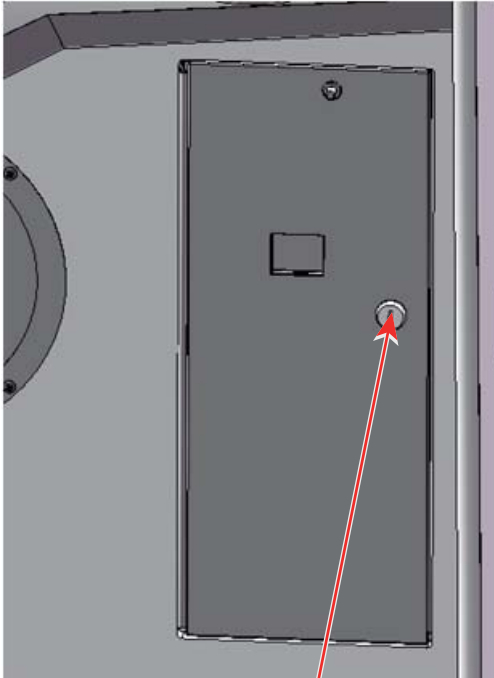


coin door

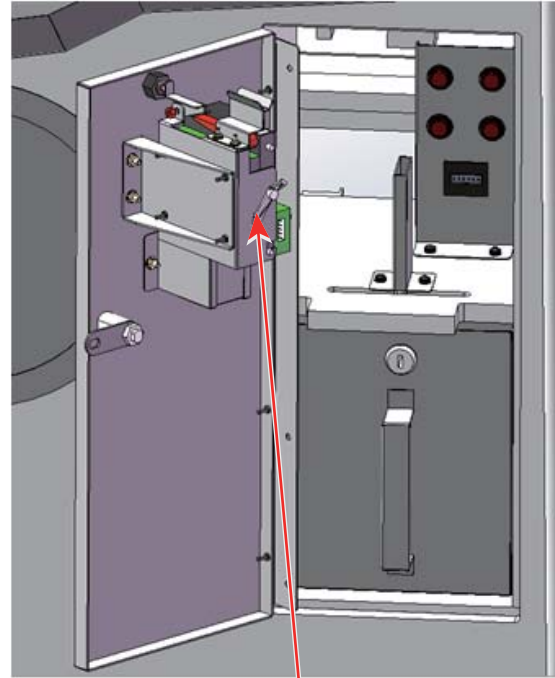

fixing buckle for coin


5.2.2 Replacement of woofer

1. Remove four screws fixing speaker cover, and remove speaker cover;
2. Remove four fixing screws for woofer, and remove speaker (pay attention to remove wires).
3. Replace speaker, and install in reverse order.

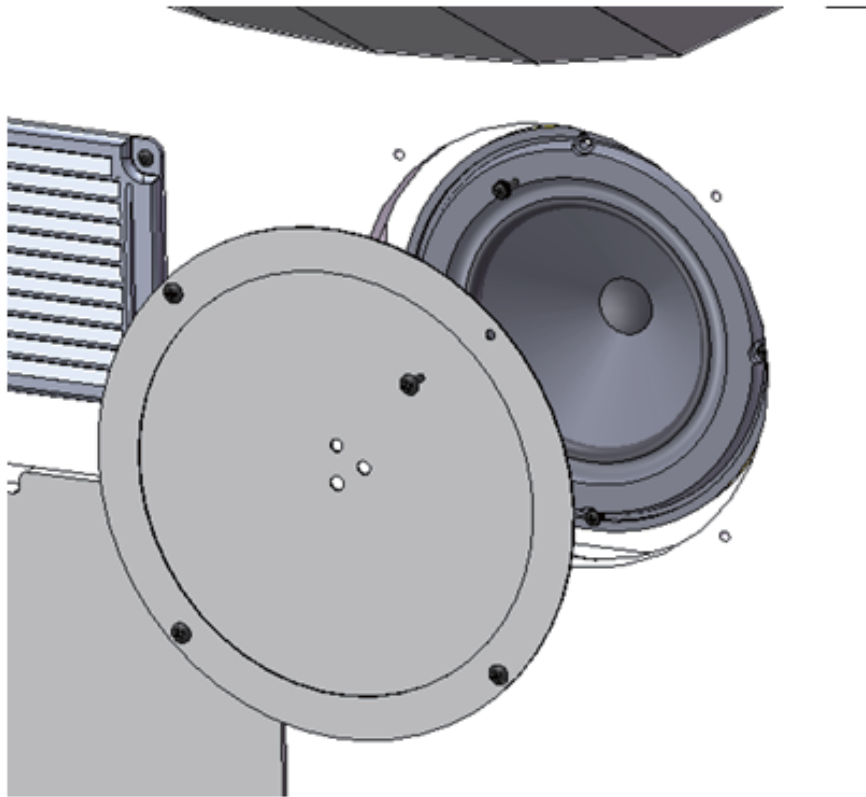

5.2.3 Replacement of fluid control valve

1. Remove wooden door after removing screws;
2. After removing screws for fixing fluid control valve assembly, remove fluid control valve.
3. Remove fluid control valve, replace it with new one, and install in reverse order .

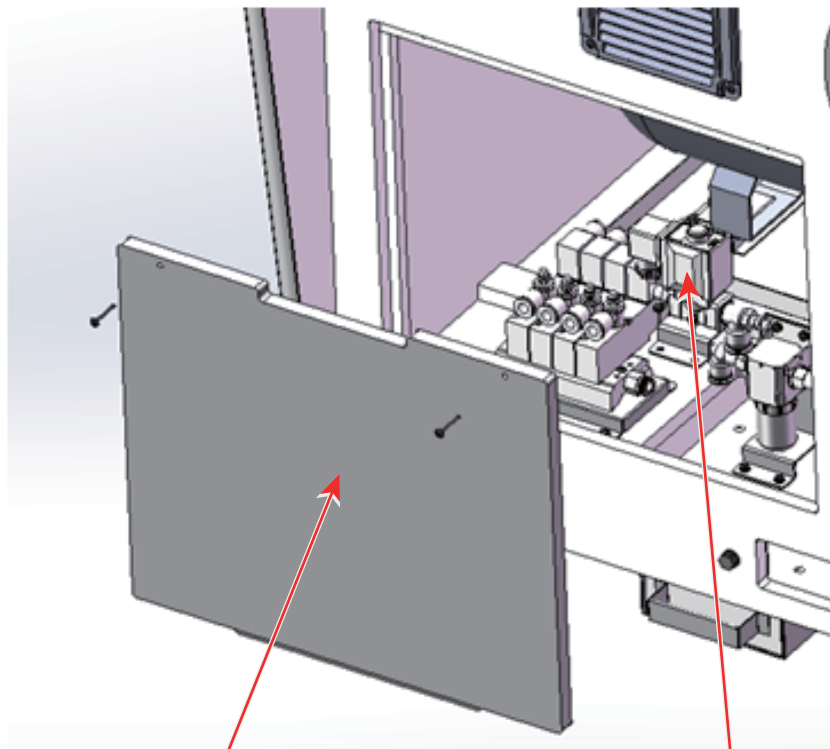


wooden door

fluid control valve



5.2.4 Replacement of filter

1. Remove wooden door after removing screws;
2. After removing screws for fixing filter assembly, remove filter assembly;
3. Remove filter, replace it with new one, and install in reverse order

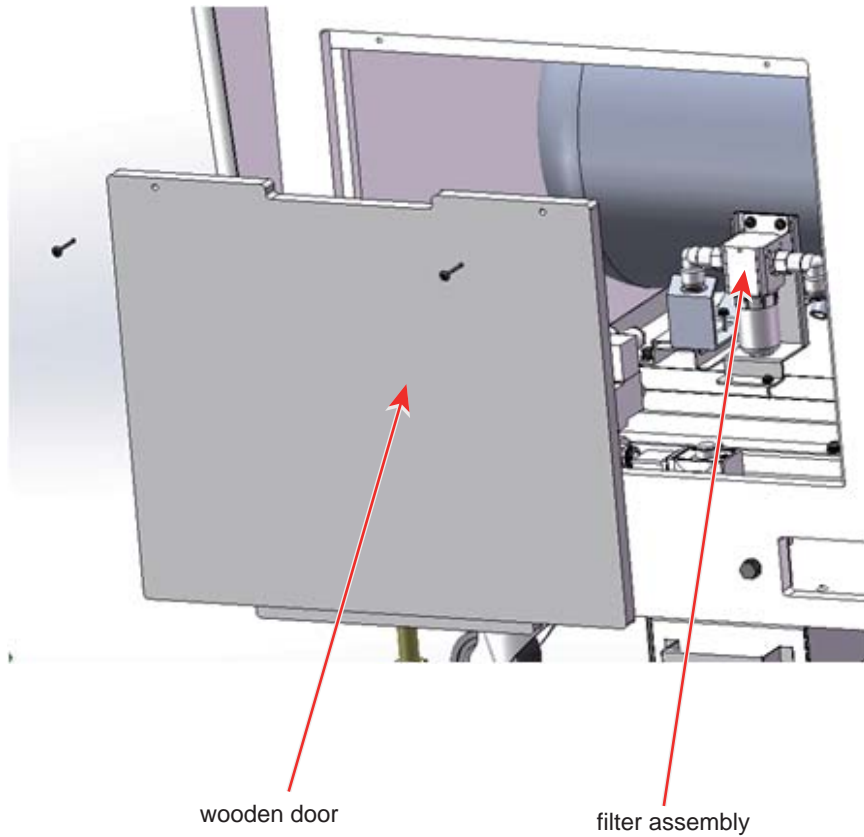


5.2.5 Replacement of LCD

1. Remove upper rear door, loosen four screws for fixing LCD assembly (note: it is loosened only, but not removed);
2. Remove mound layer and glass frame assembly in front of LCD;
3. Push LED upward, and then remove LCD assembly;
4. Remove LED, replace it with new one, and install in reverse order.

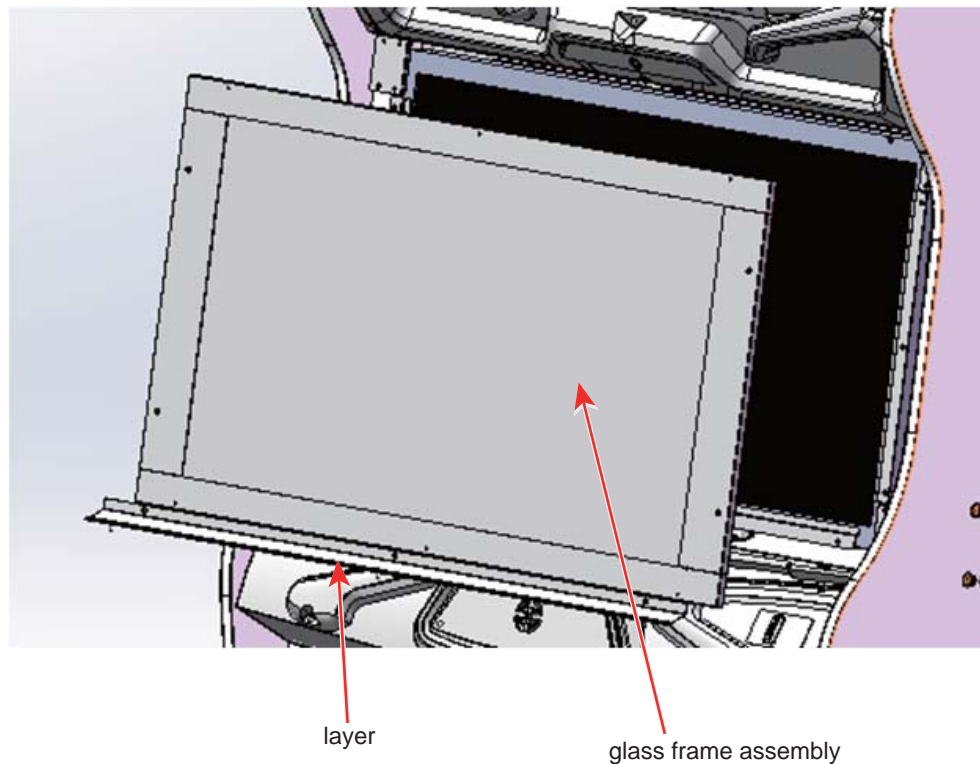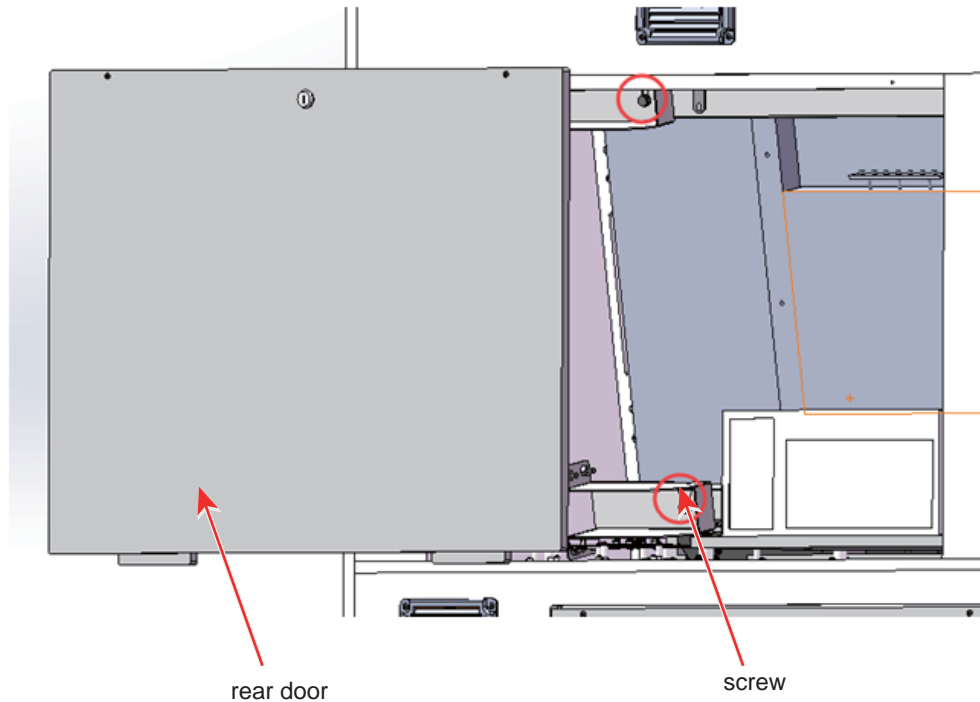


5.2.6 Replacement of air blower

1. Remove mound layer;
2. Push plastic assembly of console upward, and remove it;
3. Remove air blower assembly;
4. Remove air blower, replace it with new one, and install in reverse order.

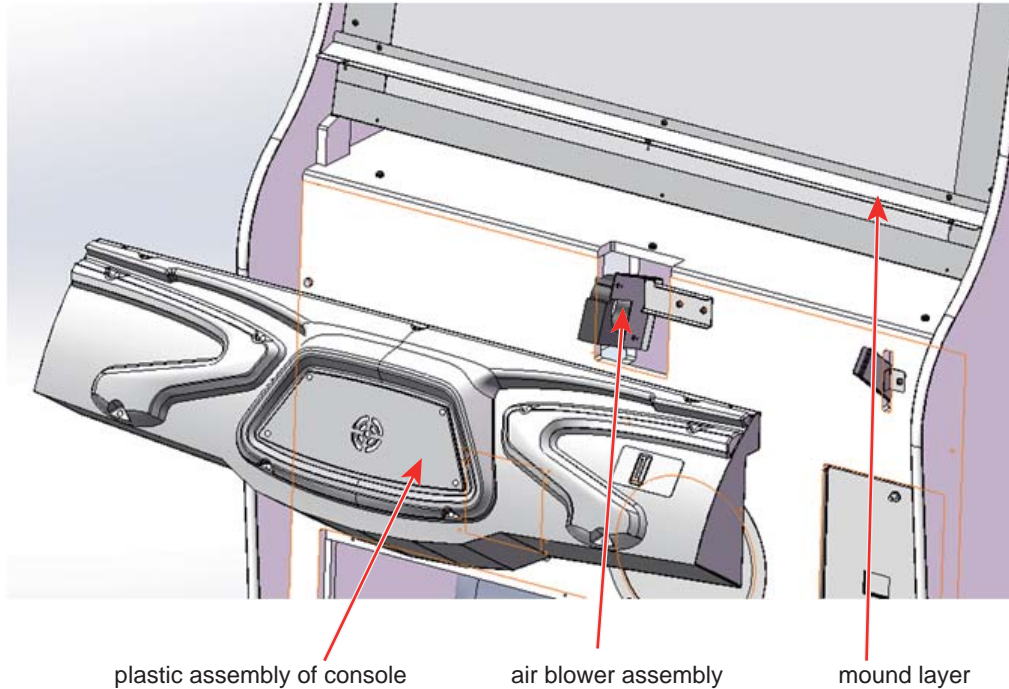


5.2.7 Replacement of light box and light strip

1. Remove the fixing iron for lamp strip;
2. Remove lamp strip, replace it with new one, and install in reverse order.

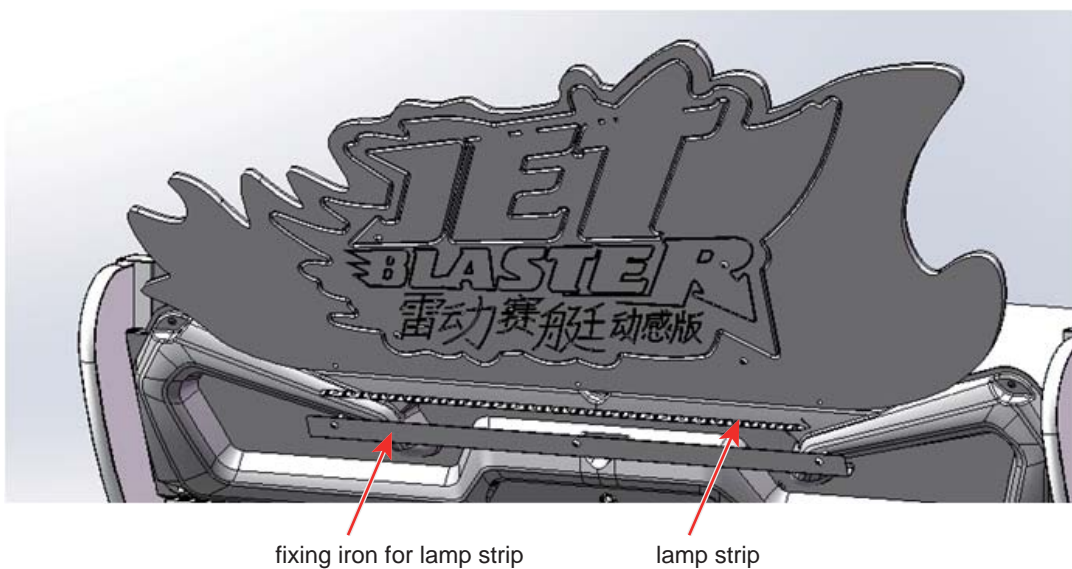


5.2.8 Replacement of button (inching)

1. Loosen screws, and remove button panel components (note: remove wire plug)
2. Replace button (inching);
3. Install in reverse order.

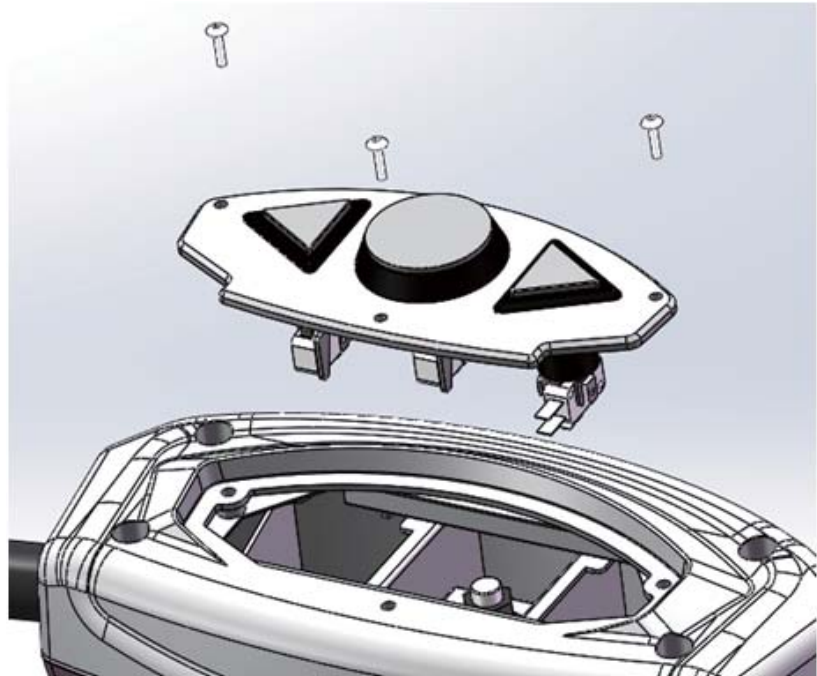

5.2.9 Replacement of pedal light strips at two sides of body

1. Loosen screws, and remove pedal acryl on both sides;
2. Remove lamp strip;
3. Replace it with new one, and install in reverse order.

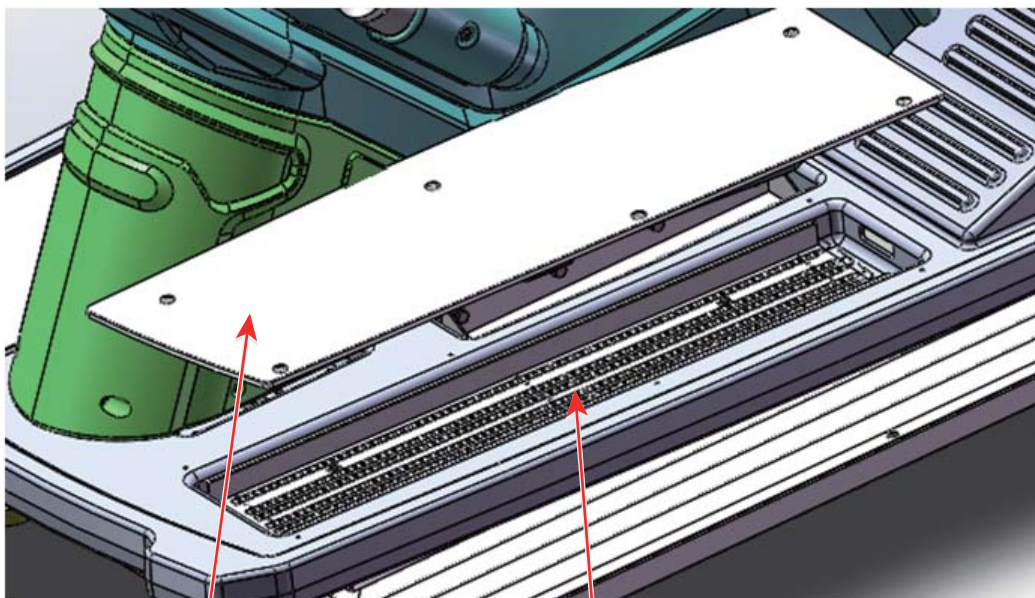


Lamp band fixing iron

lamp strip


5.2.10 Replacement of light panel for exhaust pipe

1. Remove two tapping screws, and remove the lamp plate assembly;
2. Loosen two screws, and remove the lamp plate;
3. Install in reverse order after replacement

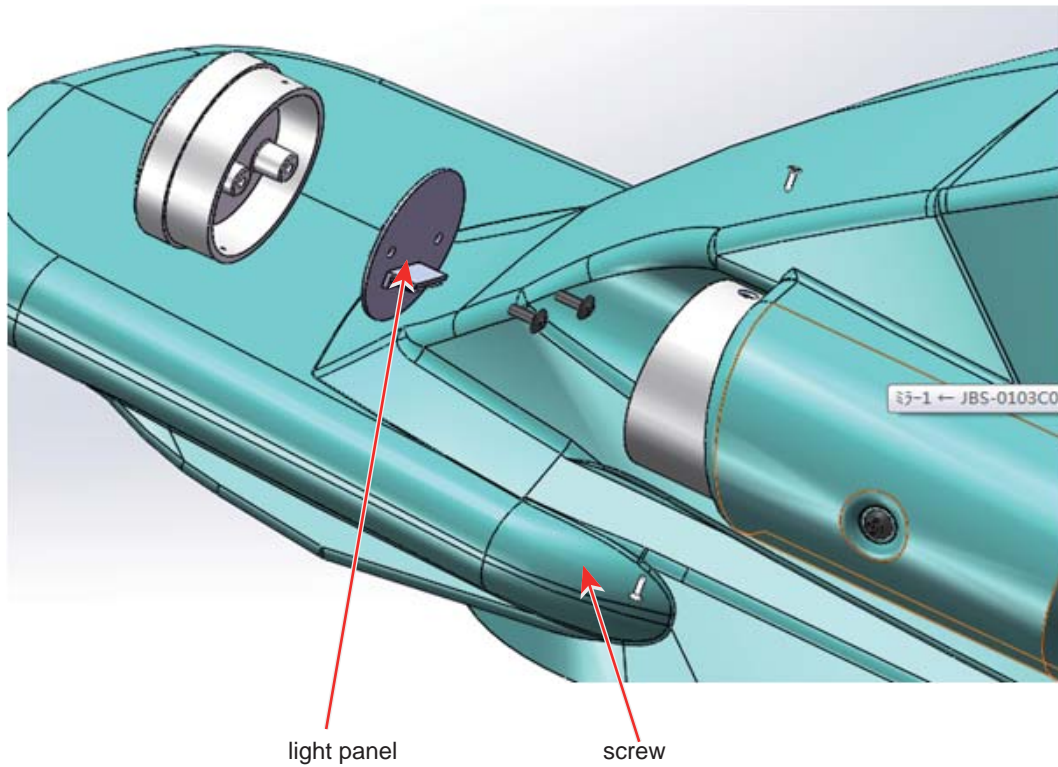


6. Assembly

6.1 Assembly tree diagram

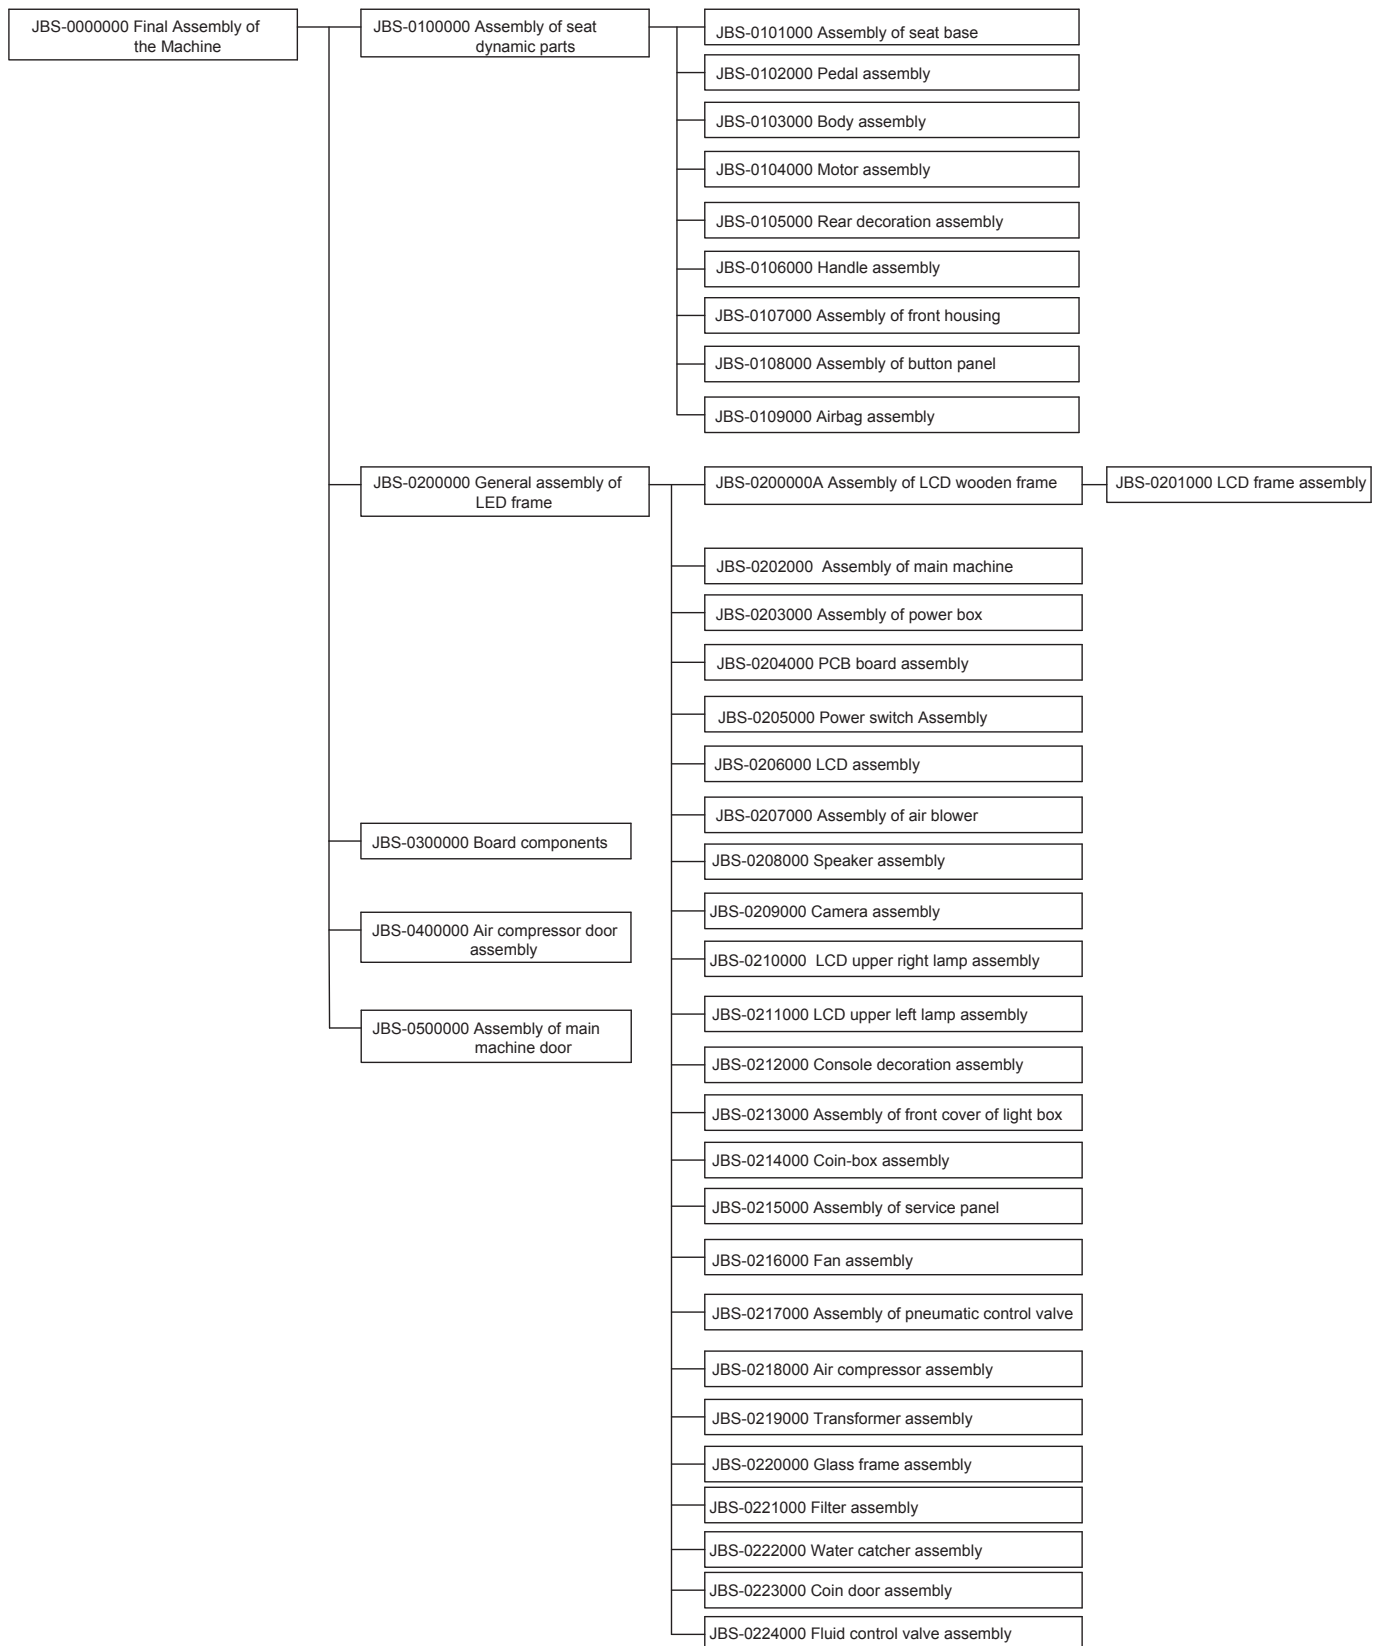


6.2 Final Assembly of the Machine(JBS-0000000)

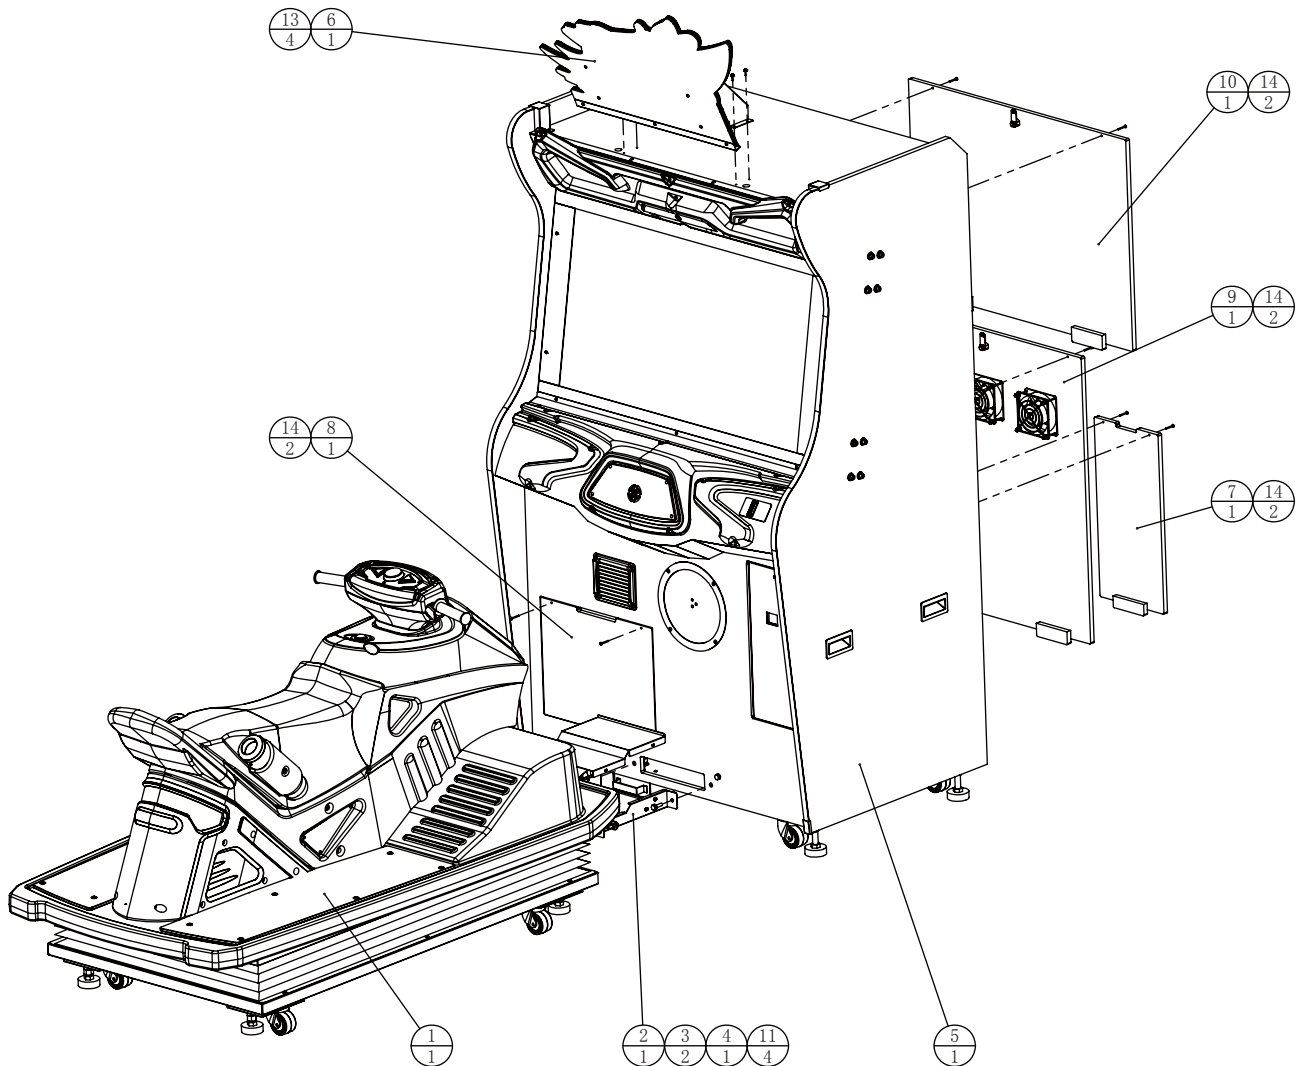


14		cross the big flat head screw	M4*30 (black)	8	
13		cross recessed fillister head three-combination screw	M4*16 (black)	4	
12		cross recessed fillister head three-combination screw	M4*12 (black)	4	
11		Hexagon triple combination	8*30*16*1.5(black)	4	
10	JBS-0500000	Assembly of main machine door		1	
9	JBS-0400000	Air compressor door assembly		1	
8	JBS-0000B02	front door glass	MDF-15.0T	1	1.2.WA32A00020
7	JBS-0000B01	Power door	MDF-15.0T	1	1.2.WA32A00010
6	JBS-0300000	Board components		1	
5	JBS-0200000	General assembly of LED frame		1	
4	JBS-0000A02	Connecting cover plate	SPCC-1.2T	1	1.1.WA32A00020
3	HVR-0000C02	Separation column	black POM	2	1.8.IG32A070
2	JBS-0000A01	junction plate	SPCC-1.5T	1	1.1.WA32A00010
1	JBS-0100000	Assembly of seat dynamic parts		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3 Assembly of seat dynamic parts(JBS-0100000)

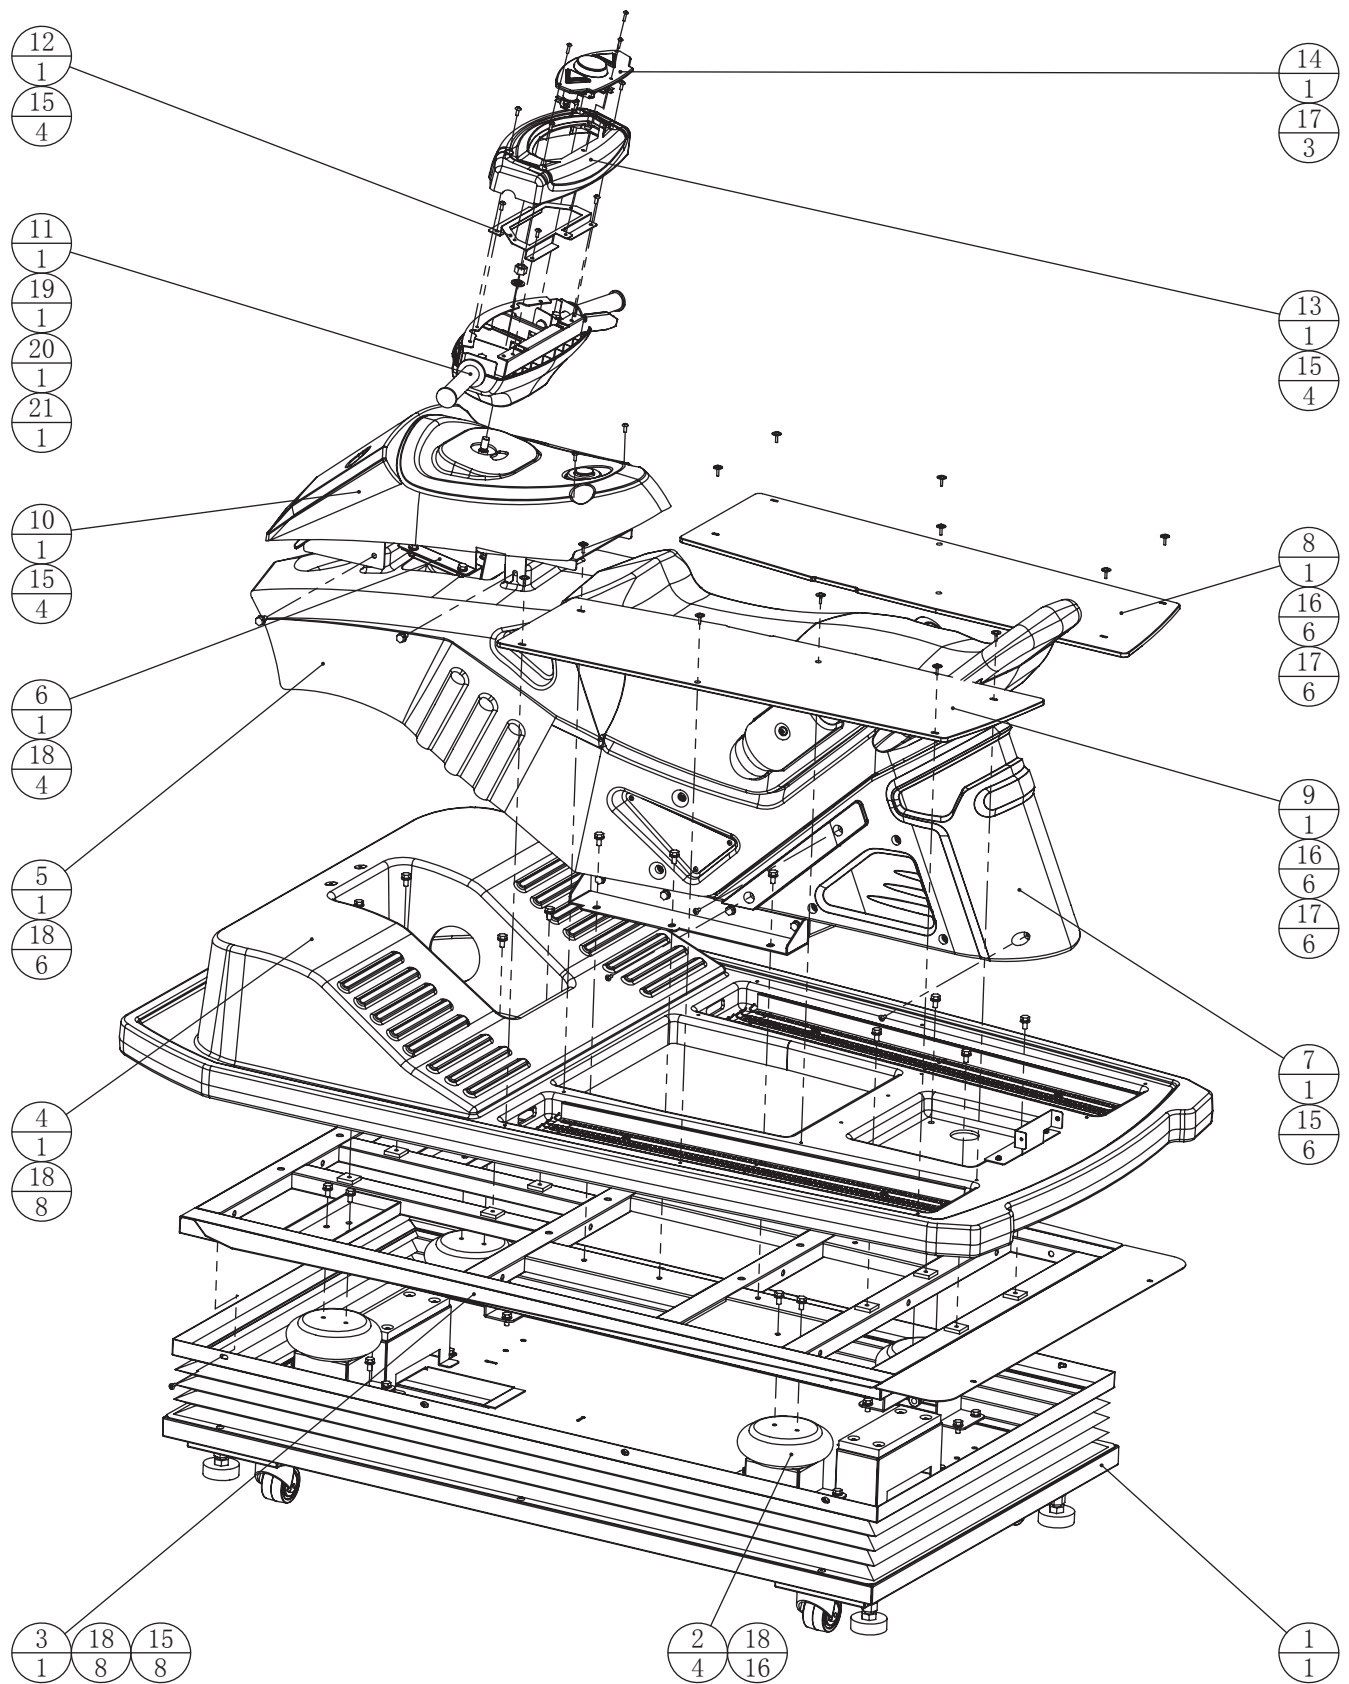


21		hexagon nut	M12 (black)	1	
20		spring washer	M12 (black)	1	
19		plain washers	φ12*φ23*2.0 (black)	1	
18		Hexagon triple combination	8*16*16*1.5(black)	42	
17		hex socket cap screws	M4*16 (chrome)	15	
16		plain washers	φ4*φ16*1.0 (chrome)	12	
15		cross the big flat head screw	M5*12 (black)	26	
14	JBS-0108000	Assembly of button panel		1	
13	JBS-0100C01	Steering wheel upper cover	ABS	1	1.8.WA32A00010
12	JBS-0100A02	Key support plate	SPCC-1.2T	1	1.1.WA32A00040
11	JBS-0106000	Handle assembly		1	
10	JBS-0107000	Assembly of front housing		1	
9	JBS-P0003	Left pedal	PC-8.0T	1	1.7.WA32A00060
8	JBS-P0004	Right pedal	PC-8.0T	1	1.7.WA32A00070
7	JBS-0105000	Rear decoration assembly		1	
6	JBS-0104000	Motor assembly		1	
5	JBS-0103000	Body assembly		1	
4	JBS-0102000	Pedal assembly		1	
3	JBS-0100A01	Dynamic platform		1	
2	JBS-0109000	Airbag assembly		4	
1	JBS-0101000	Assembly of seat base		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.1 Assembly of seat base(JBS-0101000)

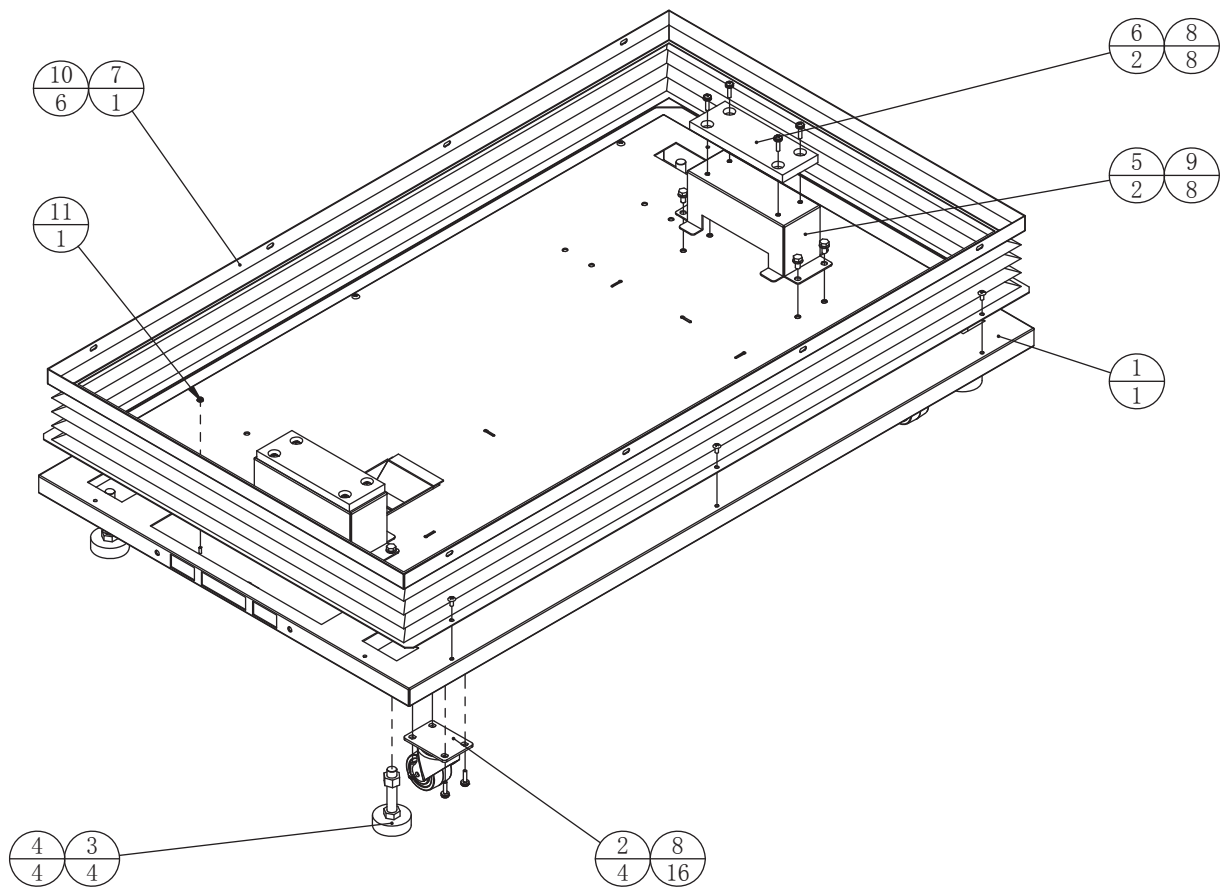


11		hex head cap screw	M4 (colour)	1	
10		cross the big flat head screw	M6*12 (black)	6	
9		Hexagon triple combination	8*16*16*1.5(black)	8	
8		cross recessed fillister head three-combination screw	M6*25 (black)	24	
7	JBS-0101A03	dust cover		1	
6	HXD-0201C01	Limit rubber	Swing axle pads	2	1.8.IG19G090
5	JBS-0101A02	Limit seat	SPCC-2.0T	2	1.1.WA32A00060
4		hexagon nut	M16 (colour)	4	
3		anchor bolt (rubber buttom)	M16*100(colour)	4	
2		casters	2.5 inch low center of gravity type	4	1.4.JL302520
1	JBS-0101A01	seat pedestal		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.2 Pedal assembly(JBS-0102000)

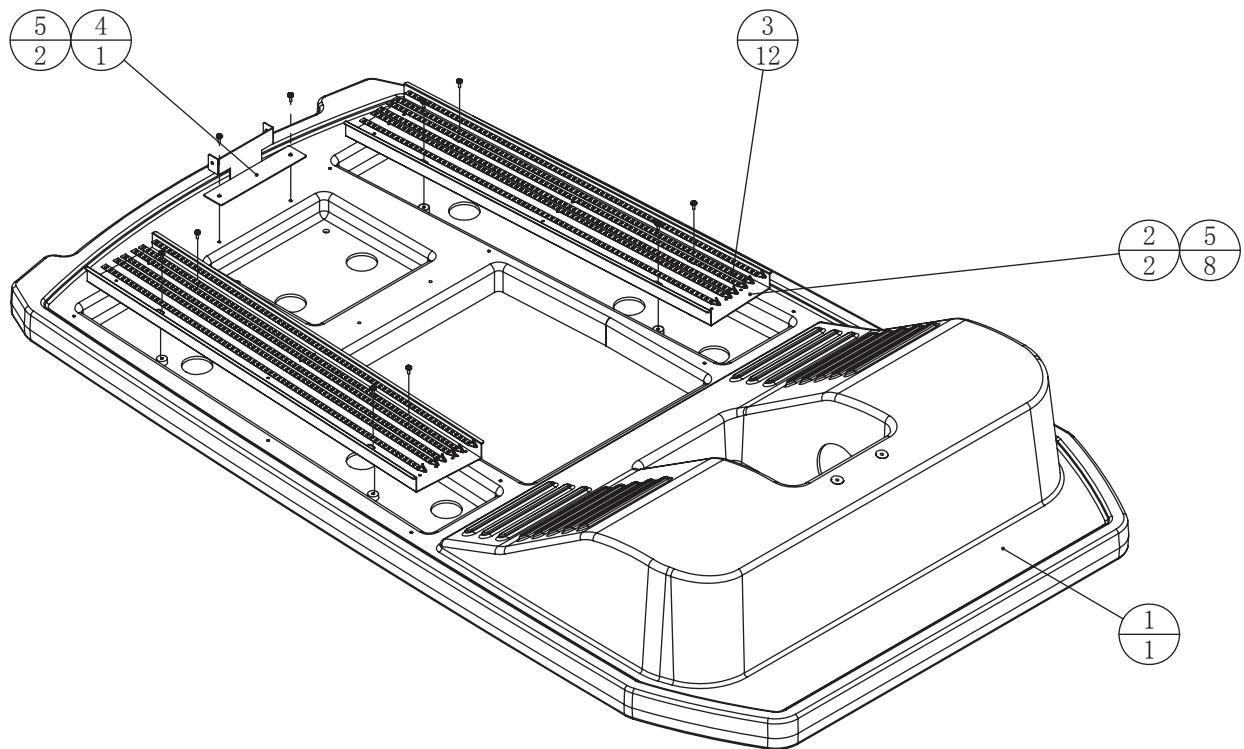


5		cross recessed fillister head three-combination screw	M4*12 (black)	10	
4	JBS-0102A02	Tail fixing plate	SPCC-1.5T	1	1.1.WA32A00090
3		5050 strip light	SK6812	12	1.4.ZM9E1410
2	JBS-0102A01	Pedal lamp fixing plate	SPCC-1.2T	2	1.1.WA32A00080
1	JBS-0102C01	pedal	LDPE	1	1.8.WA32A00020
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.3 Body assembly(JBS-0103000)

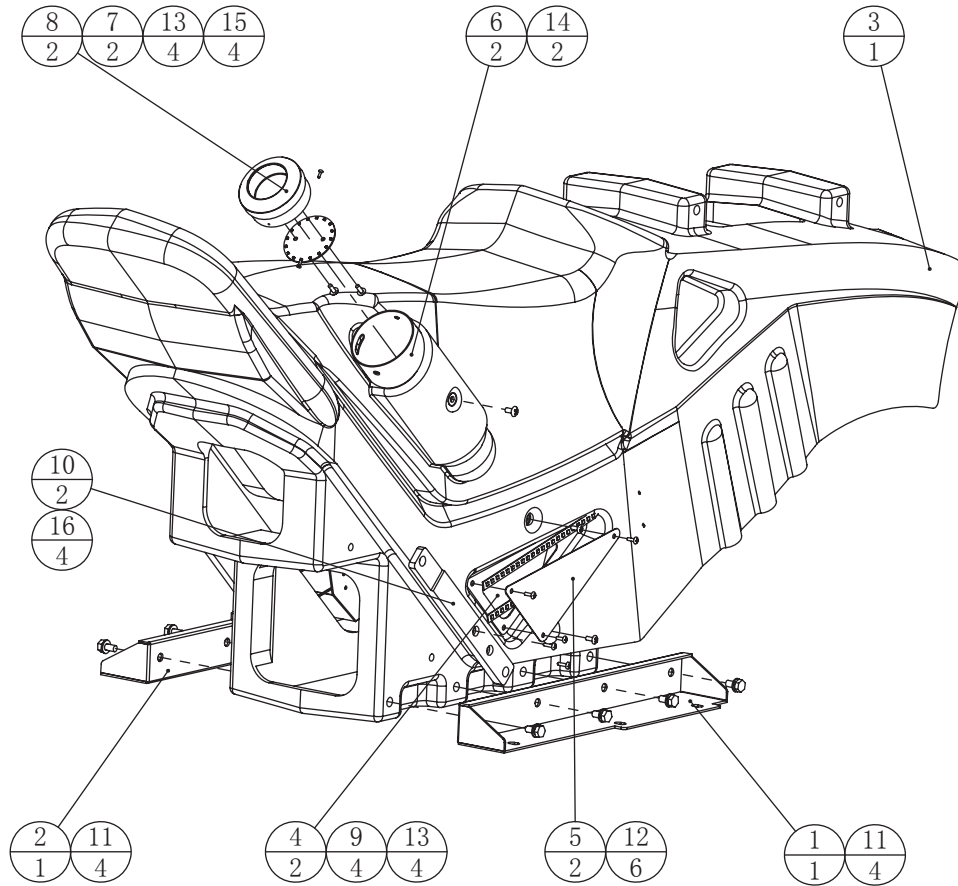


16		cross the big flat head self-drilling screw	M4*16 (black)	4	
15		countersunk head tapping screws	M3*10 (chrome)	4	
14		cross the big flat head screw	M6*12 (black)	2	
13		cross the big flat head screw	M5*12 (black)	8	
12		cross the big flat head screw	M4*12 (black)	6	
11		Hexagon triple combination	8*16*16*1.5(black)	8	
10	JBS-0103B01	Body base plate	MDF-12.0T	2	1.2.WA32A00030
9		5050 strip light	DC12V red 60 light L=200mm	4	1.4.ZM9E0058
8	SB2-0103D02	the exhaust pipe cover	PMMA	2	1.8.PM03A170
7		exhaust pipe led board	WL_PCB1_0001_0029	2	1.4.IC901710
6	JBS-0103A05	exhaust pipe	exhaust pipe	2	1.1.WA32A00140
5	JBS-0103A04	Body light net	Body light net-1.0T	2	1.1.WA32A00130
4	JBS-0103A03	LED light box for vehicle body	SPCC-1.2T	2	1.1.WA32A00120
3	JBS-0103C01	body	black LDPE	1	1.8.WA32A00030
2	JBS-0103A02	Left body mount	SPCC-2.5T	1	1.1.WA32A00110
1	JBS-0103A01	Right body mount	SPCC-2.5T	1	1.1.WA32A00100
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.4 Motor assembly(JBS-0104000)

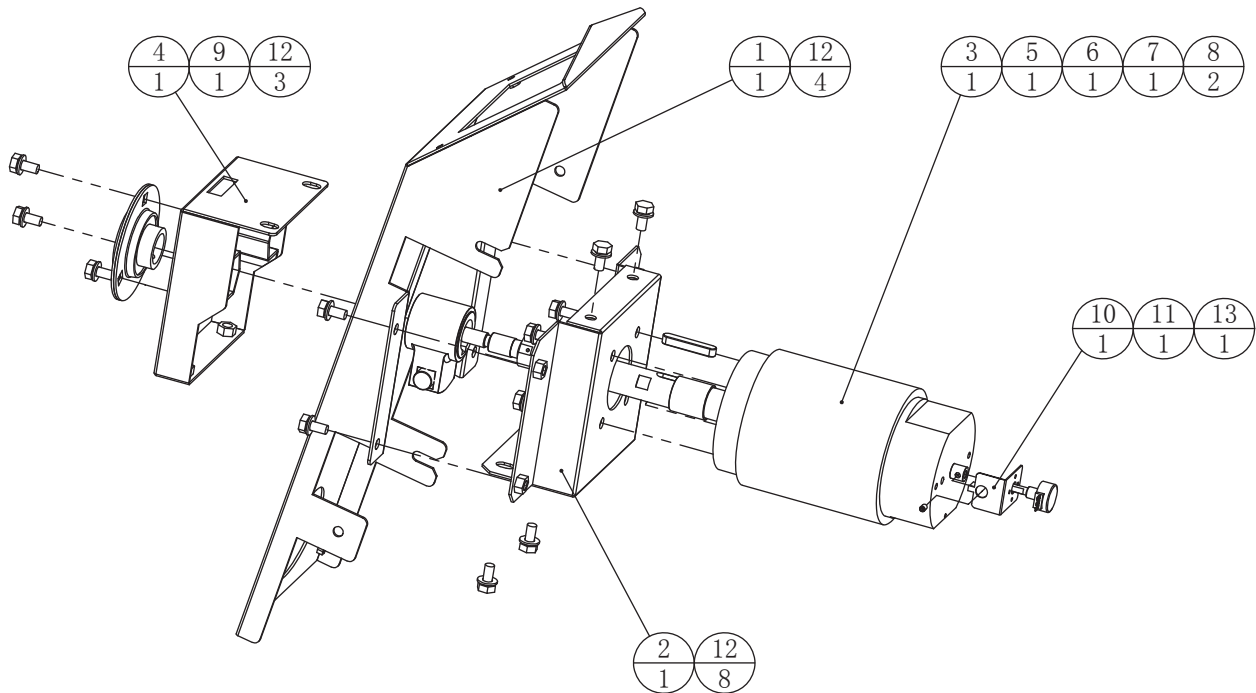


13		headless hex socket screw	M5*6 (black)	1	
12		Hexagon triple combination	8*16*16*1.5(black)	15	
11		potentiometer	B-5KΩ 270	1	1.4.VR150220#
10	SR1-0501A07	potentiometer mounted plate	SPCC-1.0	1	1.1.WA10A00280
9		bearing	PF205	1	1.4.ZC001010
8	SR1-0501A05	Swing axle pads	Swing axle pads	2	1.1.WA10A00260
7	SR1-0501A04	motor swing axle	45	1	1.1.WA10A00250
6	SR1-0501A03	Swing axle key	45	1	1.1.WA10A00240
5	SR1-0501A02	motor shaft case	45	1	1.1.WA10A00230
4	JBS-0104A03	motor cover plate		1	1.1.WA32A00170
3		dc motors	112ZY100-40	1	1.4.MD100022
2	JBS-0104A02	motor fixed plate	SPCC-2.0T	1	1.1.WA32A00160
1	JBS-0104A01	Steering group fixing frame	SPCC-2.0T	1	1.1.WA32A00150
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.5 Rear decoration assembly(JBS-0105000)

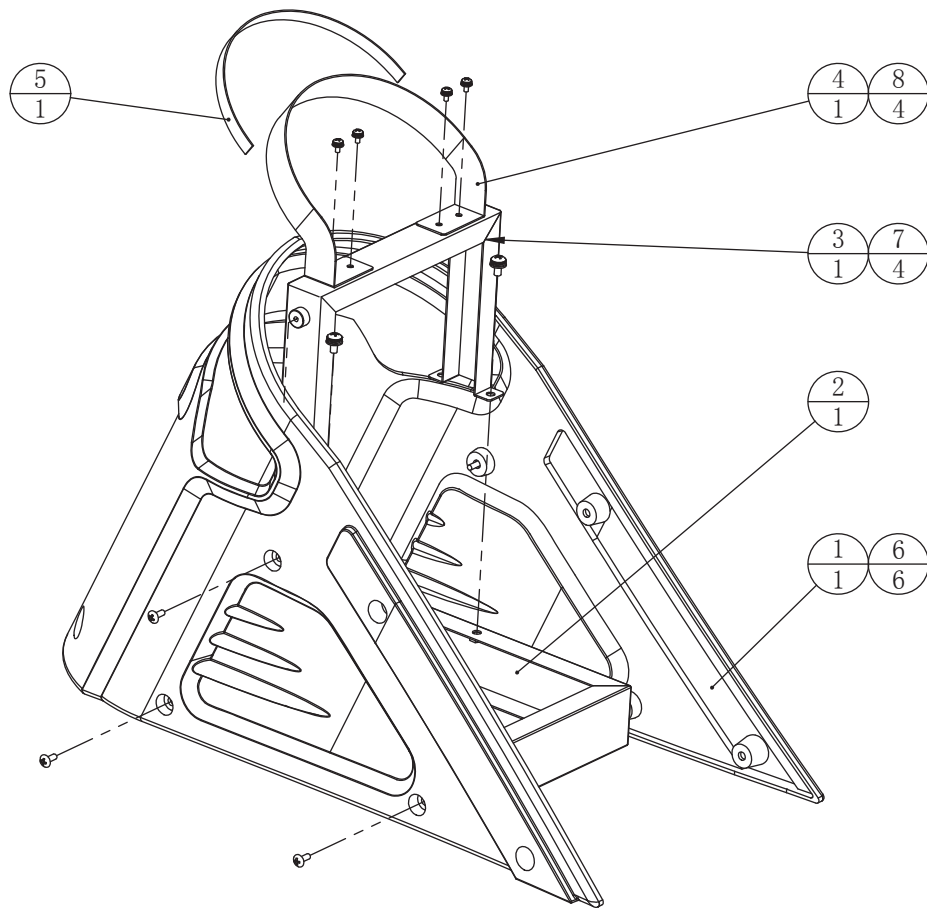


8		cross recessed fillister head three-combination screw	M4*8 (black)	4	
7		cross recessed fillister head three-combination screw	M6*12 (black)	4	
6		cross the big flat head screw	M5*12 (black)	6	
5		5050 strip light	DC12V red60 light	1	1.4.ZM9E0014
4	JBS-0105A03	Tail lamp fixing plate	SPCC-1.2T	1	1.1.WA32A00200
3	JBS-0105A02	Rear support frame 2		1	1.1.WA32A00190
2	JBS-0105A01	Rear support frame 1		1	1.1.WA32A00180
1	JBS-0105C01	Tail cap	ABS	1	1.8.WA32A00040
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.6 Handle assembly(JBS-0106000)

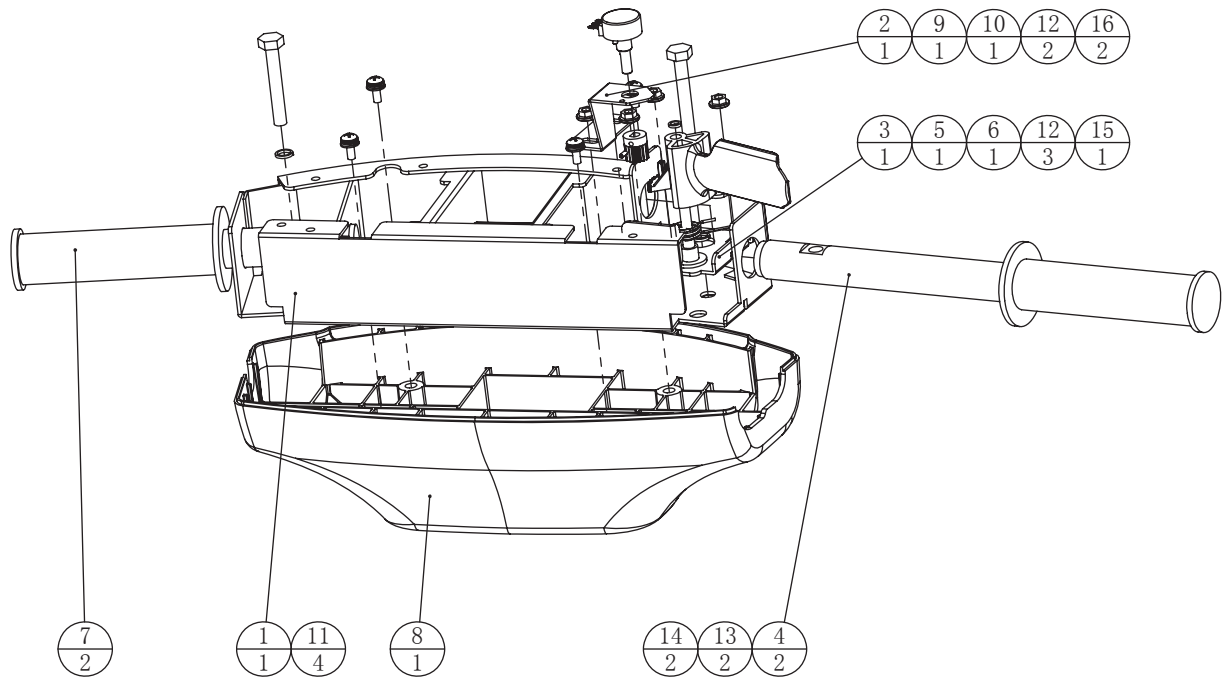


16		headless hex socket screw	M3*6 (black)	2	
15		open ring (E buckle)	M5(black)	1	
14		spring washer	M8 (black)	2	
13		external hex socket screw	M8*50 (black)	2	
12		hex head cap screw	M5 (colour)	5	
11		cross recessed fillister head three-combination screw	M5*12 (black)	4	
10		potentiometer	B-5KΩ 270	1	1.4.VR150220#
9	JBS-0106A04	potentiometer gear	Q235	1	1.1.WA32A00240
8	JBS-0106C01	Lower cover of steering box	ABS	1	1.8.WA32A00050
7	22946015	handlebar grips	handlebar grips	2	1.8.NA010060
6	JBS-0106C02	Accelerator plastic	Accelerator plastic	1	1.8.WA32A00060
5	SNC-0405A03	throttle spring	SWPB-Φ2.0	1	1.1.RA01A00410
4	24305012	Direction bar - left	SS40	2	1.1.NA010480
3	JBS-0106A03	Throttle holder		1	1.1.WA32A00230
2	JBS-0106A02	Steering VR fixing plate	SPCC-1.5T	1	1.1.WA32A00220
1	JBS-0106A01	Handle fixing frame		1	1.1.WA32A00210
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.7 Assembly of front housing(JBS-0107000)

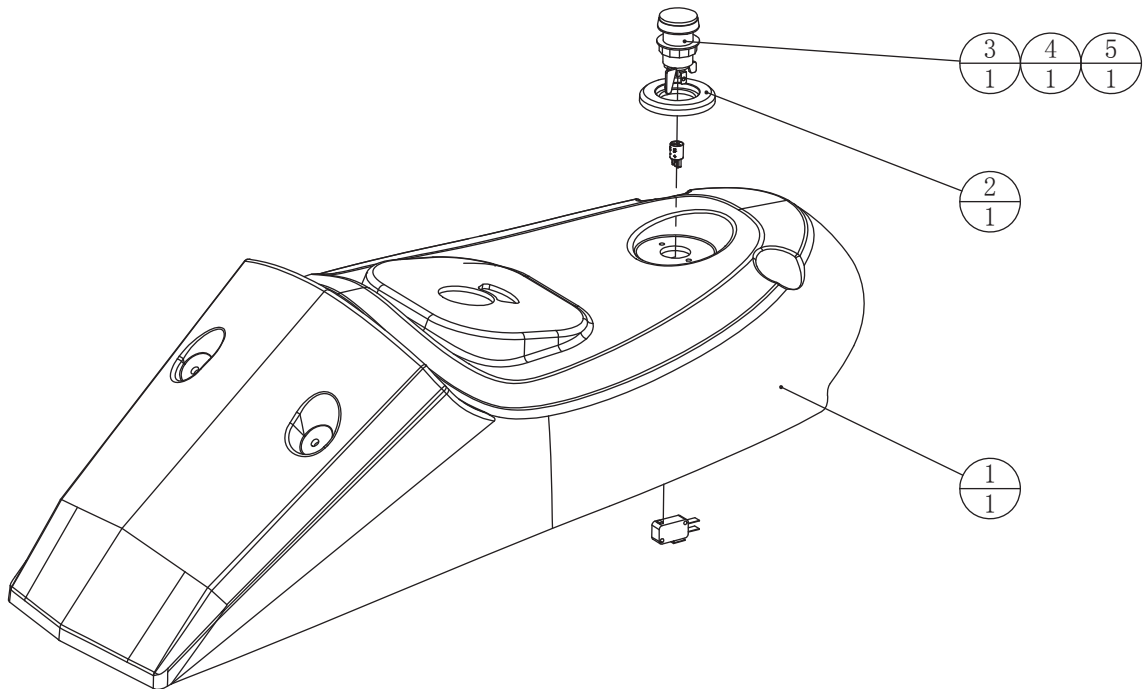


5		micro switch	D3V-01-1C23	1	1.4.SW103011
4		led lamp for button	12V white light (T103W-12V-SMD)	1	1.4.AJA01040
3		Round illuminated button (with lamp holder)	Φ32 red BLC-TN-BK-A-CR	1	1.4.AJ103113
2	JBS-P0005	Stop keypad	PMMA-8.0T	1	1.7.WA32A00080
1	JBS-0107C01	Front cover	ABS	1	1.8.WA32A00070
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.3.8 Assembly of button panel (JBS-0108000)

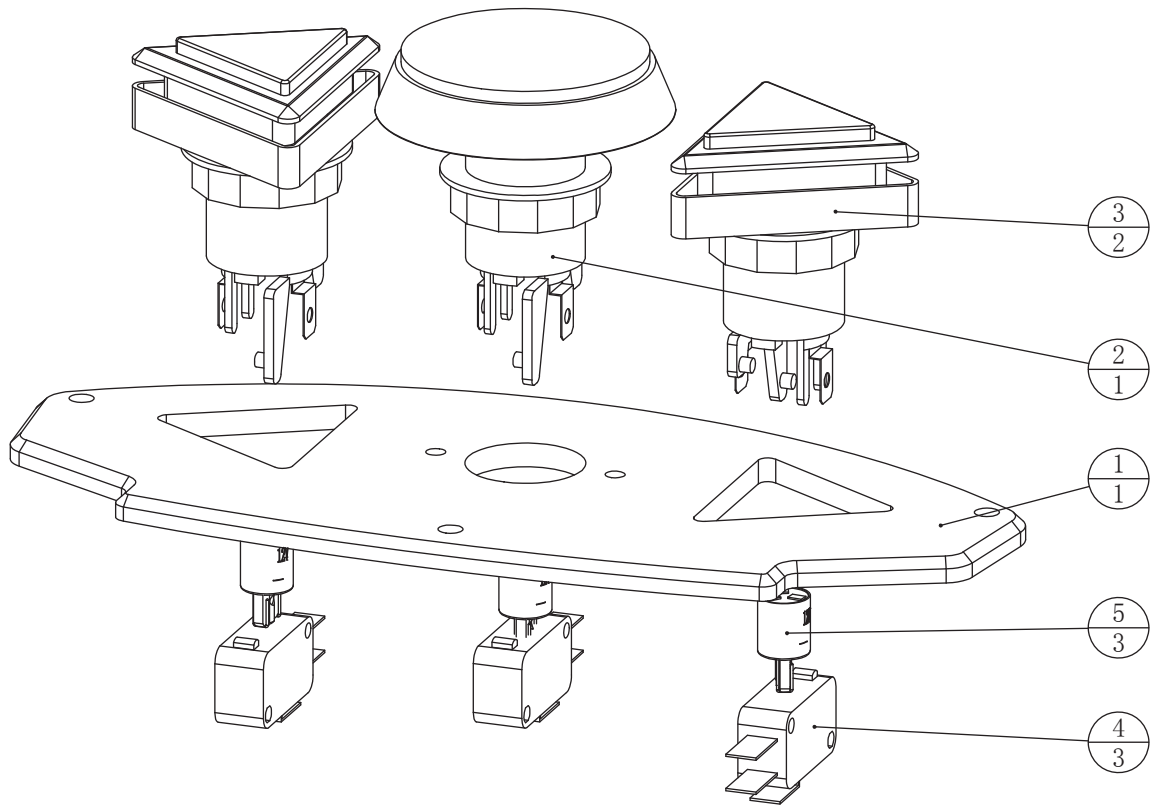


5		led lamp for button	12V white light (T103W-12V-SMD)	3	1.4.AJA01040
4		micro switch	D3V-01-1C23	3	1.4.SW103011
3		triangle button with lamp (including lamp base)	BLC-TN-BK-G-CW white	2	1.4.AJ903011
2		Round illuminated button (with lamp holder)	Φ60 white BLC-DP-BK-D-CW	1	1.4.AJ106021#
1	JBS-P0006	Key panel	PMMA-5.0T	1	1.7.WA32A00090
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code


6.3.9 Airbag assembly(JBS-0109000)

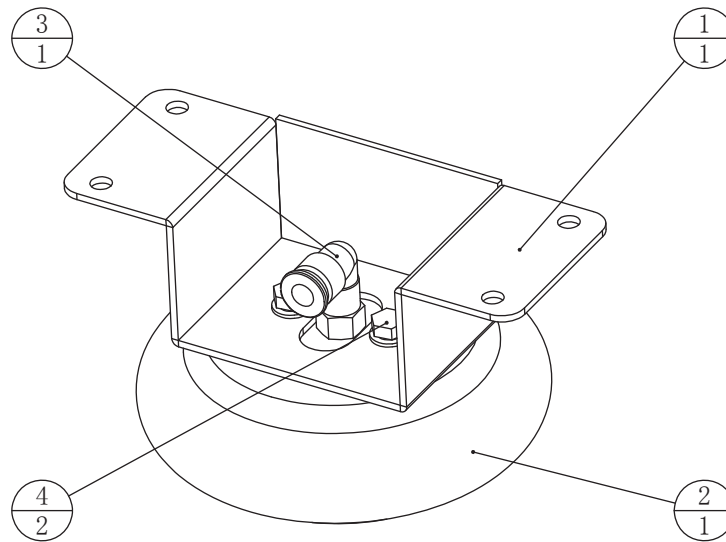

4		Hexagon triple combination	8*16*16*1.5(black)	2	
3		I type screw thread connector	APL10-02	1	1.4.JG072110
2		air bag	1B5002	1	1.4.QL000020
1	SRH-0202A01	air bag fixed iron	SPCC-3.0T	1	1.1.WA16C00390
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code


6.4 General assembly of LED frame(JBS-0200000)

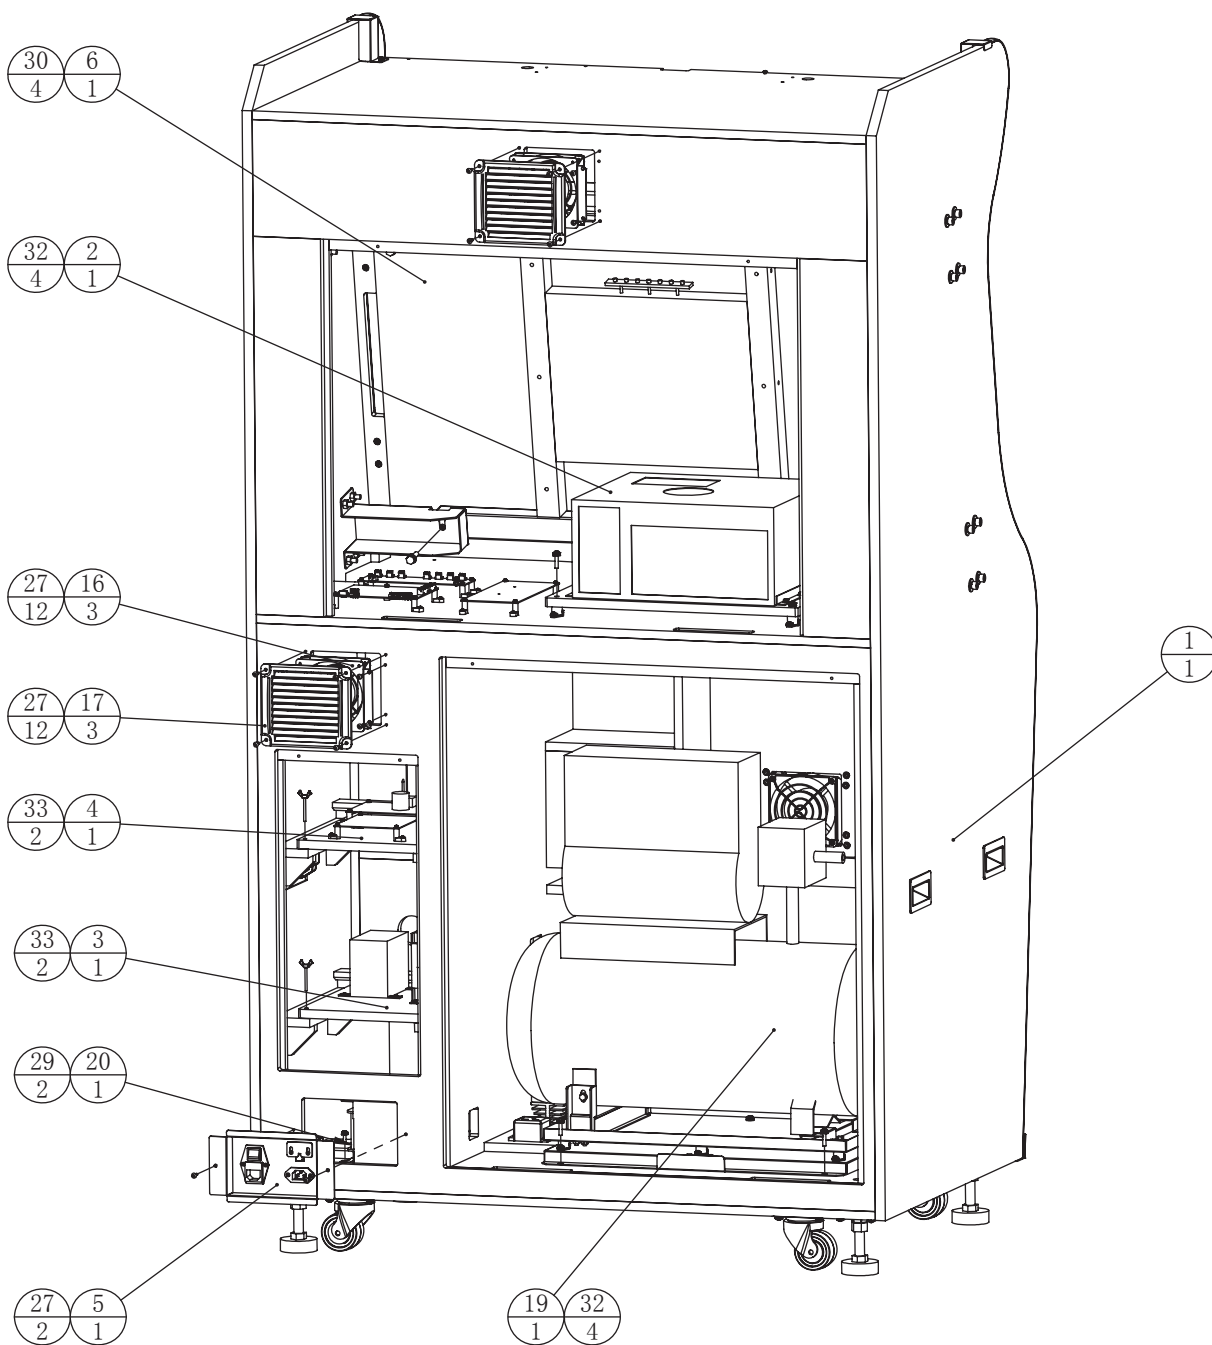

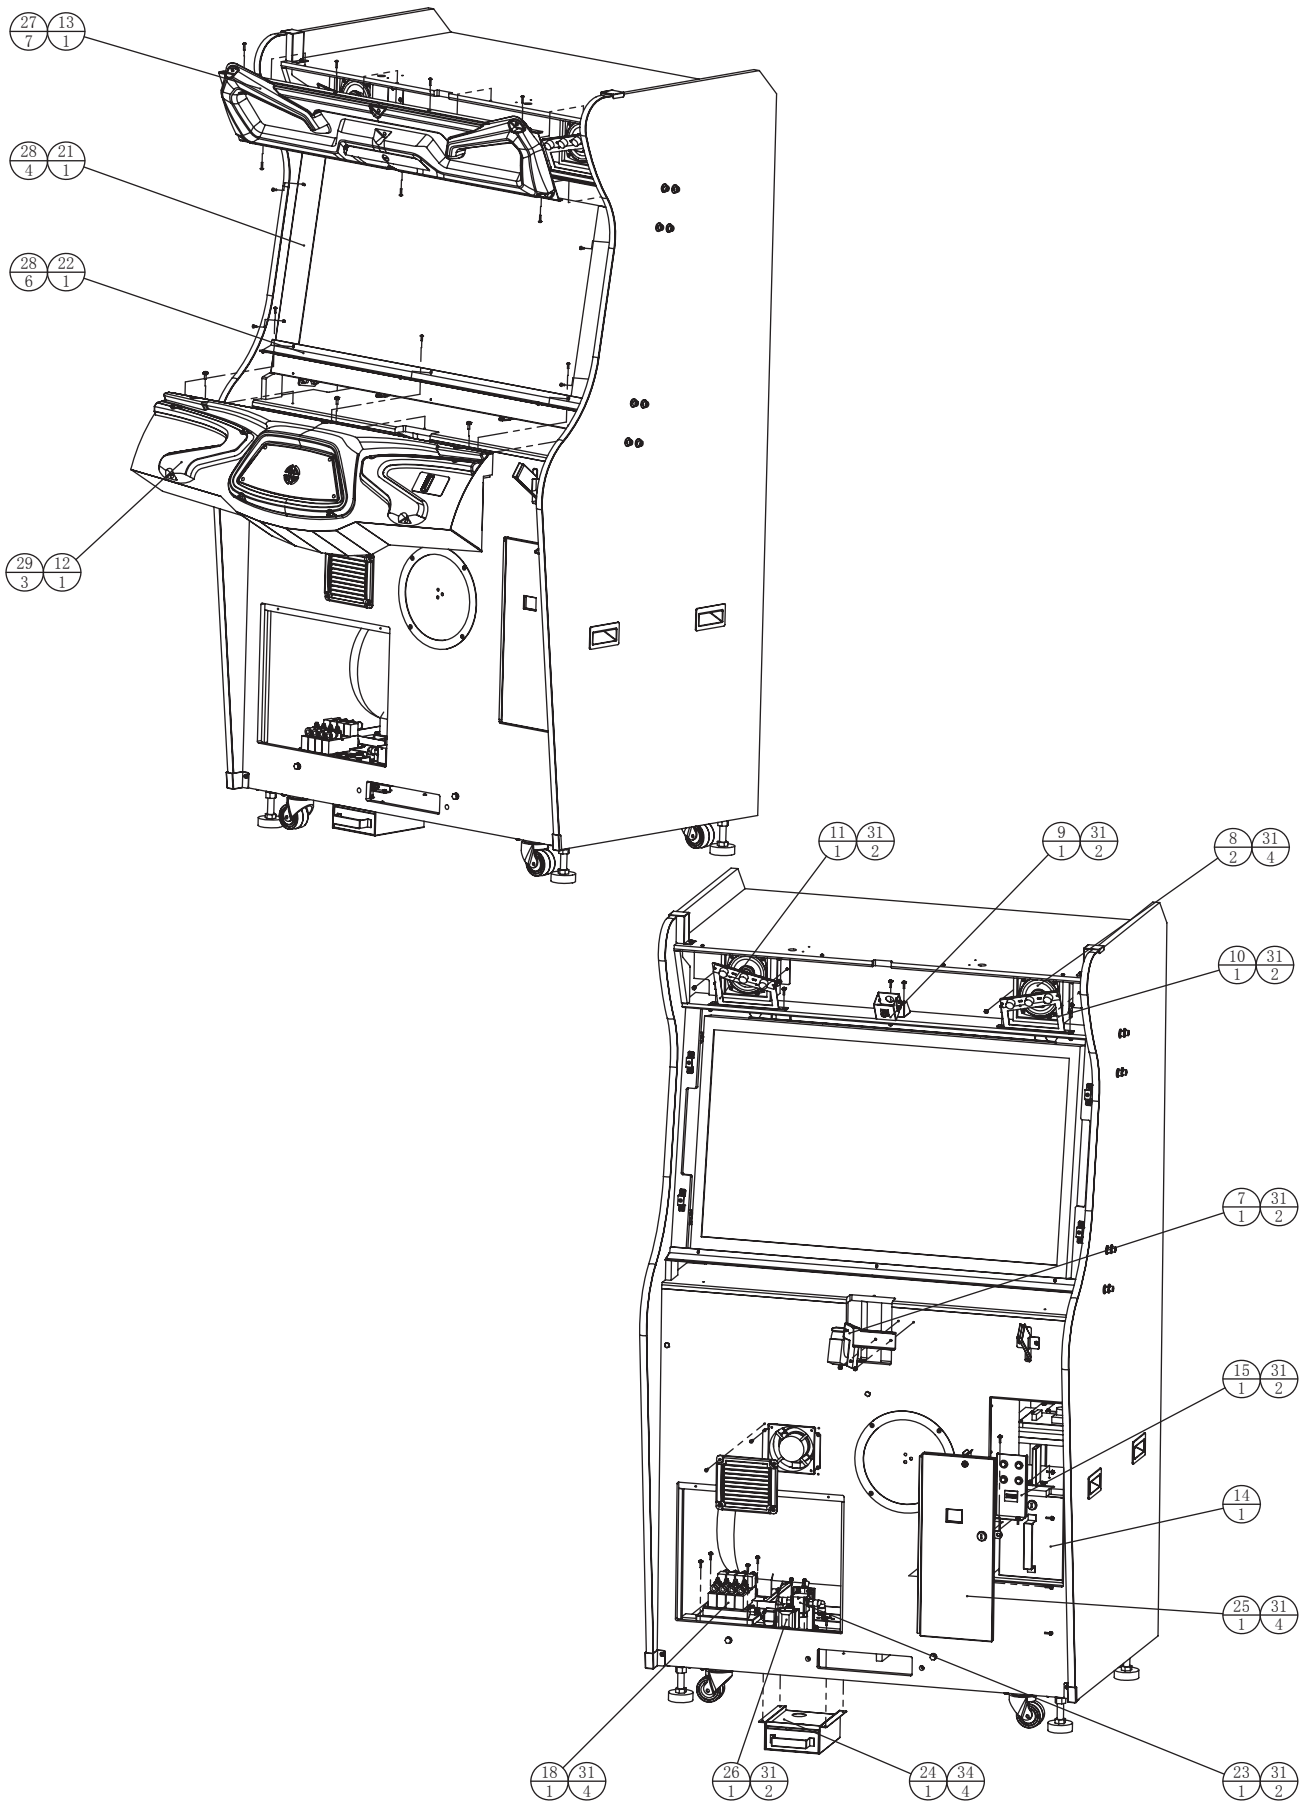


34		cross the big flat head screw	M4*20 (chrome)	4	
33		butterfly screws	M4*40 (Galvanization)	4	
32		cross recessed fillister head three-combination screw	M6*25 (black)	8	
31		cross recessed fillister head three-combination screw	M4*16 (black)	26	
30		Hexagon triple combination	8*30*16*1.5(black)	4	
29		cross recessed fillister head three-combination screw	M5*16 (black)	5	
28		hex socket cap screws	M4*12 (black)	10	
27		hex socket cap screws	M4*16 (black)	33	
26	JBS-0224000	Fluid control valve assembly		1	
25	JBS-0223000	Coin door assembly		1	
24	JBS-0222000	Water catcher assembly		1	
23	JBS-0221000	Filter assembly		1	
22	JBS-0200A10	Front trim pane	SPCC-1.2T	1	1.1.WA32A00340
21	JBS-0220000	Glass frame assembly		1	
20	JBS-0219000	Transformer assembly		1	
19	JBS-0218000	Air compressor assembly		1	
18	JBS-0217000	Assembly of pneumatic control valve		1	
17		plastic air network	253-5460	3	1.4.FS500010
16	JBS-0216000	Fan assembly		3	
15	JBS-0215000	Assembly of service panel		1	
14	JBS-0214000	Coin-box assembly		1	
13	JBS-0213000	Assembly of front cover of light box		1	
12	JBS-0212000	Console decoration assembly		1	
11	JBS-0211000	LCD Left Upper Lamp Assembly		1	
10	JBS-0210000	LCD upper right lamp assembly		1	
9	JBS-0209000	Camera assembly		1	
8	JBS-0208000	Speaker assembly		2	
7	JBS-0207000	Assembly of air blower		1	
6	JBS-0206000	LCD assembly		1	
5	JBS-0205000	Power switch Assembly		1	
4	JBS-0204000	PCB board assembly		1	
3	JBS-0203000	Assembly of power box		1	
2	JBS-0202000	Assembly of main machine		1	
1	JBS-0200000A	Assembly of LCD wooden frame		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.1 Assembly of LCD wooden frame(JBS-0200000A)

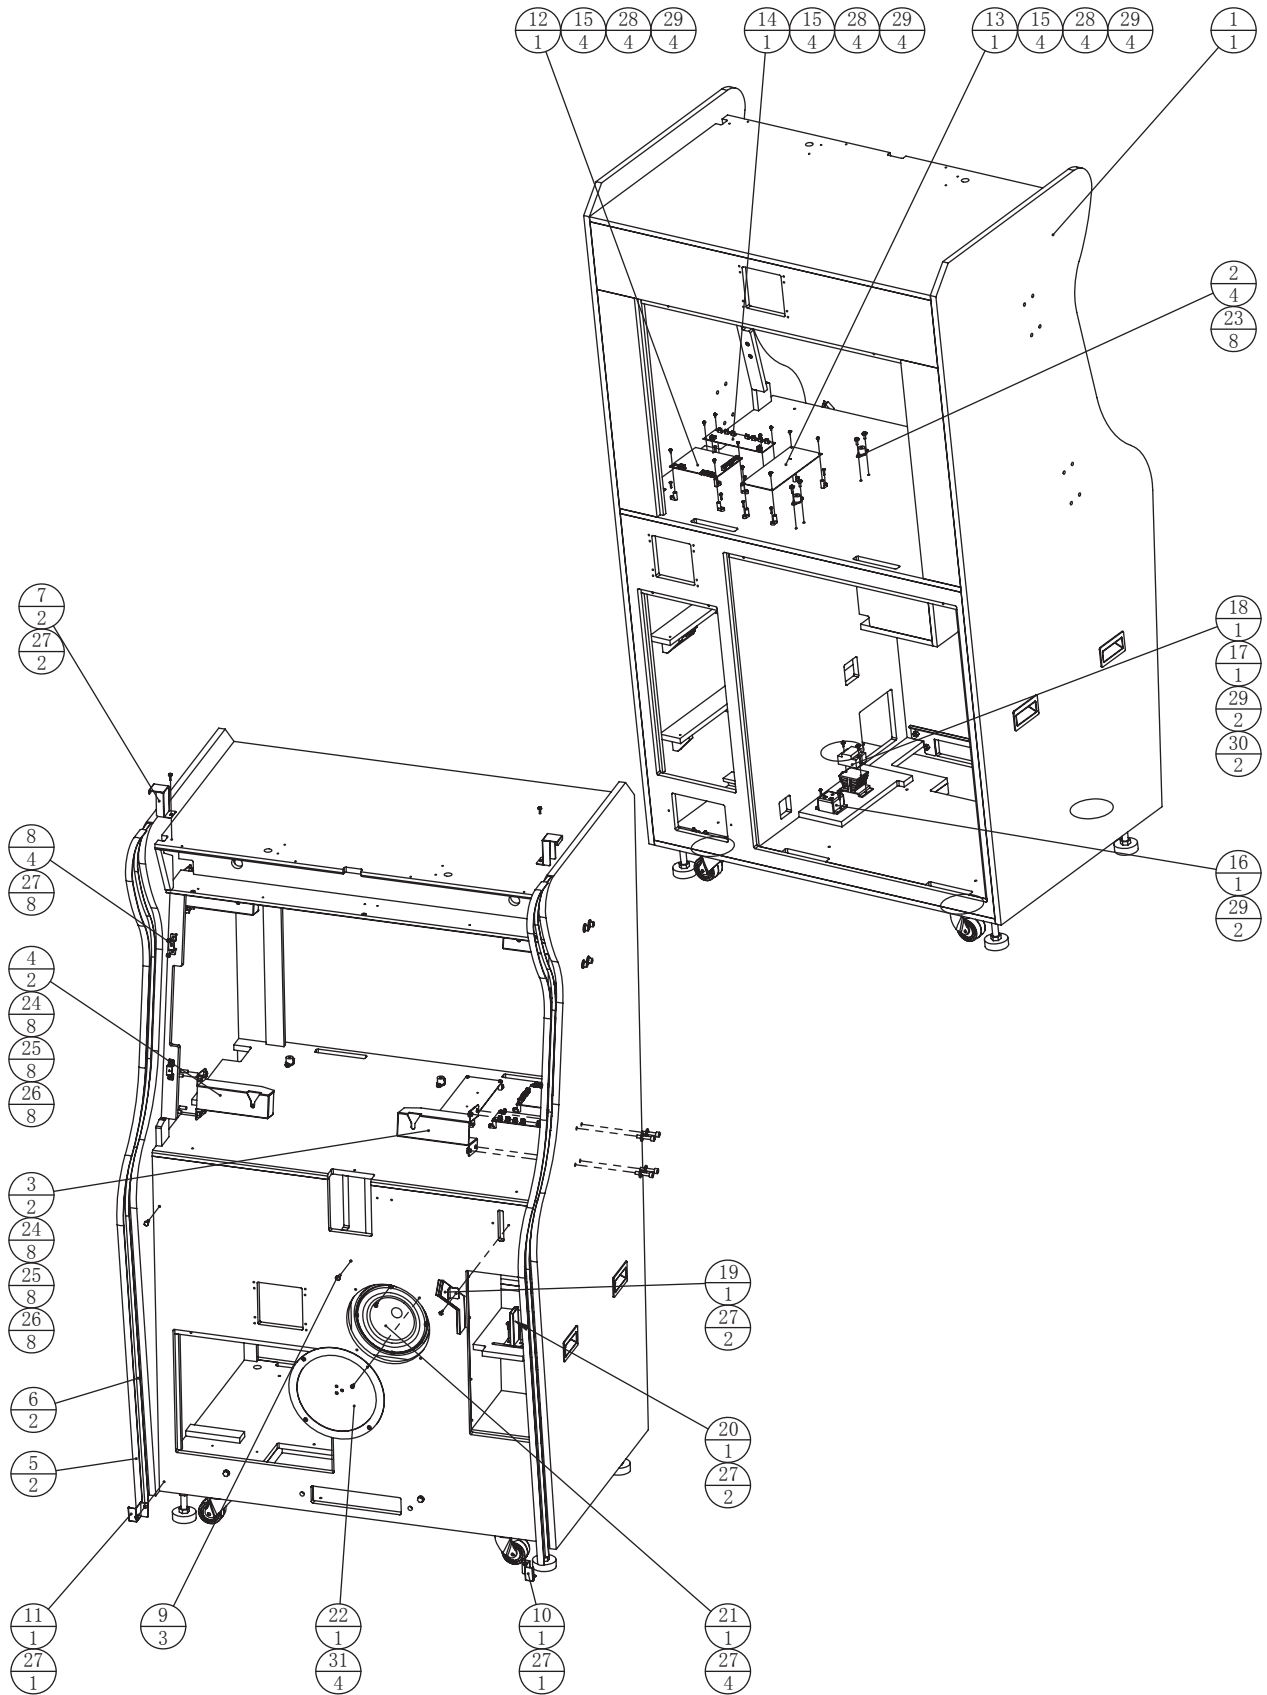


31		cross the big flat head screw	M5*12 (black)	4	
30		cross recessed fillister head three-combination screw	M4*12 (black)	2	
29		cross the big flat head self-drilling	M4*16 (black)	16	
28		cross recessed fillister head three-combination screw	M3*8 (black)	12	
27		cross recessed fillister head three-combination screw	M4*16 (black)	20	
26		socket head cap screws	M8*40 (black)	16	
25		spring washer	M8 (black)	16	
24		plain washers	φ8*φ22*2.0 (black)	16	
23		cross recessed fillister head three-combination screw	M5*16 (black)	8	
22	JBS-0200A08	bass cover		1	1.1.WA32A00320
21		woofer	HIT-800W 4Ω/60W	1	1.4.YS604010
20	JBS-0200A09	Receiving channel		1	1.1.WA32A00330
19	JBS-0200A11	Console slide		1	1.1.WA32A00350
18		Single-phase solid state relay	KSI380D40R-L	1	1.4.DC200150
17		Solid state relay special radiator	KHS-1A	1	1.4.DC200140
16		Exposed a multi-purpose socket	20A/250V	1	1.4.IC220020
15		I-holder	M3mm	12	1.9.LX103010
14		lamp control board	B0-086B	1	1.3.WA32A00030#
13		amplifier	B2-107B	1	1.3.WA32A00020#
12		I/O board	B0-094A	1	1.3.WA32A00010#
11	JBS-0200A07	Lower left panel of adhesive strip	SPCC-1.2T	1	1.1.WA32A00310
10	JBS-0200A06	Lower right panel of adhesive strip	SPCC-1.2T	1	1.1.WA32A00300
9	JBS-0200A05	Lower lock of console	Q235	3	1.1.WA32A00290
8	JBS-0200A04	Glass frame fixing plate	SECC-1.2T	4	1.1.WA32A00280
7	JBS-0200A03	Over cable cover plate	SPCC-1.2T	2	1.1.WA32A00270
6		5050 strip light	DC12V RGB60 light L=2100mm	2	1.4.ZM9E0014
5		174 flat aluminum		2	1.9.LC010010
4	JBS-0200A02	LCD support 2	SPCC-2.0T	2	1.1.WA32A00260
3	JBS-0200A01	LCD support 1	SPCC-2.0T	2	1.1.WA32A00250
2		lanhe shaped foot shock		4	1.8.AA000250
1	JBS-0201000	LCD frame assembly		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.1.1 LCD frame assembly(JBS-0201000)

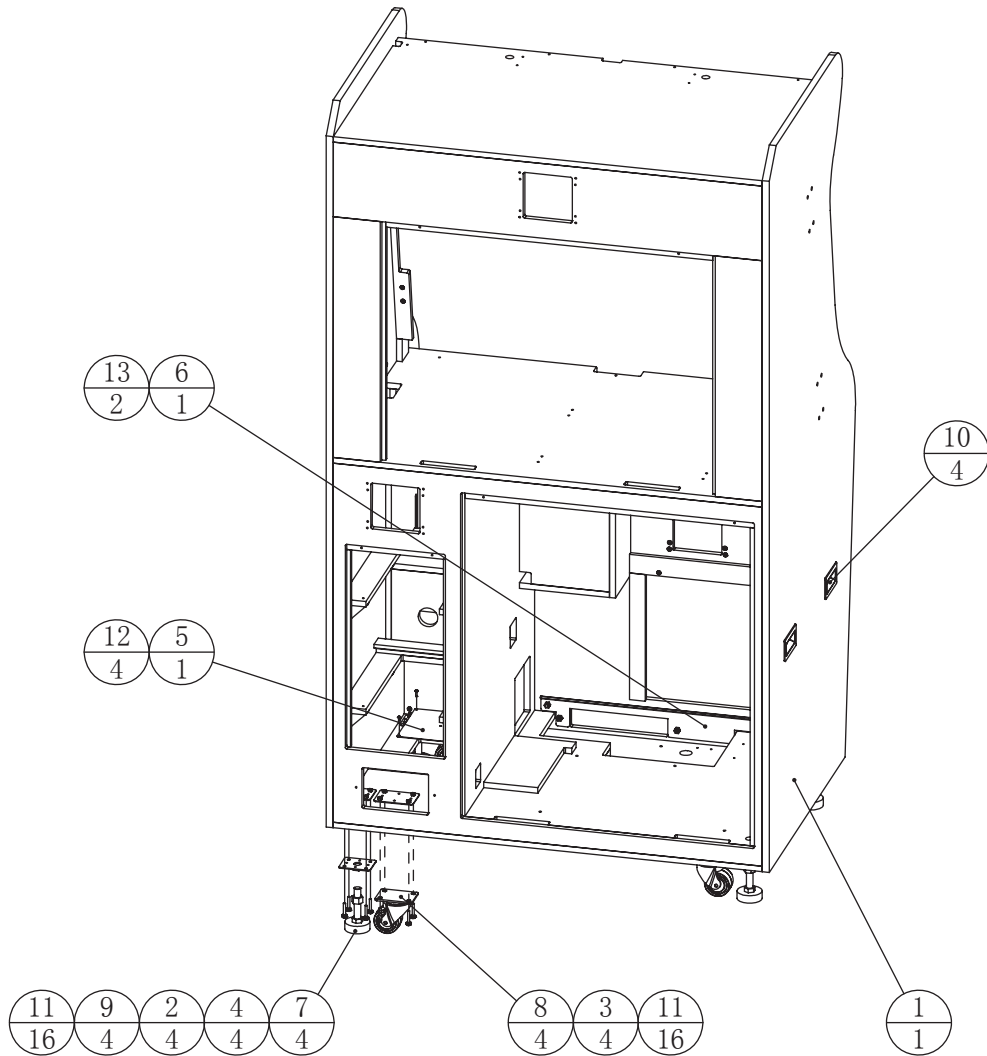


13		Hexagon triple combination	8*30*16*1.5(black)	2	
12		cross the big flat head self-drilling	M4*16 (black)	4	
11		cross recessed fillister head three-combination screw	M6*35 (chrome)	32	
10		Plastic clasp	black -For wooden cases	4	
9		hexagon nut	M16 (colour)	4	
8		casters	2.5 inch low center of gravity type	4	1.4.JL302520
7		anchor bolt (rubber buttom)	M16*100(colour)	4	
6	JBS-0201A02	Liquid crystal frame reinforced iron	SPCC-2.0T	1	
5	JBS-0201A01	Ventilation Body light net	Body light net-1.0T	1	
4	WAH-0000A06	M16 Anchor screw fixing iron 1	SPCC-2.0T	4	
3	WAH-0000A05	2.5 inch heavy movable caster fixing iron	SPCC-2.0T	4	
2	WAH-0000A04	2.5 "light movable caster fixed iron/Anchor screw fixing iron 2	SPCC-2.0T	4	
1	JBS-0201B01	Liquid crystal frame		1	
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.2 Assembly of main machine(JBS-0202000)

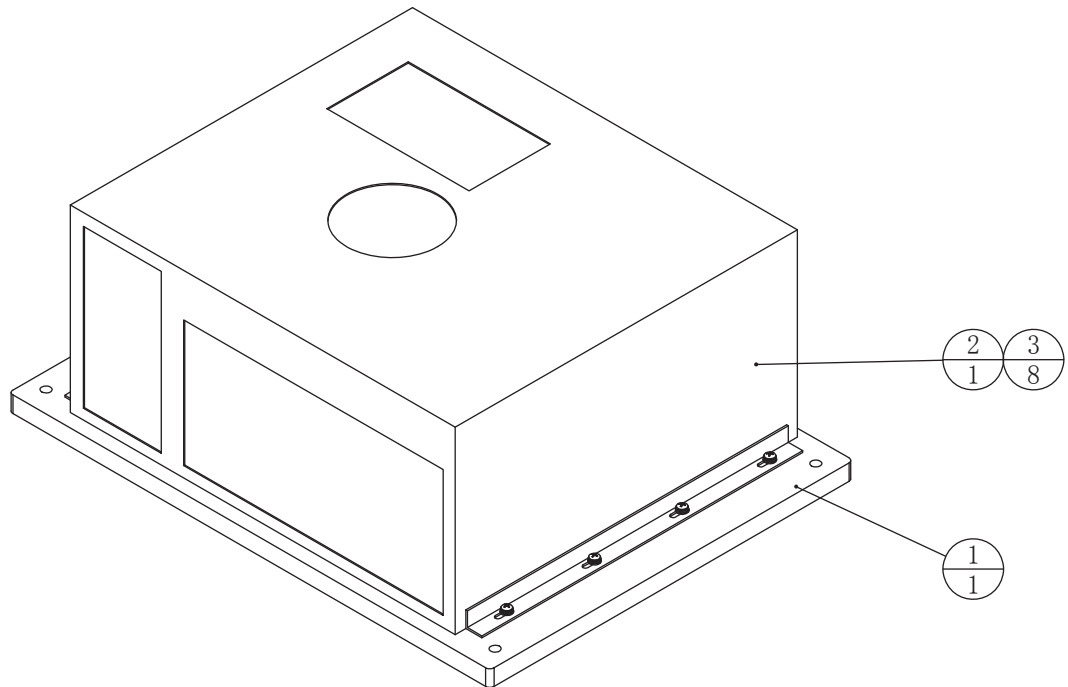


3		cross recessed fillister head three-combination screw	M4*16 (black)	8	
2		computer	IPC-WL001-3470	1	1.4.ZJ010035
1	JBS-0202B01	mother board	MDF-15.0T	1	1.2.WA32A00050
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.3 Assembly of power box(JBS-0203000)

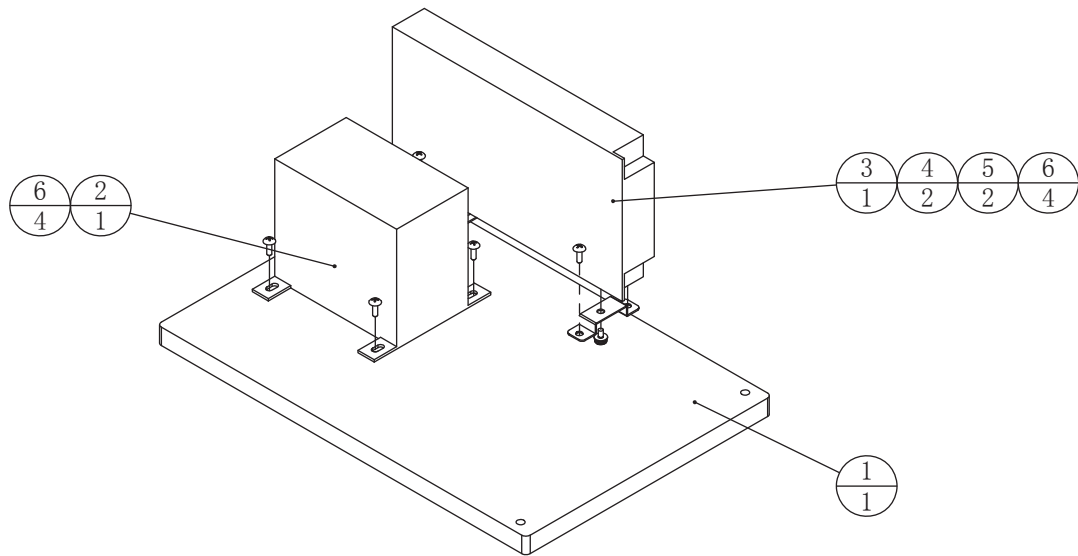


6		cross the big flat head self-drilling screw	M4*12 (black)	8	
5		cross recessed fillister head three-combination screw	M4*8 (black)	2	
4	JBS-0203A01	Power box support plate	SECC-1.0T	2	1.1.WA32A00360
3		power supply	LRS-350-12	1	1.4.DY020060
2		transformer	350W 110V/110V-14V	1	1.4.BY203040
1	JBS-0203B01	Power box board	MDF-15.0T	1	1.2.WA32A00060
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.4 PCB board assembly(JBS-0204000)

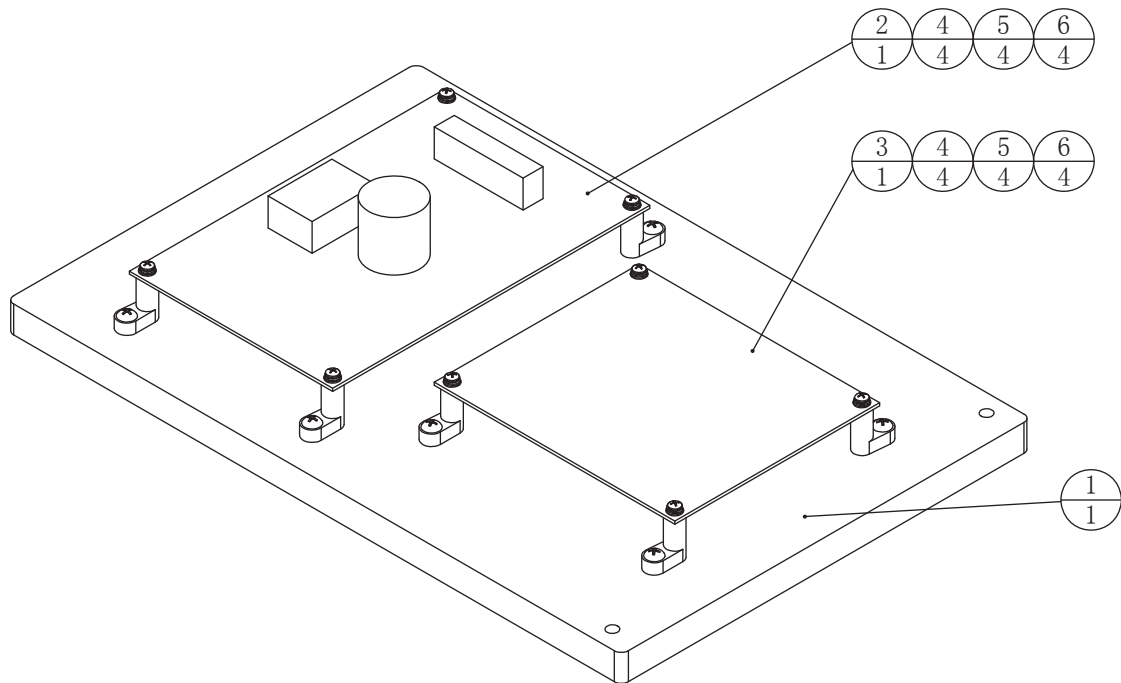


6		cross the big flat head self-drilling	M4*16 (black)	8	
5		cross recessed fillister head three-combination screw	M3*8 (black)	8	
4		I-holder	M3mm	8	1.9.LX103010
3		Air compressor control board	B0-080C	1	1.3.WA32A00040#
2		motion board	GKP-Vibrator-2013-0502	1	1.4.IC901790
1	JBS-0203B01	Power box board	MDF-15.0T	1	1.2.WA32A00060
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.5 Power switch Assembly(JBS-0205000)

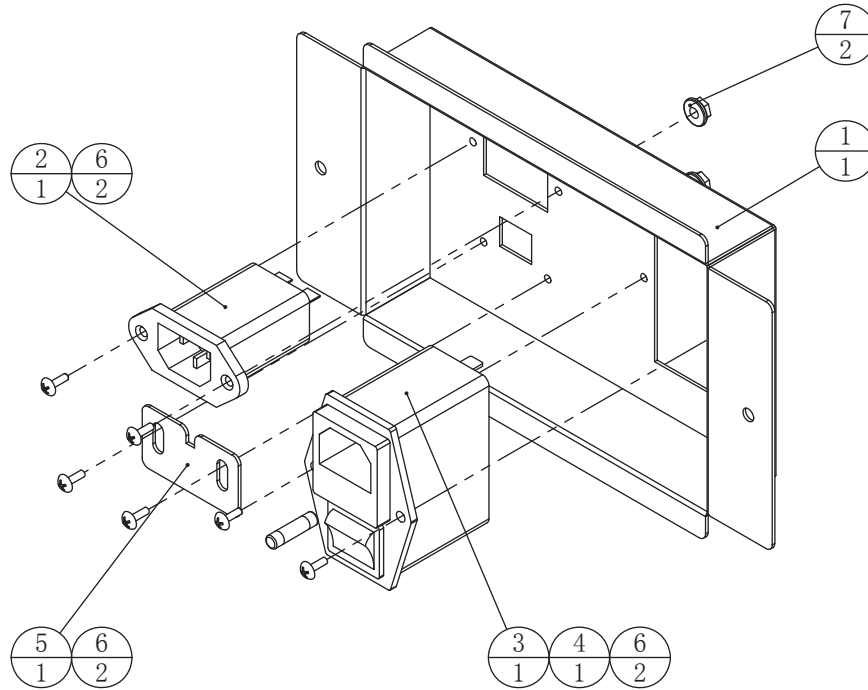


7		hex head cap screw	M4 (colour)	2	
6		cross the big flat head screw	M3*8 (black)	6	
5	JBS-0205A02	Wire cover	SPCC-1.2T	1	1.1.WA32A00380
4		fuse tube	F5A/5*20 250V	1	1.4.BX106020
3		filter with switch	YB11C1-10A-Q	1	1.4.LB100090
2		filter	15GEEG3E 10A/250V	1	1.4.LB100080
1	JBS-0205A01	ac power box	SPCC-1.2T	1	1.1.WA32A00370
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.6 LCD assembly(JBS-0206000)

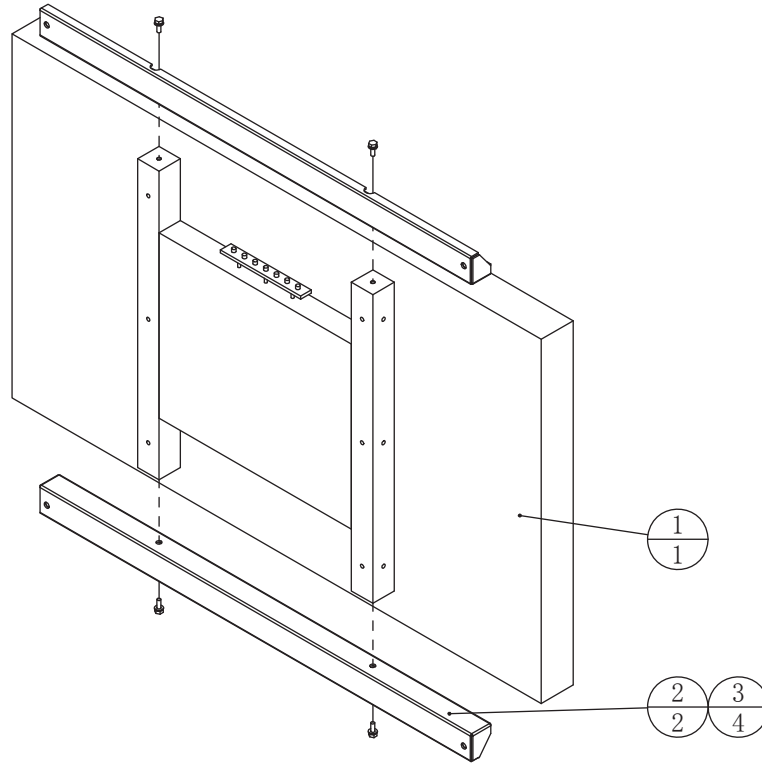


3		Hexagon triple combination	6*16*12*1.2(black)	4	
2	JBS-0206A01	led fixed plate	SPCC-2.5T	2	1.1.WA32A00390
1		Liquid crystal display	43	1	1.4.XS405820
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.7 Assembly of air blower (JBS-0207000)

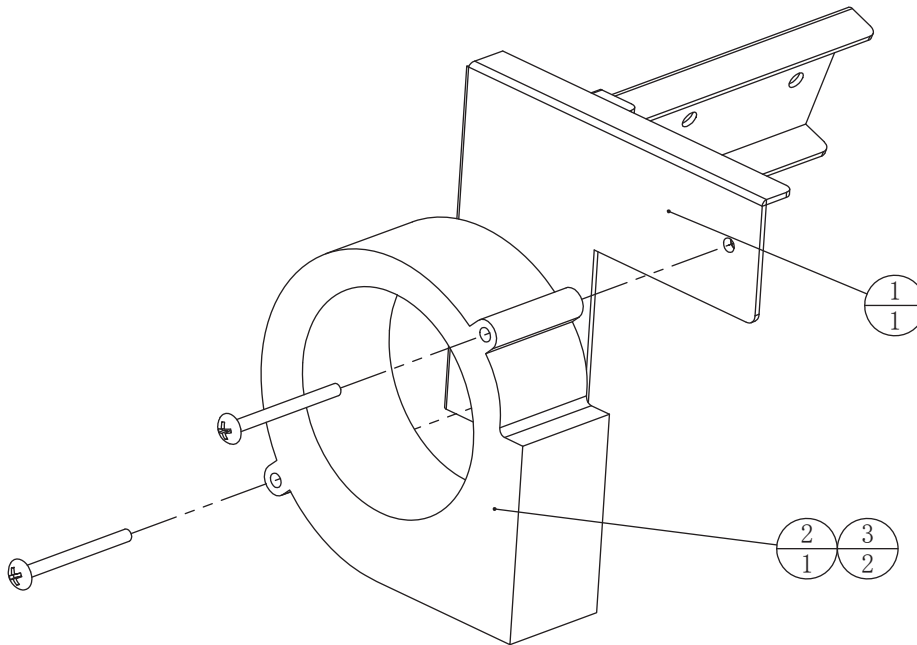


3		cross the big flat head screw	M4*40 (black)	2	
2		Turbofan	BA10033B12GP016	1	1.4.FS200100
1	JBS-0207A01	Blower holder		1	1.1.WA32A00400
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.8 Speaker assembly(JBS-0208000)

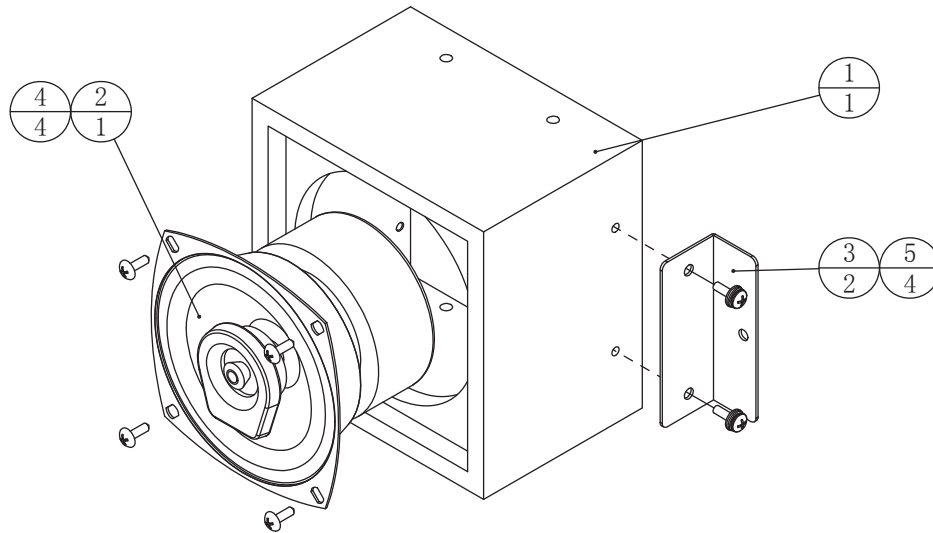


5		cross recessed fillister head three-combination screw	M4*12 (black)	4	
4		cross the big flat head self-drilling screw	M4*12 (black)	4	
3	JBS-0208A01	horn fixed plate	SPCC-1.2T	2	1.1.WA32A00410
2		speaker(as003)	4.5" 8Ω/20W	1	1.4.YS104560
1	SR1-0503B01	speaker boxes	MDF-9.0T	1	1.2.WA10A00030
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.9 Camera assembly(JBS-0209000)

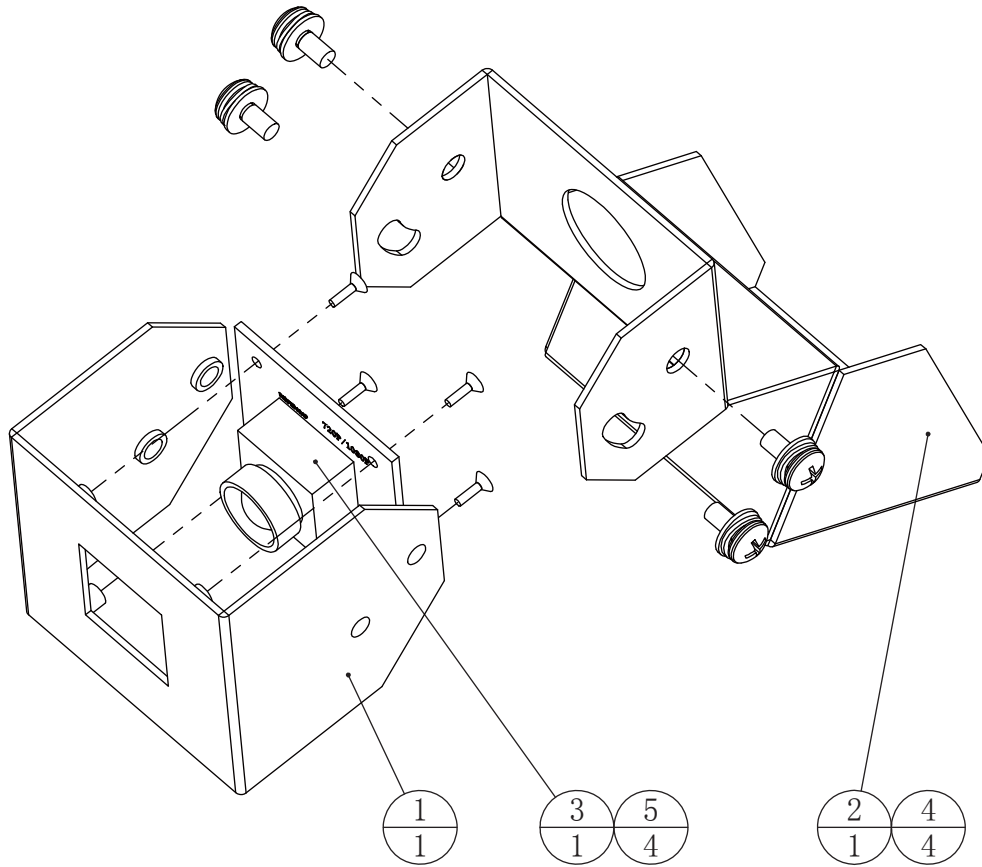


5		cross recessed countersunk head screws	M2*6 (black)	4	
4		cross recessed fillister head three-combination screw	M4*8 (black)	4	
3		camera	ELP-USBFHD03AF-A100	1	1.4.SX010021
2	JBS-0209A02	Camera adjustment board	SPCC-1.2T	1	1.1.WA32A00430
1	JBS-0209A01	Camera fixing plate	SPCC-1.2T	1	1.1.WA32A00420
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.10 LCD upper right lamp assembly(JBS-0210000)

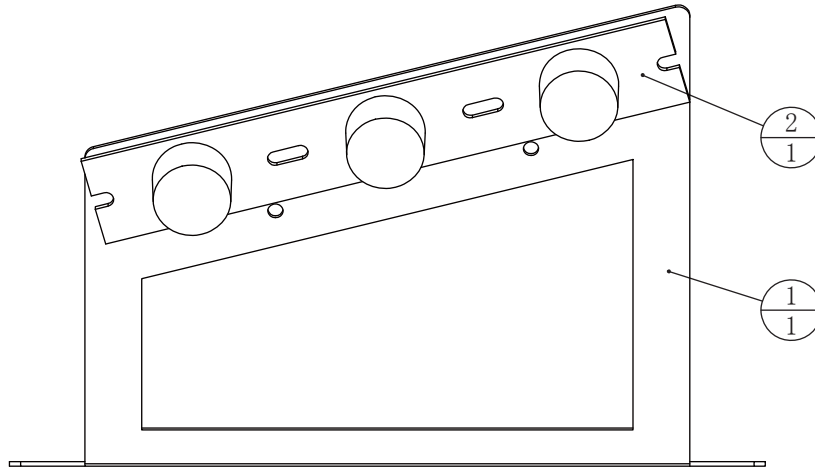


2		Diffuse reflector	DC12V blue 160mm*25mm	1	1.4.ZM9H0013
1	JBS-0210A01	Front lamp fixing iron of right horn	SPCC-1.2T	1	1.1.WA32A00440
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.11 LCD upper left lamp assembly(JBS-0211000)

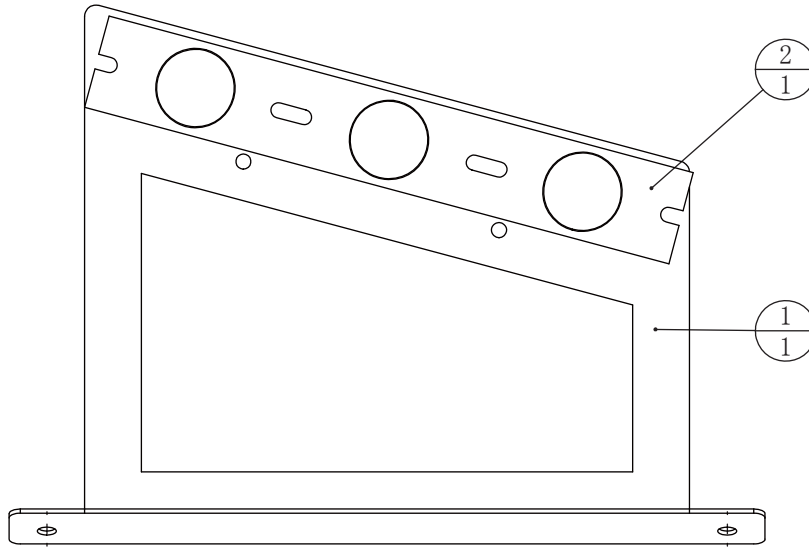


2		Diffuse reflector	DC12V blue 160mm*25mm	1	1.4.ZM9H0013
1	JBS-0211A01	Front lamp fixing iron of left horn	SPCC-1.2T	1	1.1.WA32A00450
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.12 Console decoration assembly(JBS-0212000)

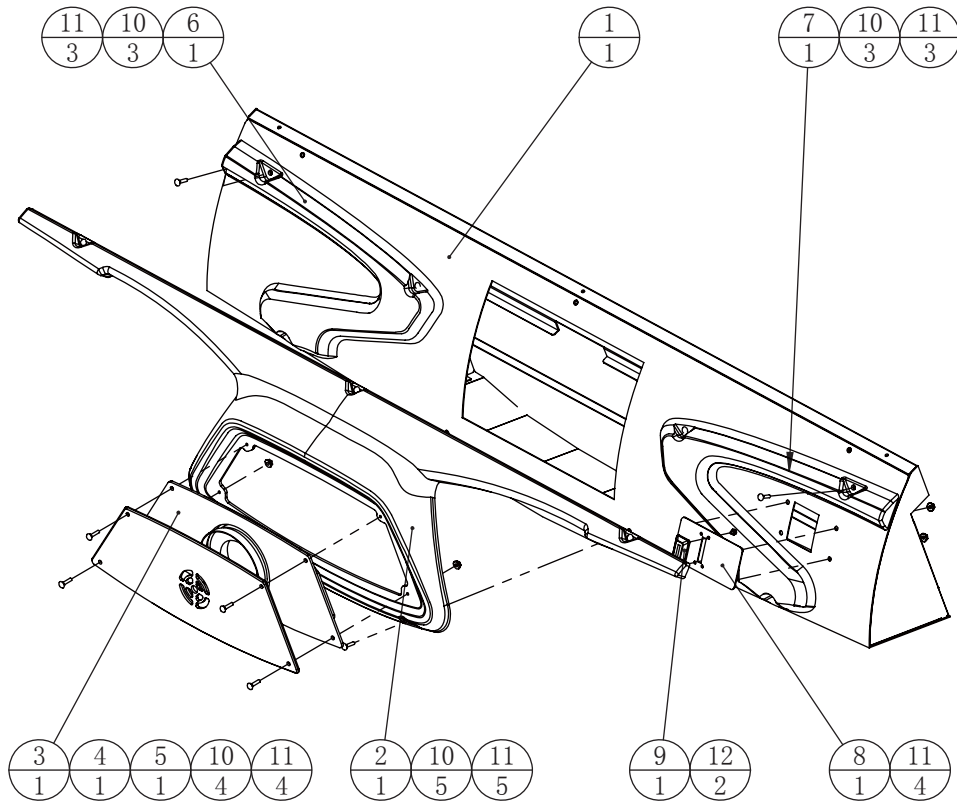


12		cross recessed fillister head three-combination screw	M3*6 (chrome)	2	
11		hex head cap screw	M4 (colour)	19	
10		carriage bolts	M4*16 (chrome)	15	
9		slot	Rectangle	1	1.4.TB200020
8	JBS-0212A02	Coin slot fixed iron	SPCC-1.2T	1	1.1.WA32A00470
7	JBS-0212C03	Console right trim	ABS	1	1.8.WA32A00100
6	JBS-0212C02	Console left trim	ABS	1	1.8.WA32A00090
5	JBS-P0007	Middle trim panel	PMMA-5.0T	1	1.7.WA32A00100
4		5050 strip light	DC12V RGB60 light L=300mm	1	1.4.ZM9E0014
3	JBS-0212D02	Middle light guide plate	PMMA-12.0T	1	1.7.WA32A00020
2	JBS-0212C01	Console center trim	ABS	1	1.8.WA32A00080
1	JBS-0212A01	control panel		1	1.1.WA32A00460
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.13 Assembly of front cover of light box(JBS-0213000)

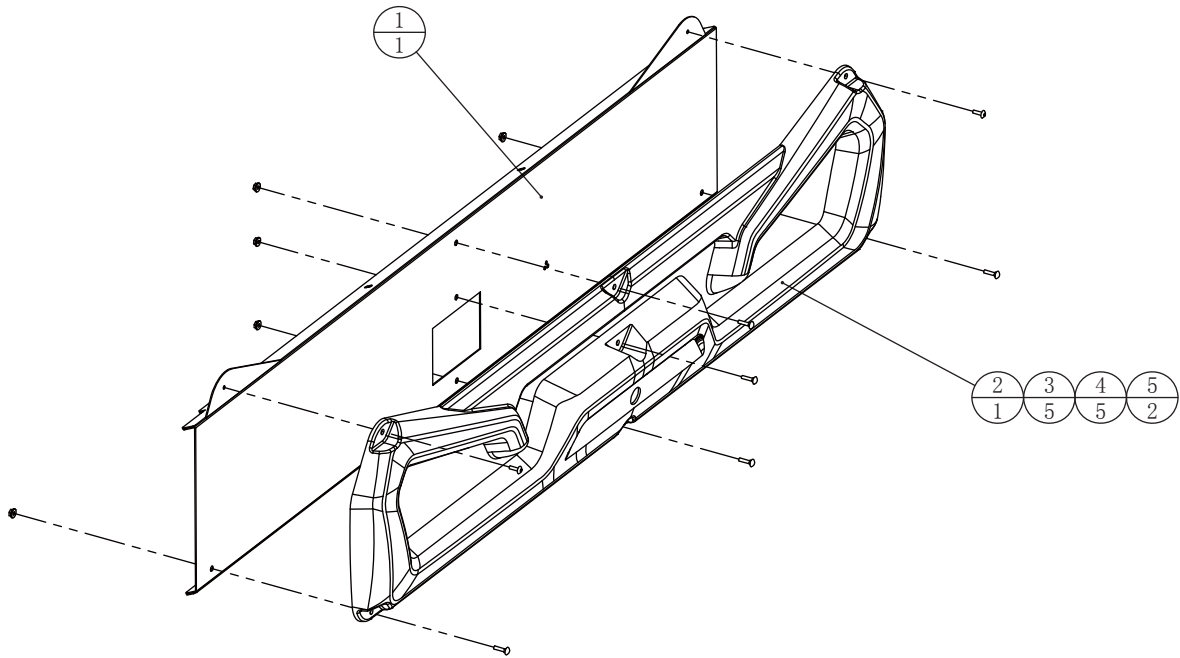


5		hex socket cap screws	M4*12 (black)	2	
4		hex head cap screw	M4 (colour)	5	
3		carriage bolts	M4*16 (chrome)	5	
2	JBS-0213C01	Light box decoration	ABS	1	1.8.WA32A00110
1	JBS-0213A01	lamp box fixed iron		1	1.1.WA32A00480
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.14 Coin-box assembly(JBS-0214000)

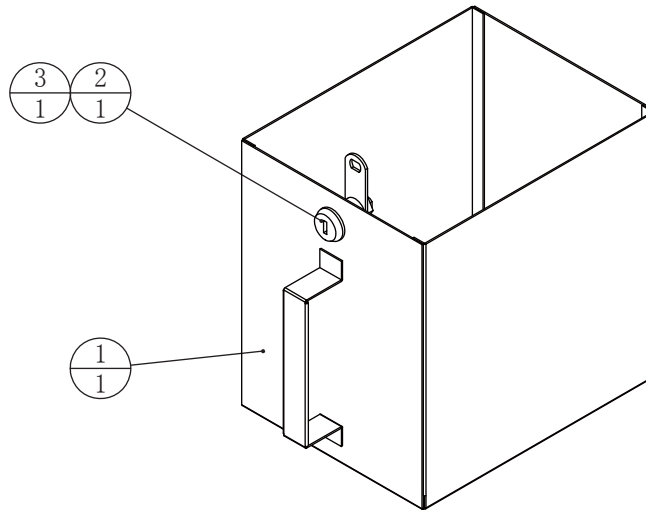


3		locking plate	locking plate	1	1.4.SJ120018
2		Lingzhi door lock (miscellaneous) 21.5mm	H22	1	1.4.SJ120014
1	JBS-0214A01	coin box		1	1.1.WA32A00490
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.15 Assembly of service panel (JBS-0215000)

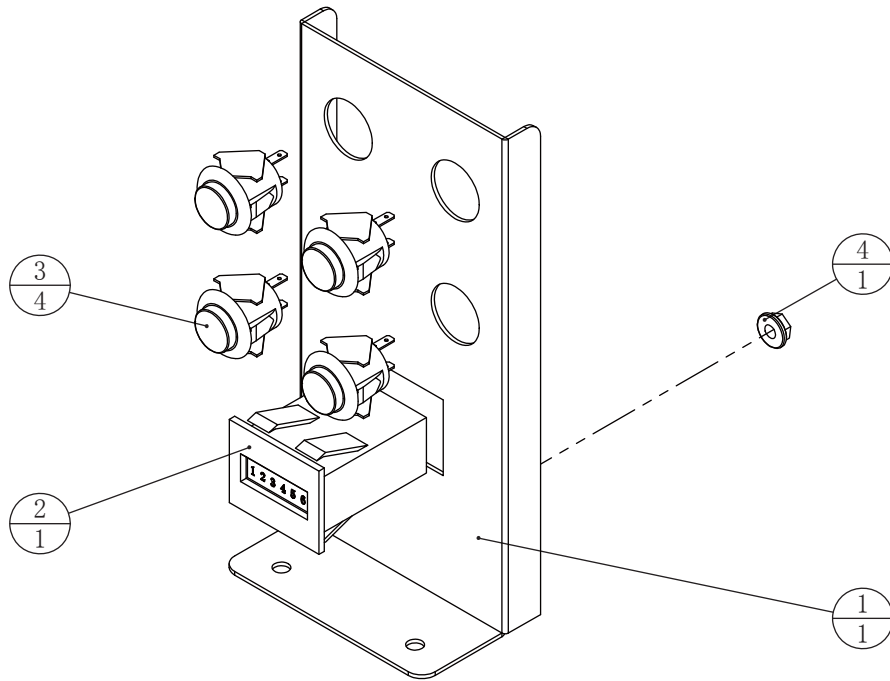


4		hex head cap screw	M4 (colour)	1	
3		round push button	red SDP-103C-22RB	4	1.4.AJ500012#
2		counter	DC 12V	1	1.4.JS100020
1	JBS-0215A01	service panel	SPCC-1.2T	1	1.1.WA32A00500
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.16 Fan assembly(JBS-0216000)

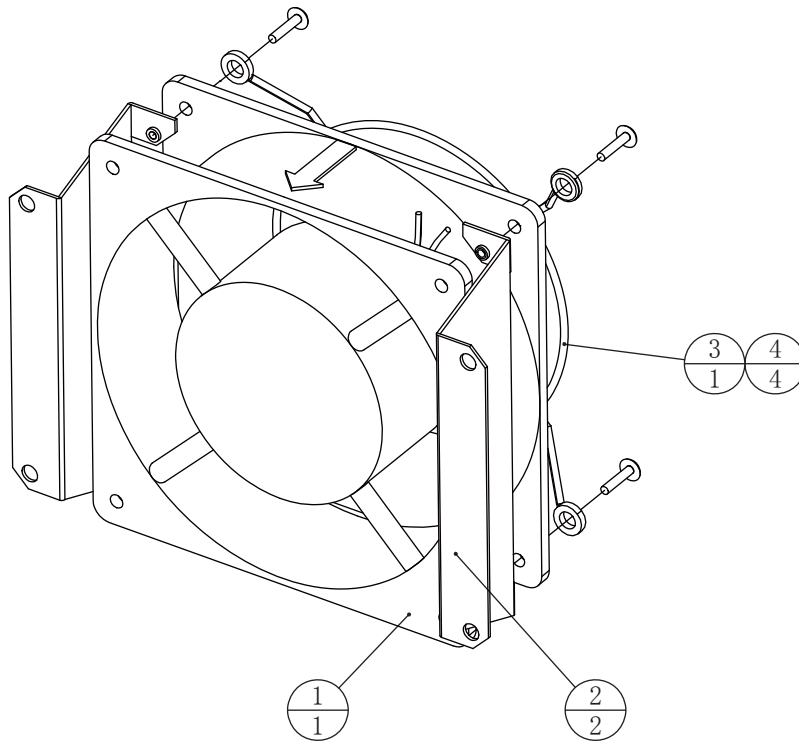


4		cross the big flat head screw	M3*12 (black)	4	
3		fan cover	120*120	1	1.4.FS300020
2	VBP-01-14-01	fan bracket	SECC T-1.0	2	1.1.IG13A00280
1		fan with bearing	120*120/AC110V	1	1.4.FS200042
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.17 Assembly of pneumatic control valve(JBS-0217000)

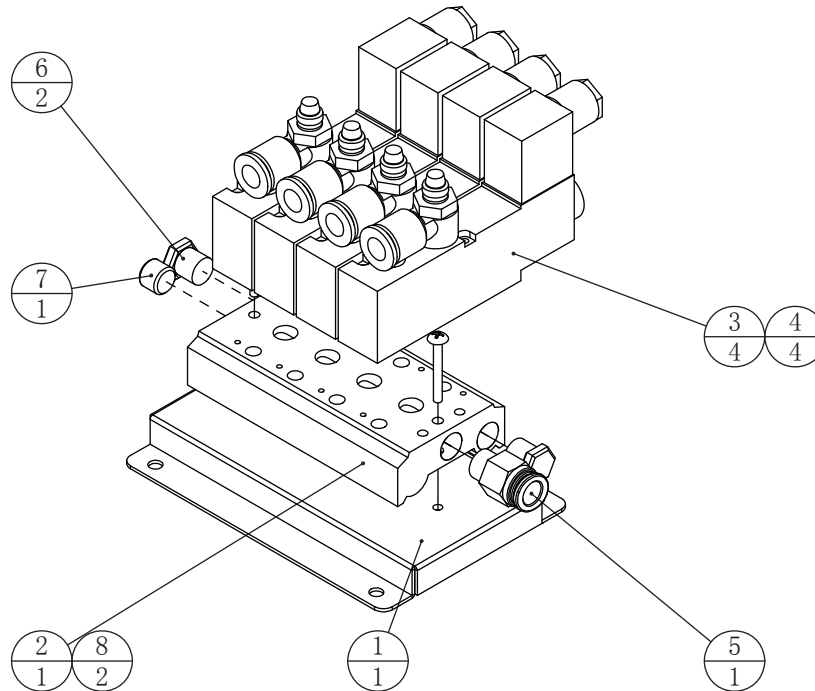


8		cross the big flat head screw	M4*30 (black)	2	
7		hexagon end cap	ABP-02	1	1.4.JG091030
6		copper silencer	BSLM02	2	1.4.YSE00020
5		screw thread direct connector	APC10-02	1	1.4.JG082030
4		one-way throttle valve - pipe connector	ASL10-02B	4	1.4.JG09A030
3		electromagnetic valve	3V210-08-NC-F	4	1.4.JG09A050
2		pneumatic control valve base	3V200M-4F	1	1.4.QC000020
1	JBS-0217A01	Electromagnetic valve seat	SECC-1.5T	1	1.1.WA32A00510
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.18 Air compressor assembly(JBS-0218000)

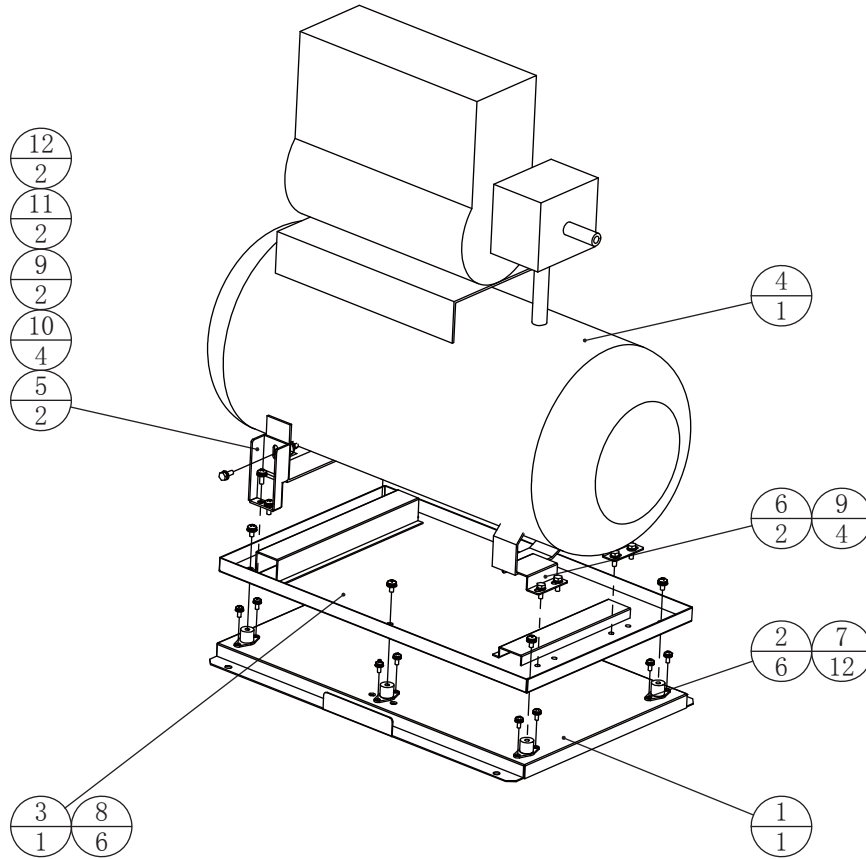


12		Self-Locking Nuts	M6 (Galvanization)	2	
11		plain washers	Φ6*Φ20*2.0 (black)	2	
10		cross recessed fillister head three-combination screw	M6*16 (black)	4	
9		Hexagon triple combination	6*16*12*1.2(black)	6	
8		cross recessed fillister head three-combination screw	M6*12 (black)	6	
7		cross recessed fillister head three-combination screw	M5*12 (black)	12	
6	ME-0102A04	air compressor pressure iron	SPCC-1.5T	2	1.1.IG22B00330
5	SRH-0108A02	air compressor fixed iron	SPCC-2.5T	2	1.1.WA16C00230
4		air compressor	S10(AC220V)	1	1.4.KY100030
3	ME-0102A02	air compressor support set		1	1.1.IG22B00310
2		lanhe shaped foot shock		6	1.8.AA000250
1	SRH-0108A01	air compressor shockproof seat		1	1.1.WA16C00220
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.19 Transformer assembly(JBS-0219000)

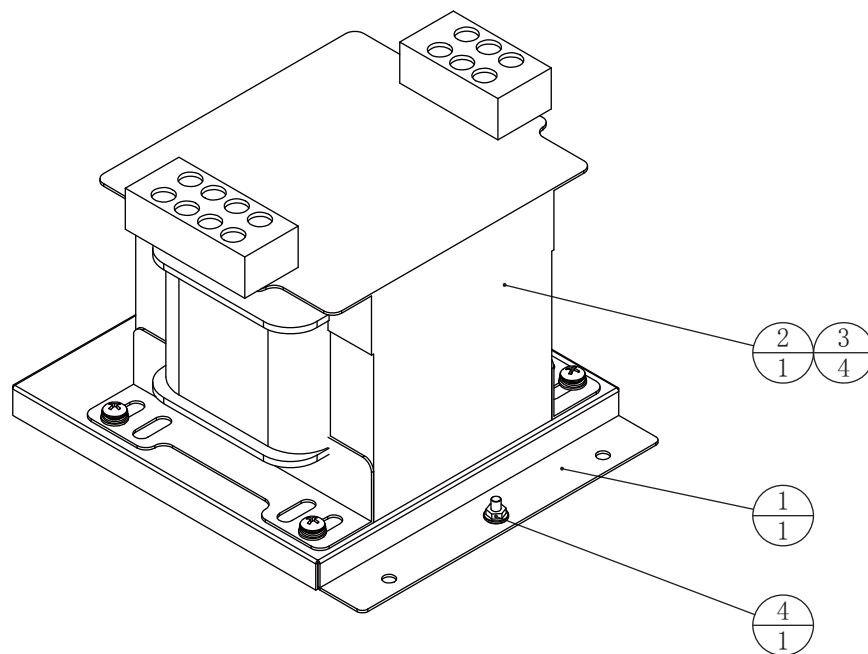


4		hex head cap screw	M4 (colour)	1	
3		cross recessed fillister head three-combination screw	M5*12 (black)	4	
2		Single-phase control transformer	EI-133*100(H50 0.5MM)	1	1.4.BY305040
1	JBS-0219A01	transformer fixed plate	SECC-1.2T	1	1.1.WA32A00520
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.20 Glass frame assembly(JBS-0220000)

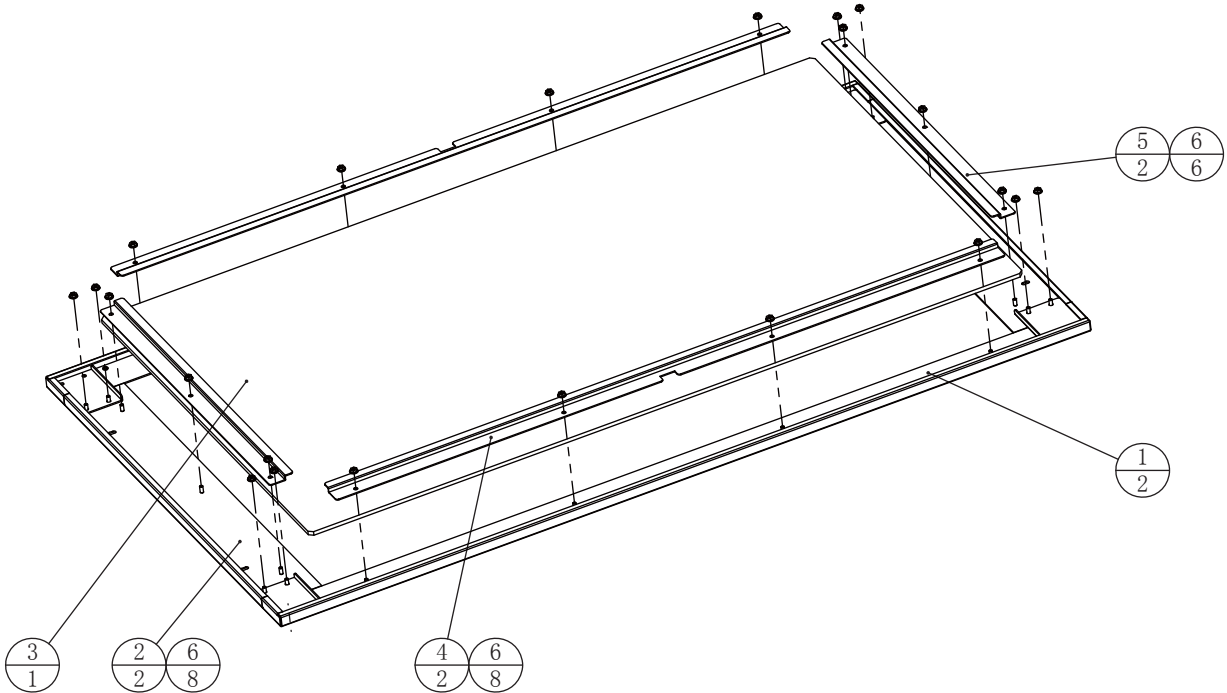


6		hex head cap screw	M4 (colour)	22	
5	JBS-0220A04	pressure iron for glass 2	SPCC-1.2T	2	1.1.WA32A00560
4	JBS-0220A03	pressure iron for glass 1	SPCC-1.2T	2	1.1.WA32A00550
3	WAH-0000C05	42" led screen glass a	glass-5.0T	1	1.8.AA030050
2	JBS-0220A02	glass frame2	SPCC-1.5T	2	1.1.WA32A00540
1	JBS-0220A01	glass frame1		2	1.1.WA32A00530
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.21 Filter assembly (JBS-0221000)

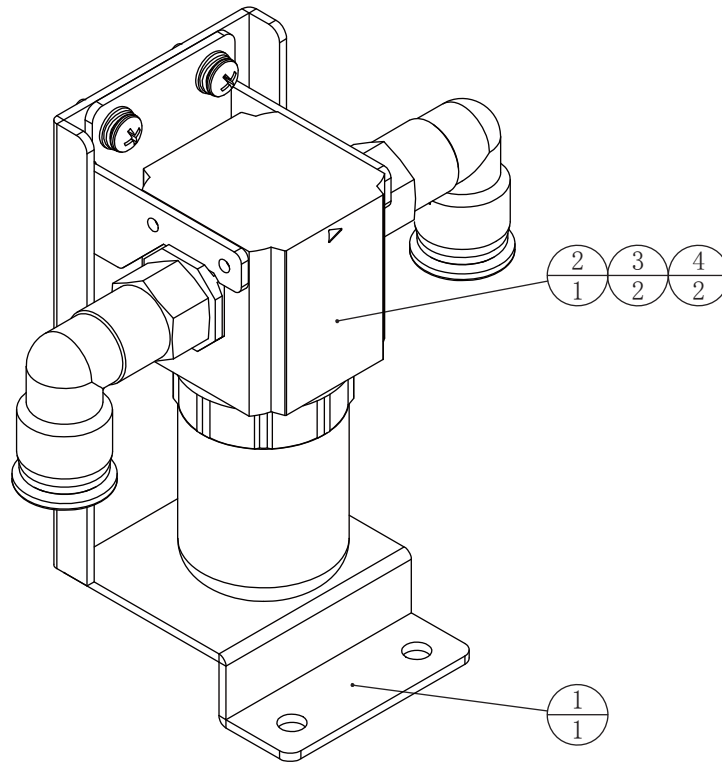


4		cross recessed fillister head three-combination screw	M4*12 (black)	2	
3		l type screw thread connector	APL10-02	2	1.4.JG072110
2		Clean Air Component	GF200-08	1	1.4.LB200020
1	SRH-0113A01	filter fixed iron	SPCC-1.5T	1	1.1.WA16C00280
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.22 Water catcher assembly(JBS-0222000)

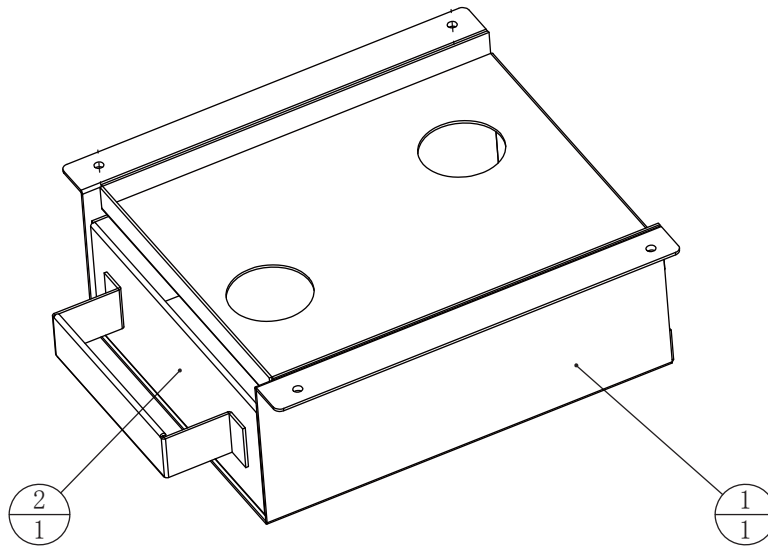


2	JBS-0222A02	flume		1	1.1.WA32A00580
1	JBS-0222A01	flume fixed plate		1	1.1.WA32A00570
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.23 Coin door assembly(JBS-0223000)

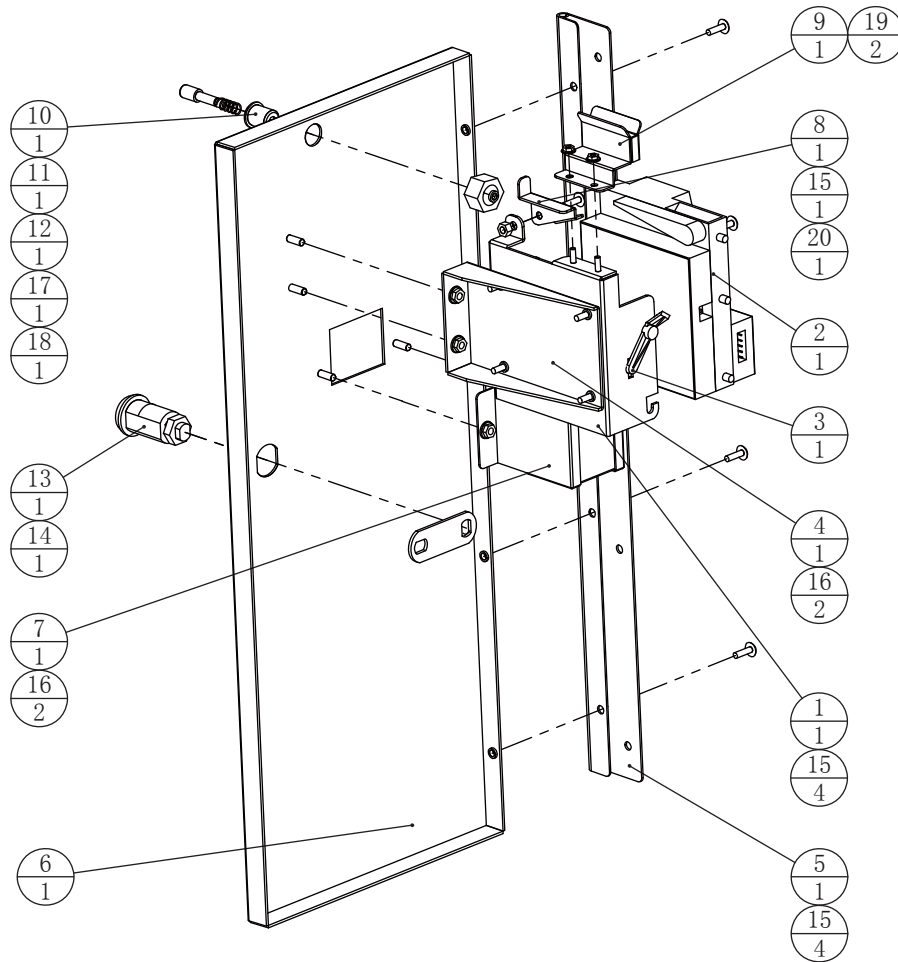


20		Self-Locking Nuts	M4 (Galvanization)	1	
19		hex head cap screw	M3 (colour)	2	
18		open ring (E buckle)	M4(black)	1	
17		hexagon nut	M12 (black)	1	
16		hex head cap screw	M4 (colour)	4	
15		cross the big flat head screw	M4*12 (black)	9	
14		locking plate	locking plate	1	1.4.SJ120018
13		Lingzhi door lock (28mm)	1810K	1	1.4.SJ120012
12	JBS-0223A10	cancel_spring	60Mn	1	1.1.WA32A00680
11	JBS-0223A09	return_lever	Q235	1	1.1.WA32A00670
10	JBS-0223A08	Coin returning pole cover	Q235	1	1.1.WA32A00660
9	JBS-0223A07	take coins slide		1	1.1.WA32A00650
8	JBS-0223A06	Coin returning pressing plate	Mirror SUS430-1.2T	1	1.1.WA32A00640
7	JBS-0223A05	refund mechanism		1	1.1.WA32A00630
6	JBS-0223A04	servise_door	SPCC-1.5T	1	1.1.WA32A00620
5	JBS-0223A03	Coin door hinge	SPCC-1.2T	1	1.1.WA32A00610
4	JBS-0223A02	Coin holder fixing plate	SECC-1.5T	1	1.1.WA32A00600
3		coin slot fixed button		1	1.8.AA000050
2		electronic coin	TW-800III	1	1.4.TB100050
1	JBS-0223A01	Coin rack	SECC-1.5T	1	1.1.WA32A00590
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.4.24 Fluid control valve assembly(JBS-0224000)

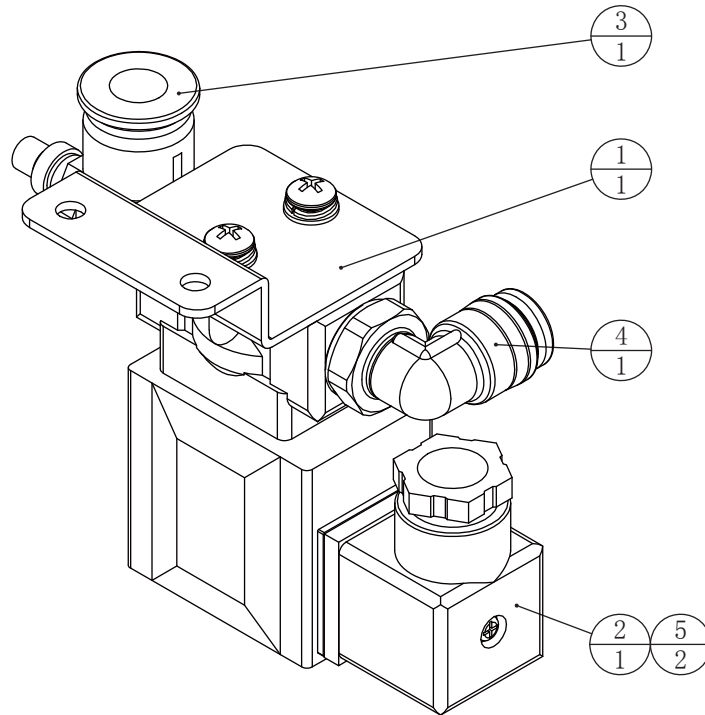


5		cross recessed fillister head three-combination screw	M5*12 (black)	2	
4		l type screw thread connector	APL10-04	1	1.4.JG072100
3		one-way throttle valve - pipe connector	ASL10-04B	1	1.4.JG09A020
2		fluids control valve	2KW050-15-F	1	1.4.JG09A040
1	SRH-0114A01	two in-exit electromagnetic valve fixed iron	SPCC-1.5T	1	1.1.WA16C00290
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.5 Air compressor door assembly(JBS-0300000)

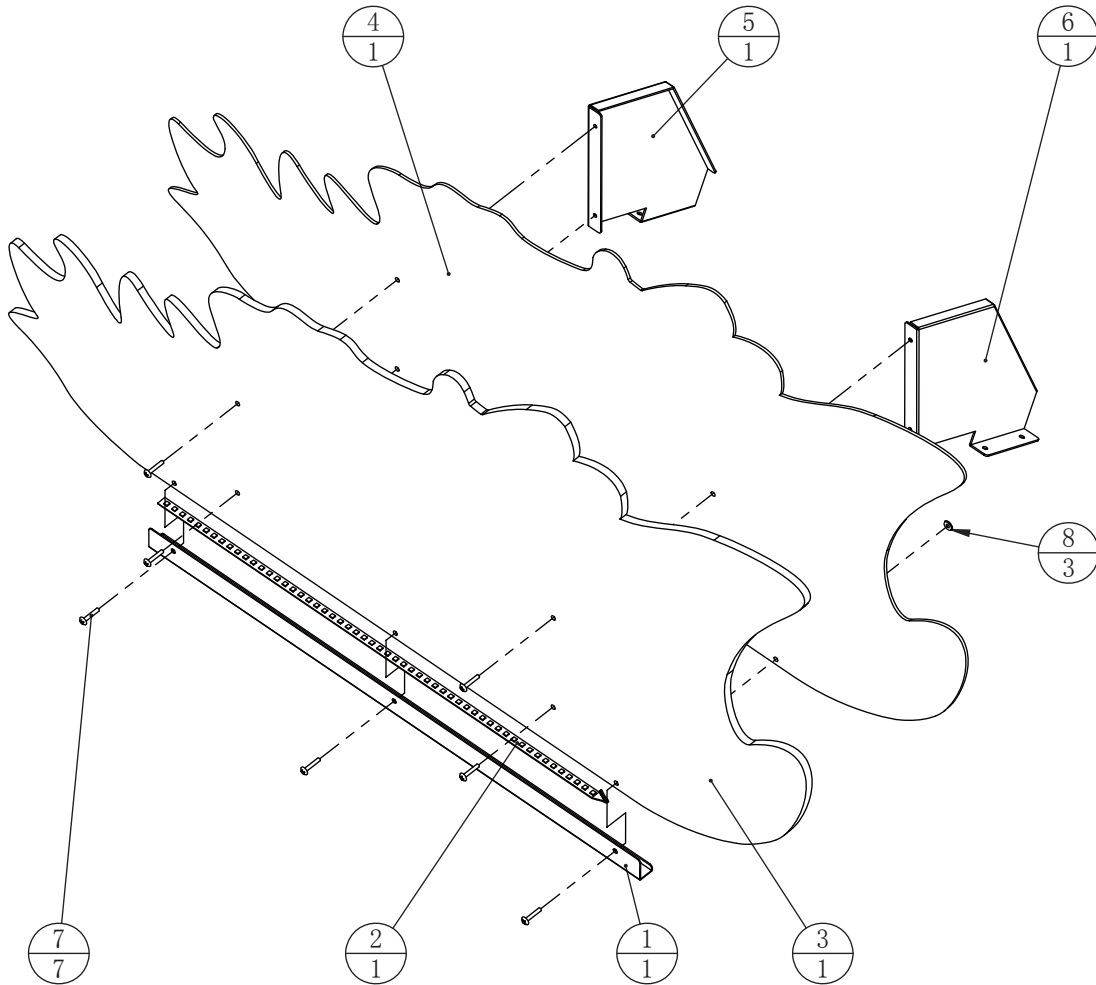


8		hex head cap screw	M4 (colour)	3	
7		cross the big flat head screw	M4*20 (chrome)	7	
6	JBS-0300A03	Kanban right brace	SPCC-1.5T	1	1.1.WA32A00710
5	JBS-0300A02	Kanban left brace	SPCC-1.5T	1	1.1.WA32A00700
4	JBS-P0001	Theme printing Kanban	PVC-1.0T	1	1.7.WA32A00040
3	JBS-0300D01	Theme Kanban	PMMA-5.0T	1	1.7.WA32A00030
2		5050 strip light	DC12V RGB60 light L=550mm	1	
1	JBS-0300A01	Kanban light belt fixing iron	SPCC-1.2T	1	1.1.WA32A00690
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.6 Air compressor door assembly (JBS-0400000)

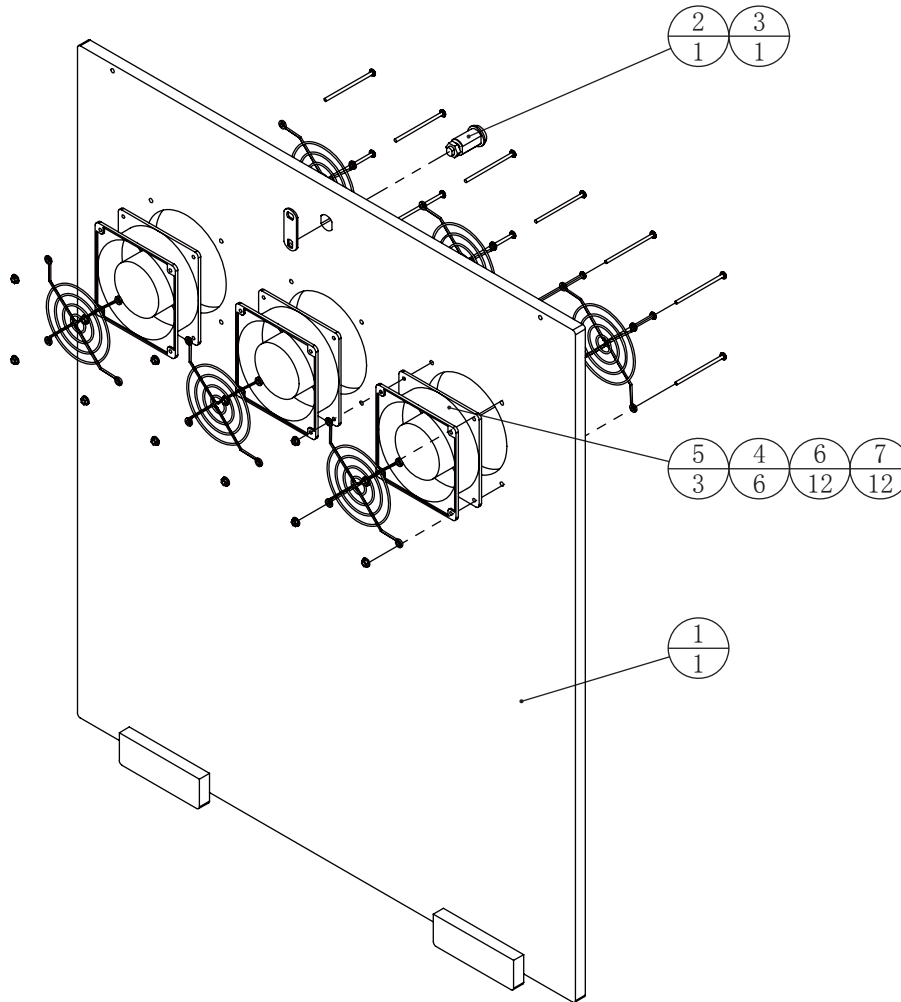


7		hex head cap screw	M4 (colour)	12	
6		cross recessed cheese head screws	M4*70 (chrome)	12	
5		fan with bearing	120*120/AC110V	3	1.4.FS200042
4		fan cover	120*120	6	1.4.FS300020
3		locking plate	locking plate	1	1.4.SJ120018
2		Lingzhi door lock (28mm)	1810K	1	1.4.SJ120012
1	JBS-0400B01	Air compressor door	MDF-15.0T	1	1.2.WA32A00070
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

6.7 Assembly of main machine door(JBS-0500000)

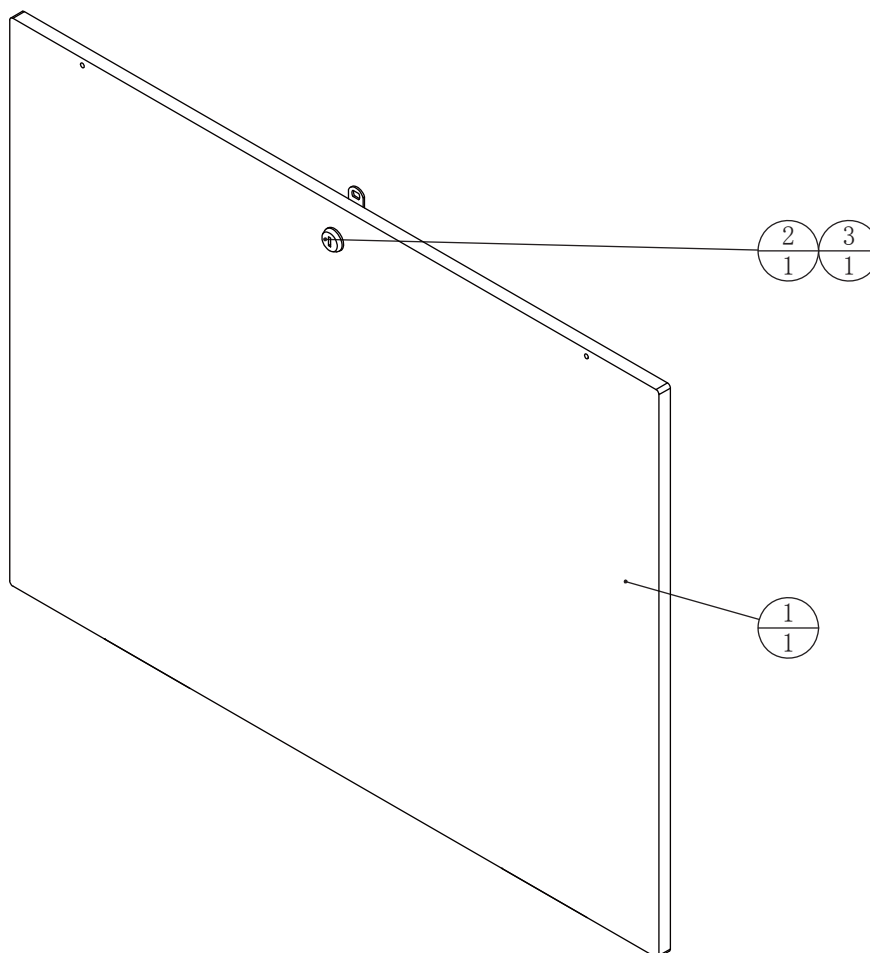


3		locking plate	locking plate	1	1.4.SJ120018
2		Lingzhi door lock (28mm)	1810K	1	1.4.SJ120012
1	JBS-0500B01	Main door	MDF-15.0T	1	1.2.WA32A00080
No.	Draw No.	Name	Material/Spec.	Qty.	Product Code

7. Printing Pattern

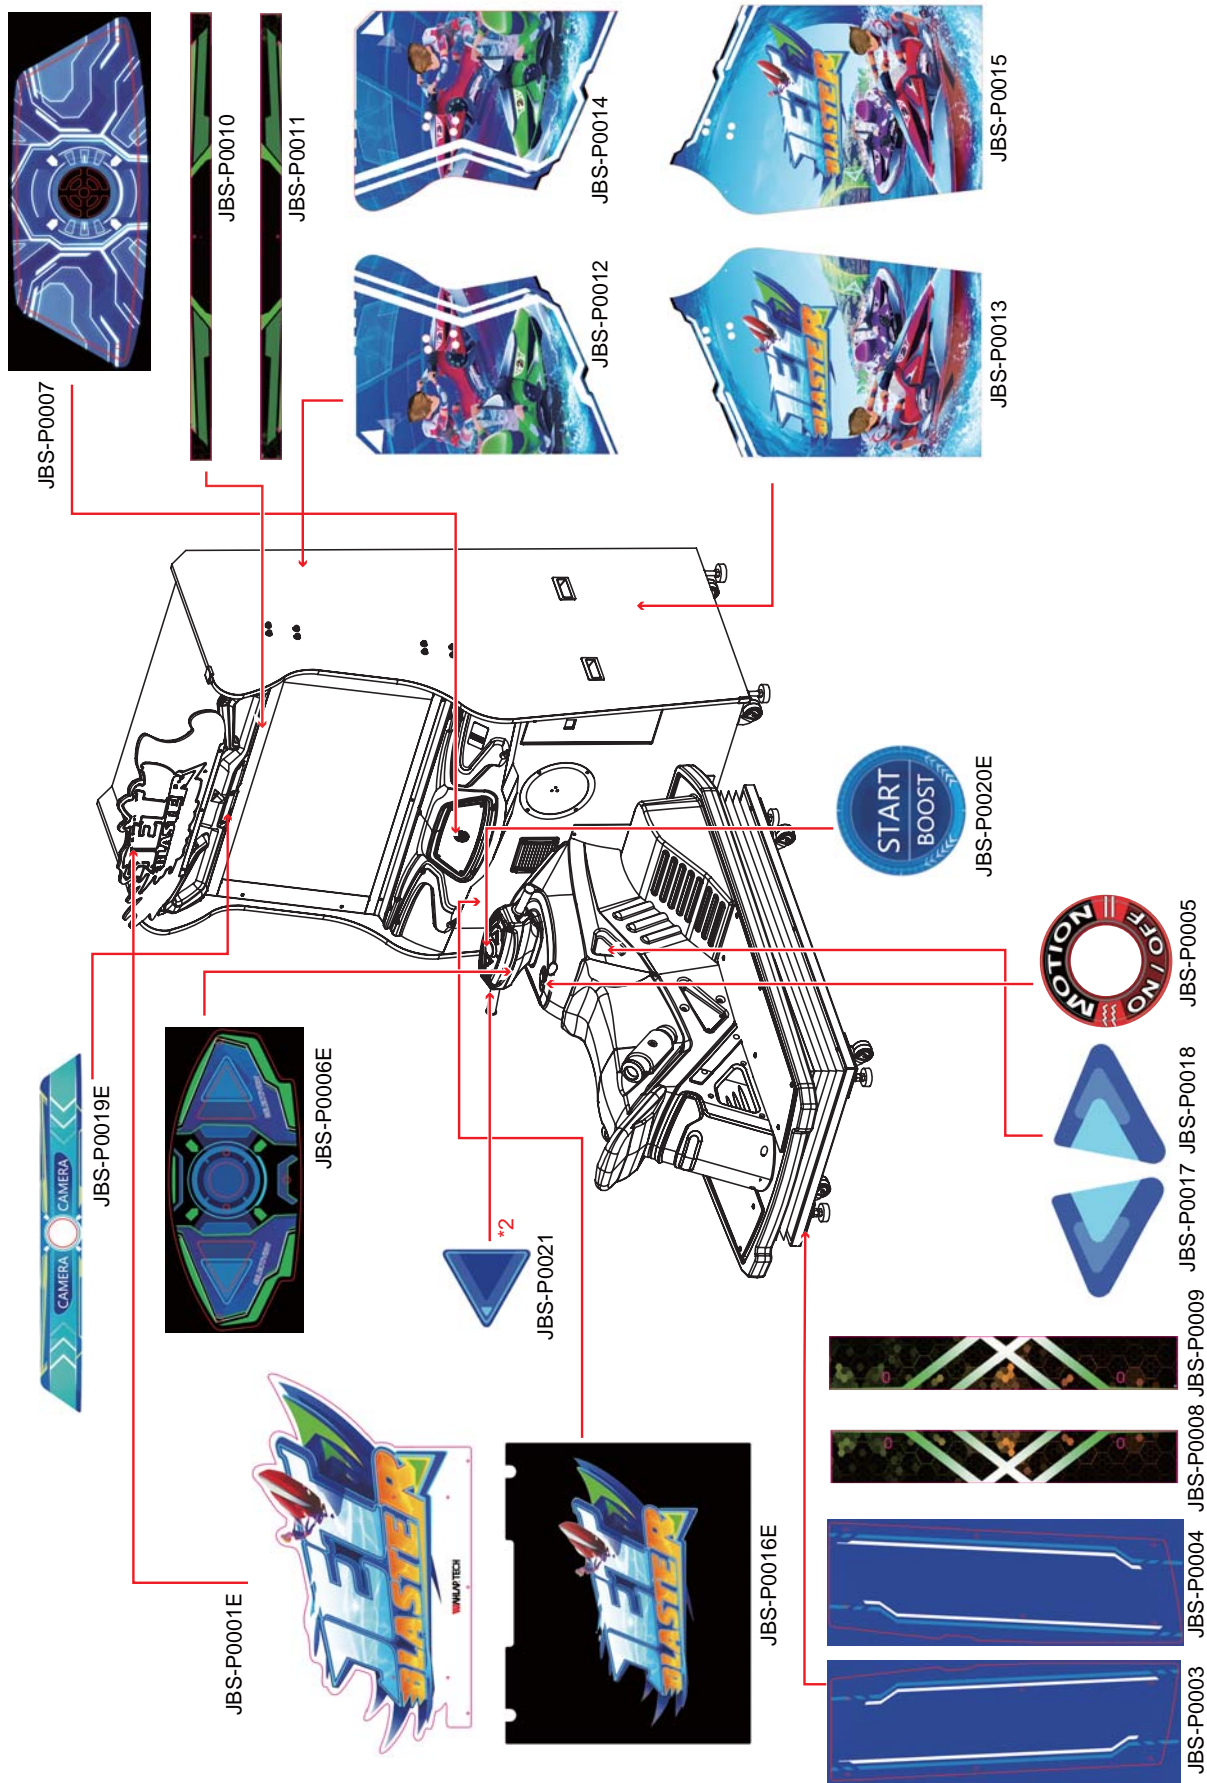


8. Wiring Diagram

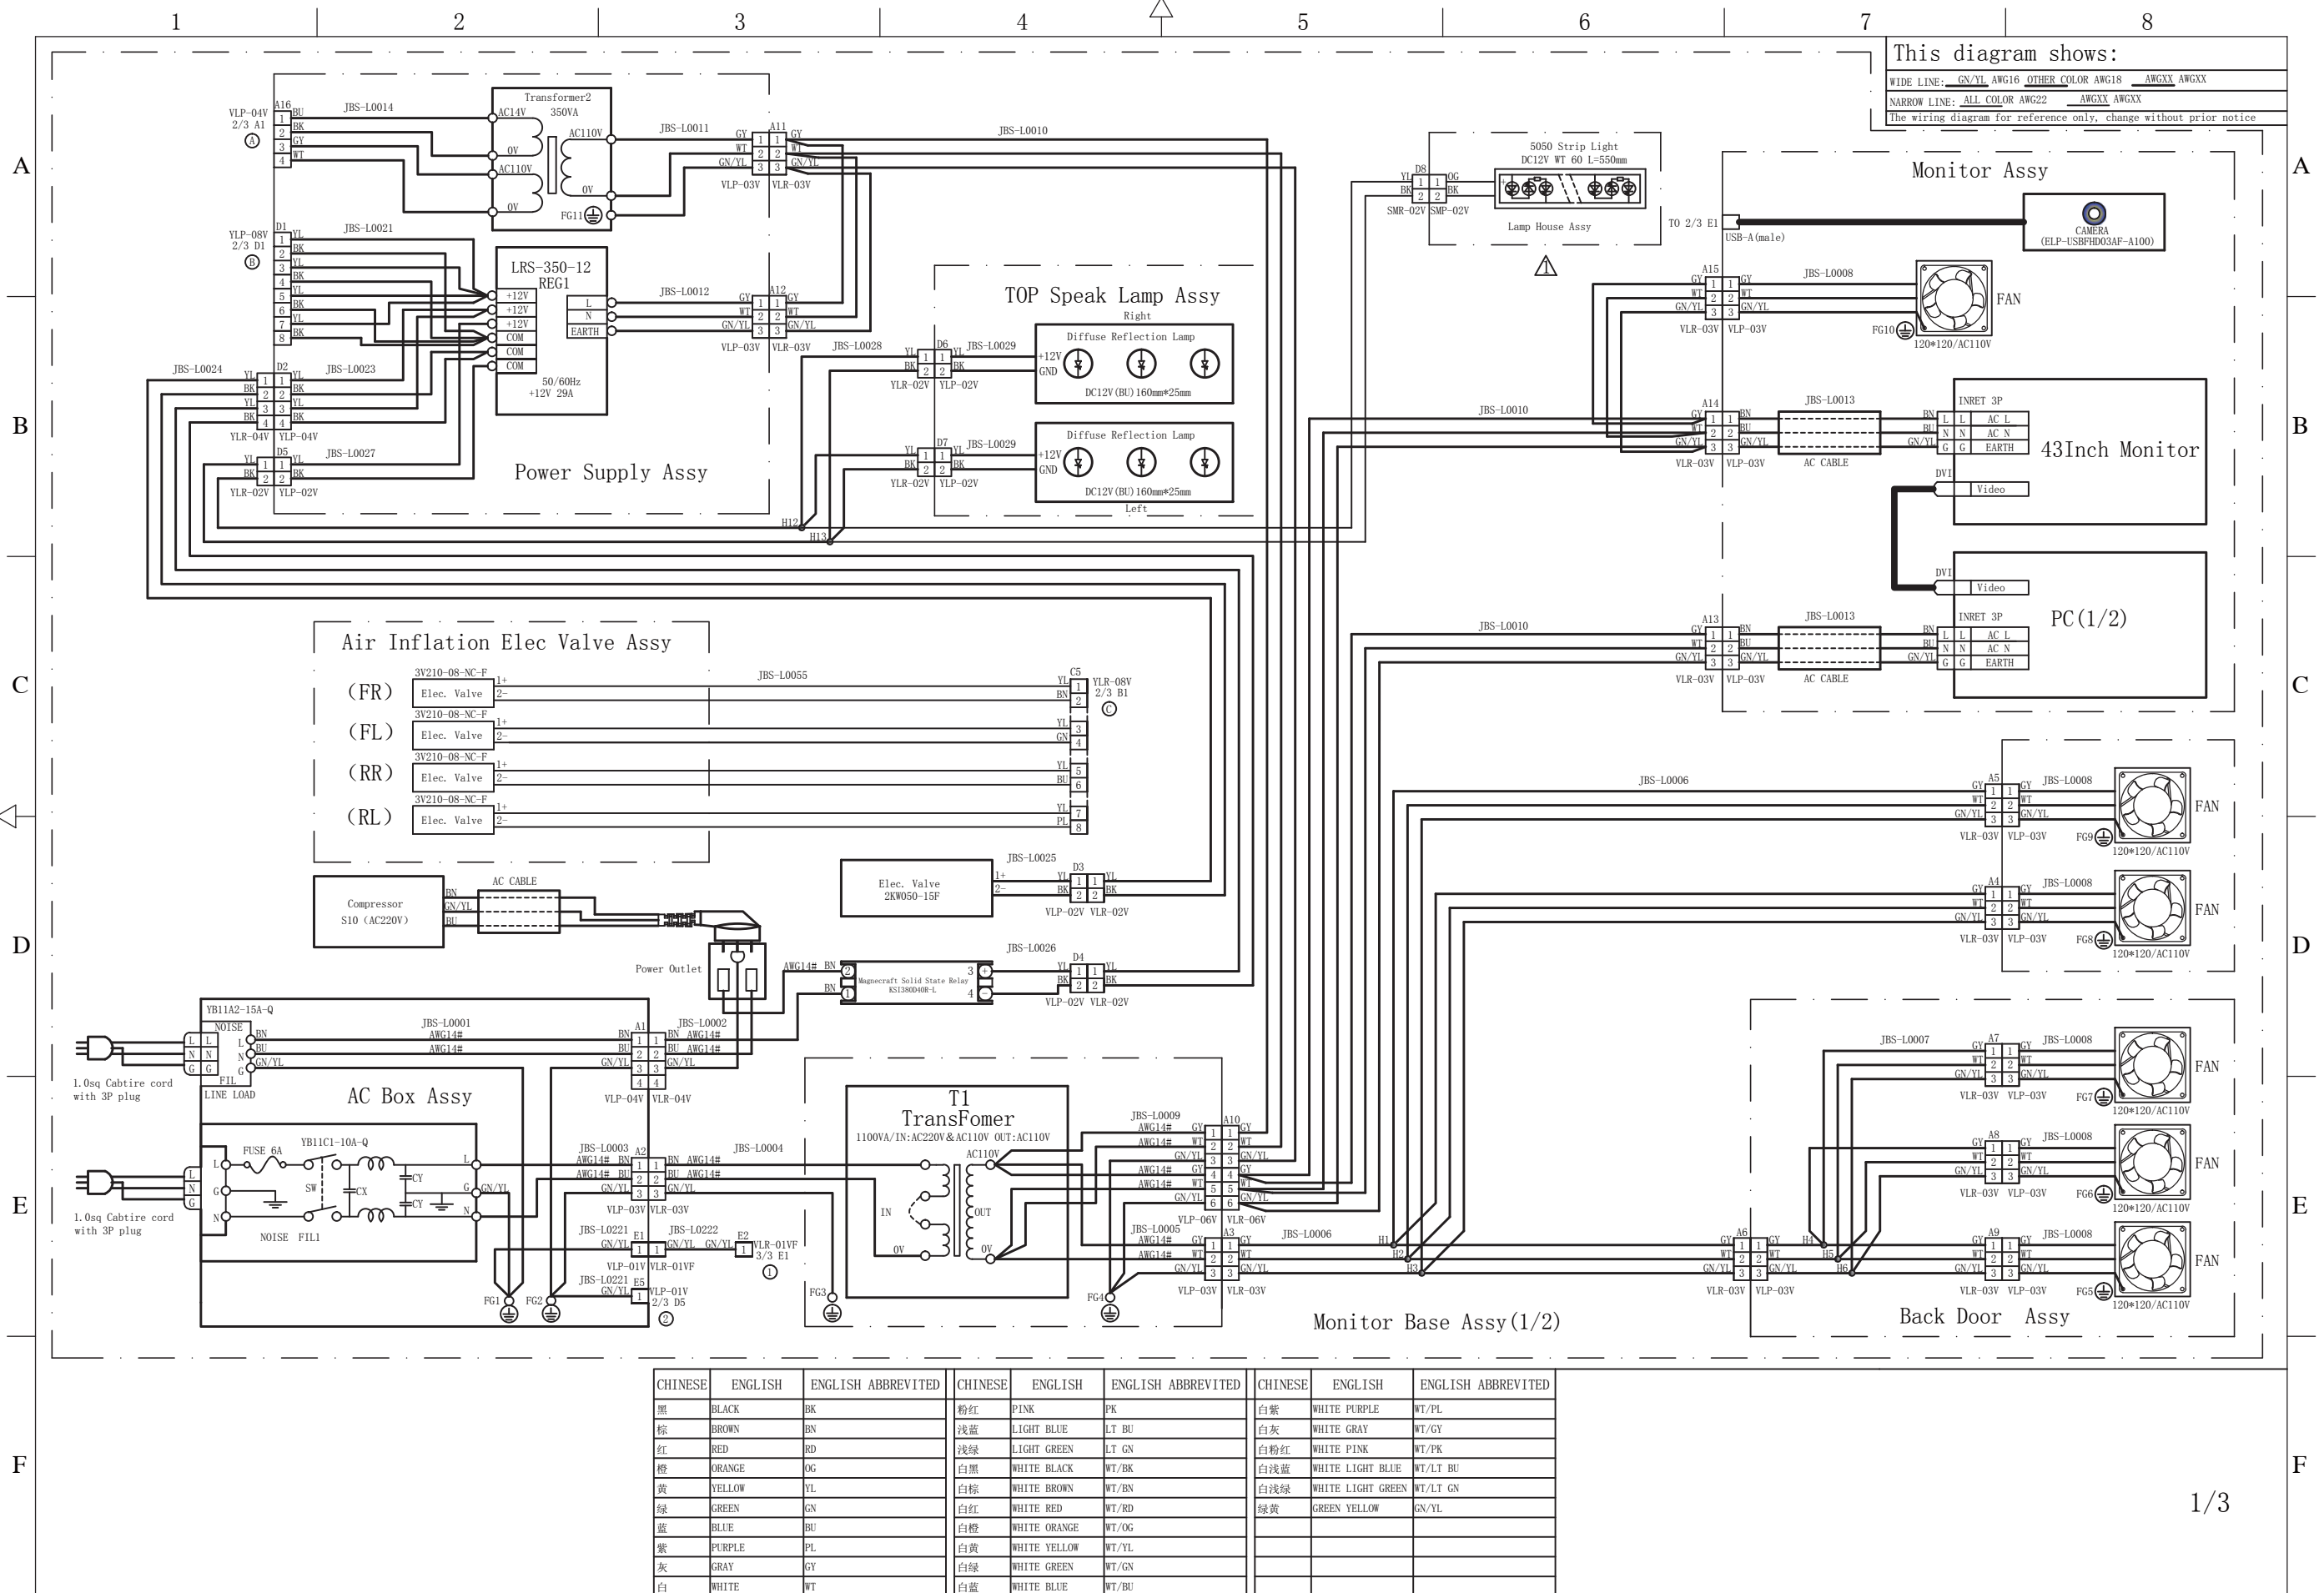

This diagram shows:
 WIDE LINE: GN/YL AWG16 OTHER COLOR AWG18 AWGXX AWGXX
 NARROW LINE: ALL COLOR AWG22 AWGXX AWGXX
 The wiring diagram for reference only, change without prior notice


CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED
黑	BLACK	BK	粉红	PINK	PK	白紫	WHITE PURPLE	WT/PL
棕	BROWN	BN	浅蓝	LIGHT BLUE	LT BU	白灰	WHITE GRAY	WT/GY
红	RED	RD	浅绿	LIGHT GREEN	LT GN	白粉红	WHITE PINK	WT/PK
橙	ORANGE	OG	白黑	WHITE BLACK	WT/BK	白浅蓝	WHITE LIGHT BLUE	WT/LT BU
黄	YELLOW	YL	白棕	WHITE BROWN	WT/BN	白浅绿	WHITE LIGHT GREEN	WT/LT GN
绿	GREEN	GN	白红	WHITE RED	WT/RD	绿黄	GREEN YELLOW	GN/YL
蓝	BLUE	BU	白橙	WHITE ORANGE	WT/OG			
紫	PURPLE	PL	白黄	WHITE YELLOW	WT/YL			
灰	GRAY	GY	白绿	WHITE GREEN	WT/GN			
白	WHITE	WT	白蓝	WHITE BLUE	WT/BU			

This diagram shows:
 WIDE LINE: GN/YL AWG16 OTHER COLOR AWG18 AWGX AWGX
 NARROW LINE: ALL COLOR AWG22 AWGX AWGX
 The wiring diagram for reference only, change without prior notice

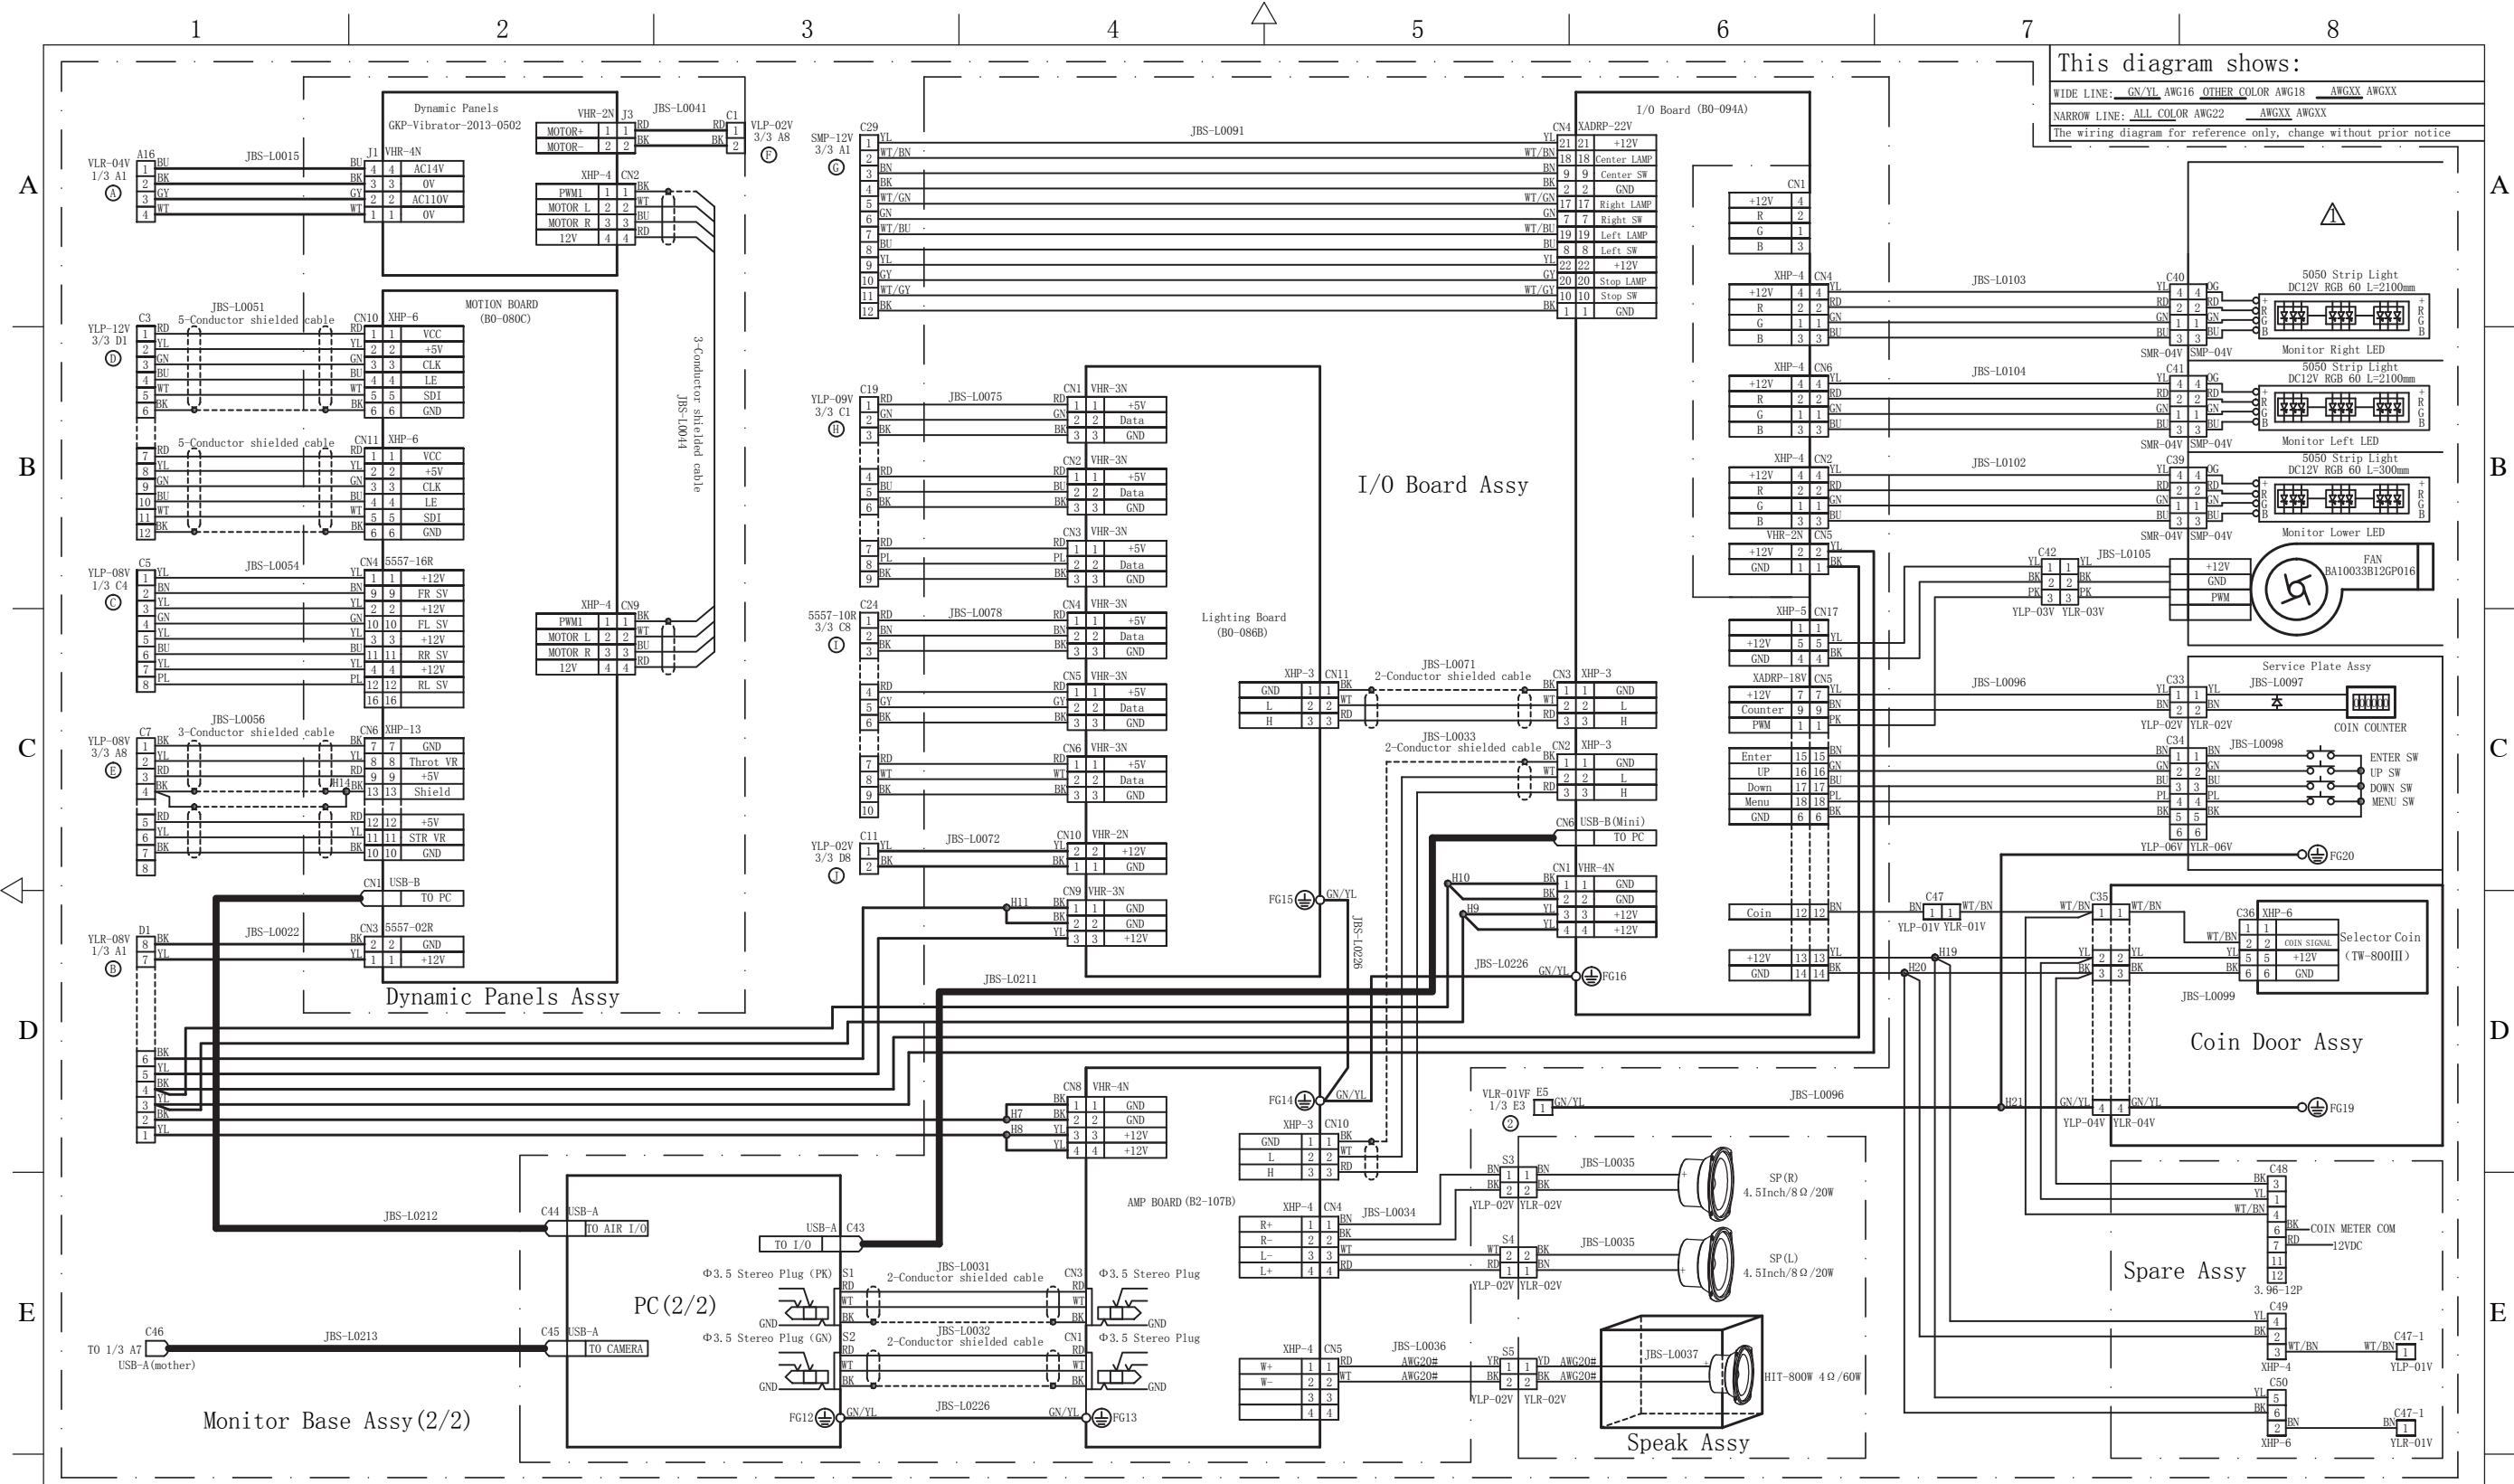

CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED
黑	BLACK	BK	粉红	PINK	PK	白紫	WHITE PURPLE	WT/PL
棕	BROWN	BN	浅蓝	LIGHT BLUE	LT BU	白灰	WHITE GRAY	WT/GY
红	RED	RD	浅绿	LIGHT GREEN	LT GN	白粉红	WHITE PINK	WT/PK
橙	ORANGE	OG	白黑	WHITE BLACK	WT/BK	白浅蓝	WHITE LIGHT BLUE	WT/LT BU
黄	YELLOW	YL	白棕	WHITE BROWN	WT/BN	白浅绿	WHITE LIGHT GREEN	WT/LT GN
绿	GREEN	GN	白红	WHITE RED	WT/RD	绿黄	GREEN YELLOW	GN/YL
蓝	BLUE	BU	白橙	WHITE ORANGE	WT/OG			
紫	PURPLE	PL	白黄	WHITE YELLOW	WT/YL			
灰	GRAY	GY	白绿	WHITE GREEN	WT/GN			
白	WHITE	WT	白蓝	WHITE BLUE	WT/BU			

This diagram shows:
 WIDE LINE: GN/YL AWG16 OTHER COLOR AWG18 AWGXX AWGXX
 NARROW LINE: ALL COLOR AWG22 AWGXX AWGXX
 The wiring diagram for reference only, change without prior notice

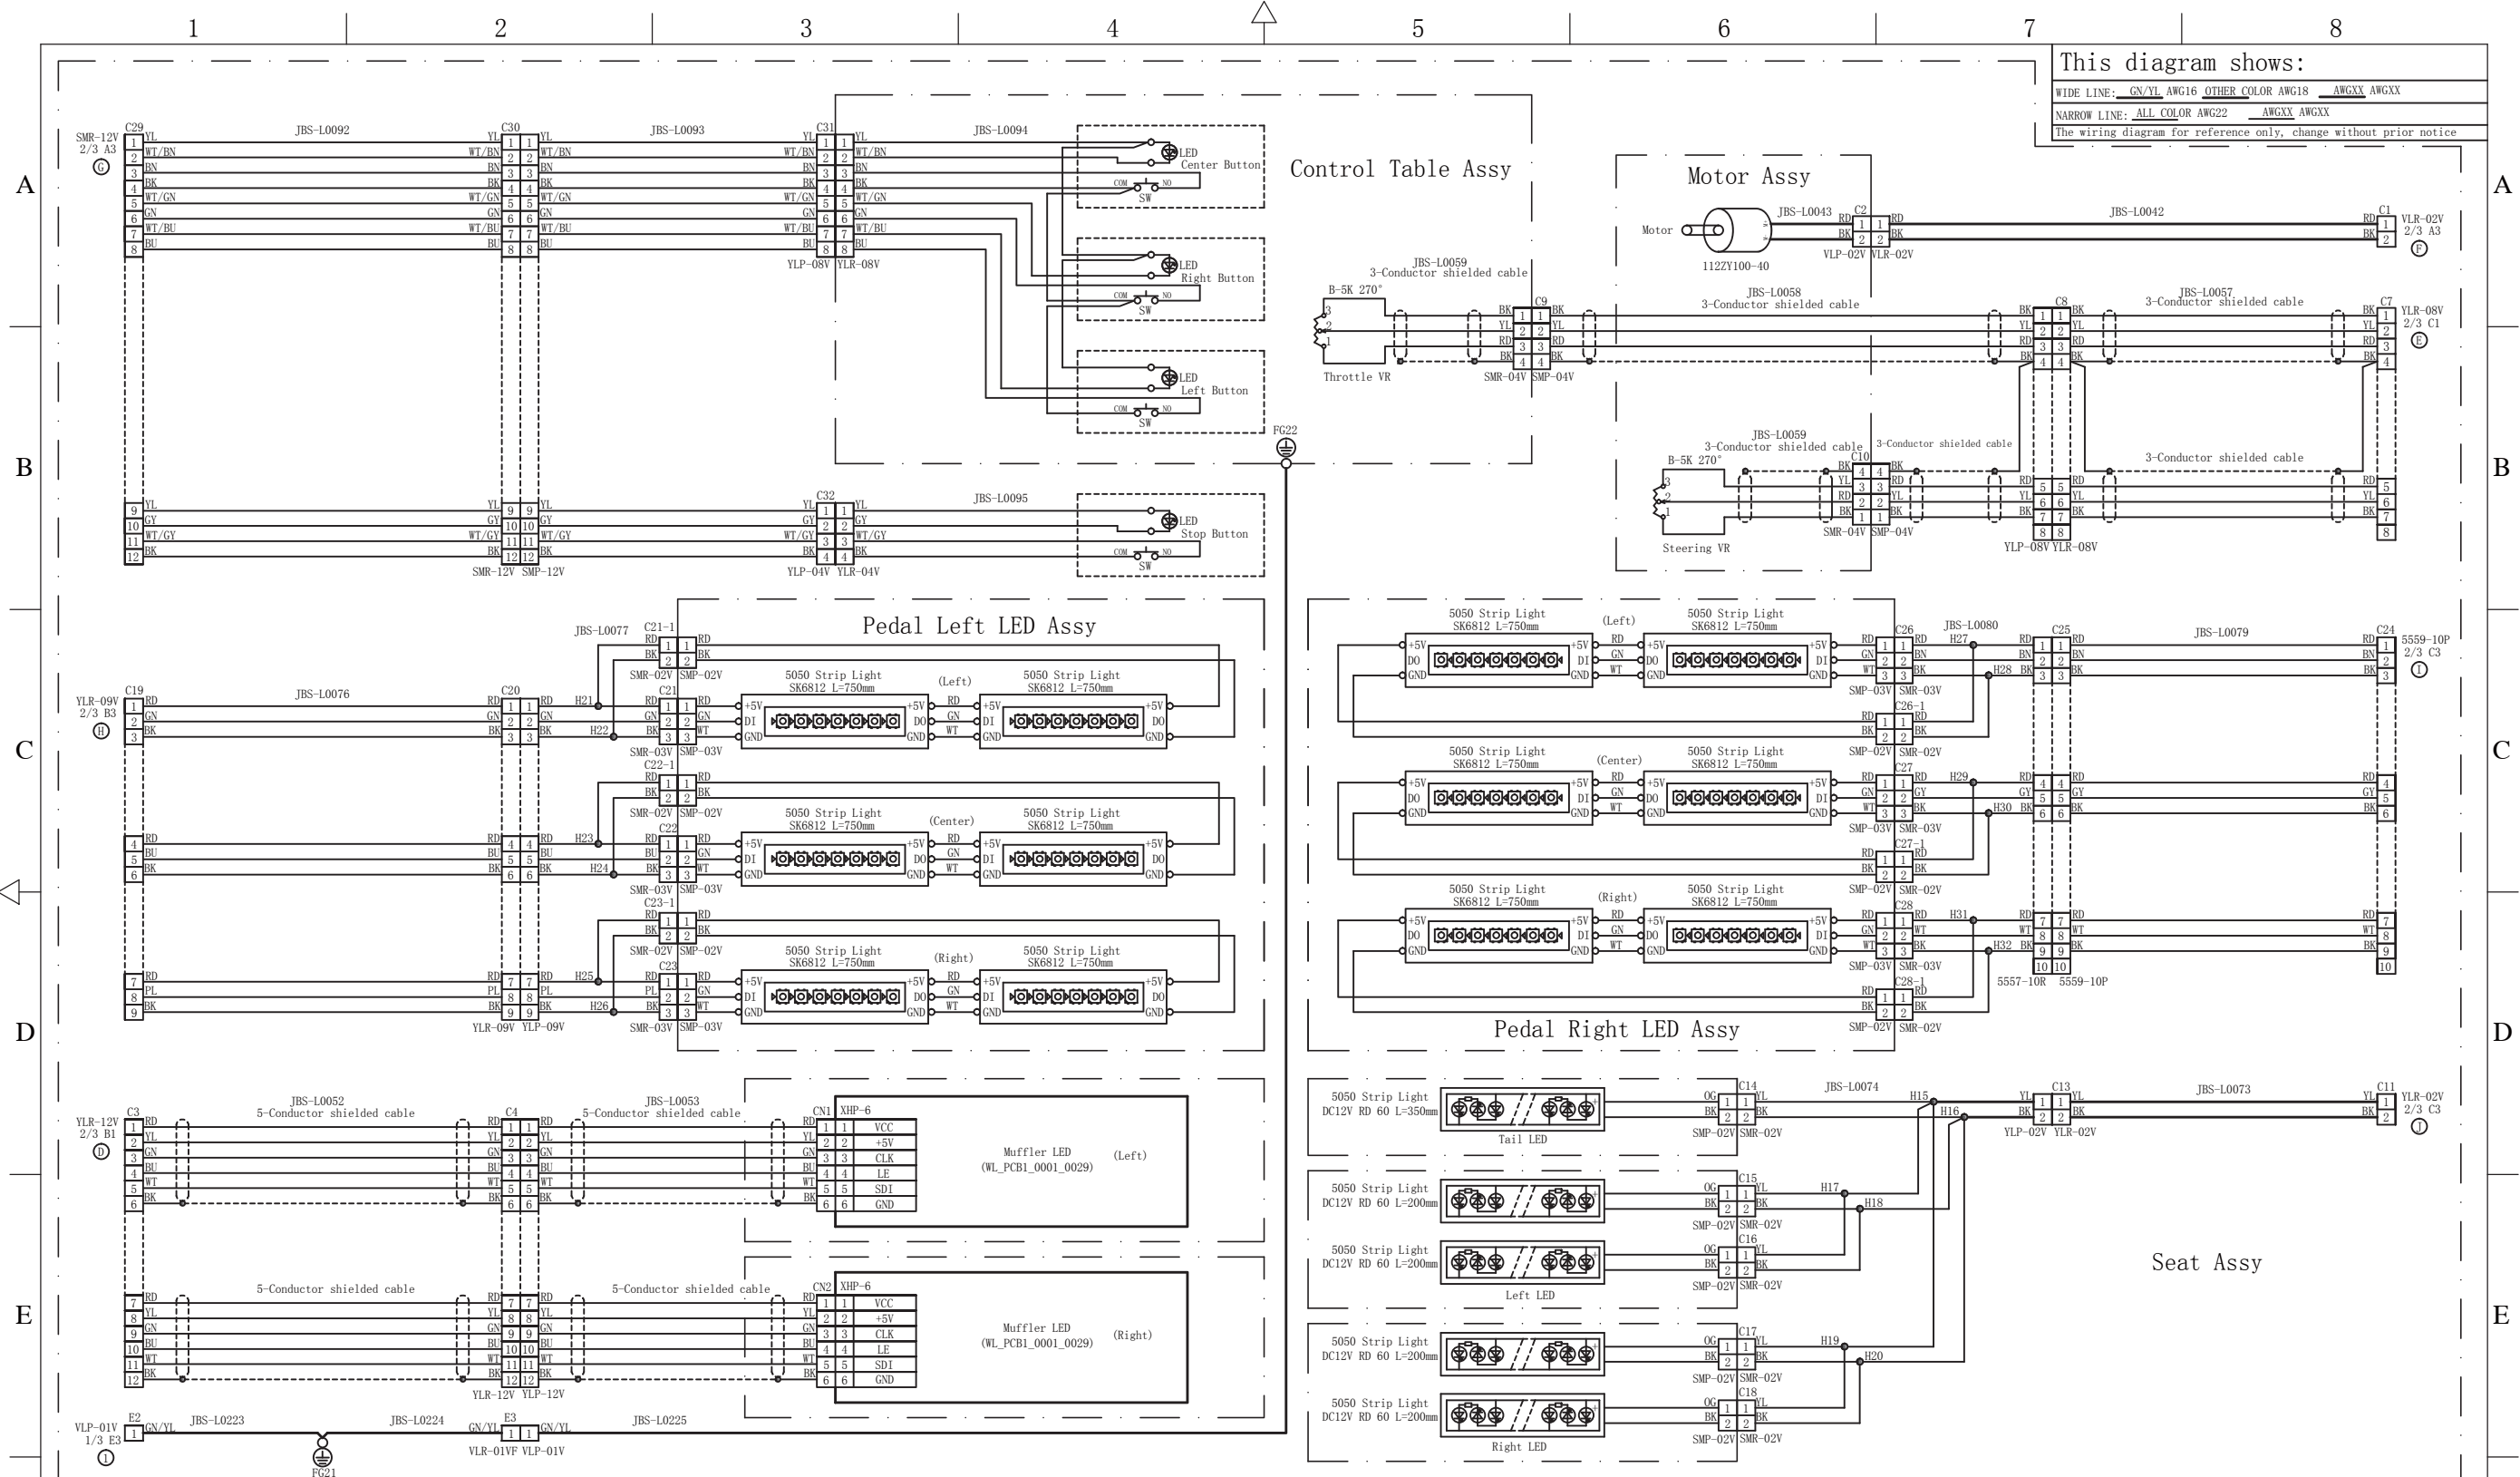

CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED	CHINESE	ENGLISH	ENGLISH ABBREVIATED
黑	BLACK	BK	粉红	PINK	PK	白紫	WHITE PURPLE	WT/PL
棕	BROWN	BN	浅蓝	LIGHT BLUE	LT BU	白灰	WHITE GRAY	WT/GY
红	RED	RD	浅绿	LIGHT GREEN	LT GN	白粉红	WHITE PINK	WT/PK
橙	ORANGE	OG	白黑	WHITE BLACK	WT/BK	白浅蓝	WHITE LIGHT BLUE	WT/LT BU
黄	YELLOW	YL	白棕	WHITE BROWN	WT/BN	白浅绿	WHITE LIGHT GREEN	WT/LT GN
绿	GREEN	GN	白红	WHITE RED	WT/RD	绿黄	GREEN YELLOW	GN/YL
蓝	BLUE	BU	白橙	WHITE ORANGE	WT/OG			
紫	PURPLE	PL	白黄	WHITE YELLOW	WT/YL			
灰	GRAY	GY	白绿	WHITE GREEN	WT/GN			
白	WHITE	WT	白蓝	WHITE BLUE	WT/BU			

After-sales Service

Honorable customer !

Thank you for purchasing our product !
For your benefits , if you find any fault during the operation of the product, please use a technician who obtains a certificate related to mechanical engineering , electrical engineering or who engages in routine maintenance, repair and management of amusement machine to check the machine and inform us the fault in a timely manner. Our company will take corresponding measures to assist you to solve the problem promptly.

NOTICE: Do not dismount or replace any part of the machine without our technician's permission, or you will solely undertake the consequence !

Please pay attention to our contact information as follow:


Guangzhou Wahlap Technology Corporation Limited

Add: H1-H6 Startoon city, Yingxing Dong Road, Donghuan Street, Panyu,
Guangzhou, China

Tel: +86 20 39226222 Fax: +86 20 39226300

Service Hotline: 400-848-9222

<http://www.wahlap.com>

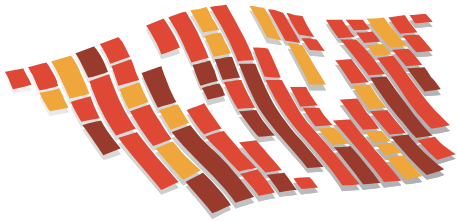

JBS-P0035E



Ver. 1.00

WAHLAP TECH

※ The specifications and operation instructions in this Manual are subject to change without notice for reasons such as performance.