

DSM ARCADE

Perfect★Pour

Perfect Pour: Pabst Blue Ribbon Edition Arcade Manual

Last Updated 05/19/26

Contents

- Cabinet Access
- Options Menu
- Operator Mode
- Updates / Connecting to the Internet
- I-PAC2 Pinout
- Technical Info
- Maintenance Guidelines
- Contact

Cabinet Access

There are 3 main ways to access the interior of the Perfect Pour arcade cabinet:

- Coin Door Access
- Rear Door Access
- Control Panel Access
 - The entire control panel can fold forward for convenient servicing. In order to do this, you must first undo two safety latches. They can be accessed by opening the coin door and reaching inside, under the interior of the control panel. You must fully detach the latches on each side. After which, gently pull forward on the tap handles or drink trays to swing the control panel down.

Options Menu

The button to access the Options Menu is located inside the upper coin door.

Pressing the button will show the following options:

- **Free Play**

- On/Off
- **Price Per Play**
 - Cost to play a single game.
- **Lives Per Play**
 - Determines number of “Lives” per game.
- **Game Mode**
 - Classic
 - Traditional arcade play where your skill determines how long you last. Serve customers before they get thirsty
 - Timed
 - A fast-paced challenge across three timed rounds. Serve as many customers as possible before time runs out.
- **Customer Timer**
 - Length of time until a customer gets too thirsty, causing the player to lose a life.
- **Skip Slot Machine Bonus**
 - Classic Mode includes a Slot Machine Bonus Round. Adjust to enable/disable.
- **Max 2 Inputs at Once**
 - Prevents cooperative play.
- **Show Glass Before Pouring**
 - Empty glass appears with customer. When disabled, player doesn’t know what they are pouring until tap handle is pulled.
- **Game Volume**
 - Control volume during gameplay. Amp knob control is also available behind the coin door.
- **Attract Mode Volume**
 - Control volume during Attract Mode.
- **Show Score As Currency**
 - By default, score is shown as monetary tips. Disable to switch to points.
- **Reward Menu**
 - Perfect Pour PBR features an optional incentive system built for location-based rewards. This menu allows for location-provided rewards based on gameplay performance. Incentives are disabled by default and can be enabled or adjusted by the operator at any time.
 - You can set:
 - Difficulty level for earning the incentive.
 - Daily cap for incentives given.
 - Placeholder text for incentive item: Koozie / Hat / Shirt / Generic
 - All incentives are provided and fulfilled solely by the location operator.
- **Reset Scores Weekly**
 - In order to keep high scores competitive and attainable for newer players, some operators prefer to reset high scores weekly.
 - **Weekly Reset Day**
 - Choose the day of the week when high scores will reset.
 - **Weekly Reset Time**

- Choose the time of day when high scores will reset.
- **View Analytics**
 - The Analytics screen allows you to view a play data and revenue report for a selected time period.
- **Reset to Defaults**
 - Reset all options to their defaults.
- **Reset High Scores**
 - Reset the high scores.
- **Save & Exit**
 - Save all changes and exit the Options Menu.

Operator Mode

In order to connect to WiFi, you must enter Operator Mode.

To access Operator Mode:

- Connect a keyboard and mouse to the USB hub located behind the coin door
- Once connected, hit Ctrl+Alt+F3 then Enter
- A black and white screen containing only text will appear. Type “operator-mode on” and press Enter. Please note the dash between *operator* and *mode*.
- The computer will reboot into Operator Mode.

Updates / Connecting to the Internet

Connecting your Perfect Pour arcade cabinet to the internet ensures that you have the latest updates. You can check your version number in the Options Menu. The latest version of Perfect Pour is always listed at <https://dsmarcade.com/pages/support>.

In order to connect to WiFi, you must go into Operator Mode. See the Operator Mode section of this manual for more information.


Once in Operator Mode:

- Click the top-right corner of the screen.
- Click the right arrow next to “WiFi”.
- Choose your network and enter your password to connect.
- The WiFi icon should update to show a signal level from the selected network.
- Click the Exit Operator Mode shortcut on the desktop.

The game will now reboot. If there is an update, it will automatically install. Please reboot your Perfect Pour arcade cabinet periodically to give the game a chance to update.

Perfect Pour Pinout

The Perfect Pour Arcade Cabinet uses a control board called an I-PAC2. It converts all arcade button presses to keyboard strokes for the arcade PC. Below is a pinout diagram to ensure your controls are wired correctly.

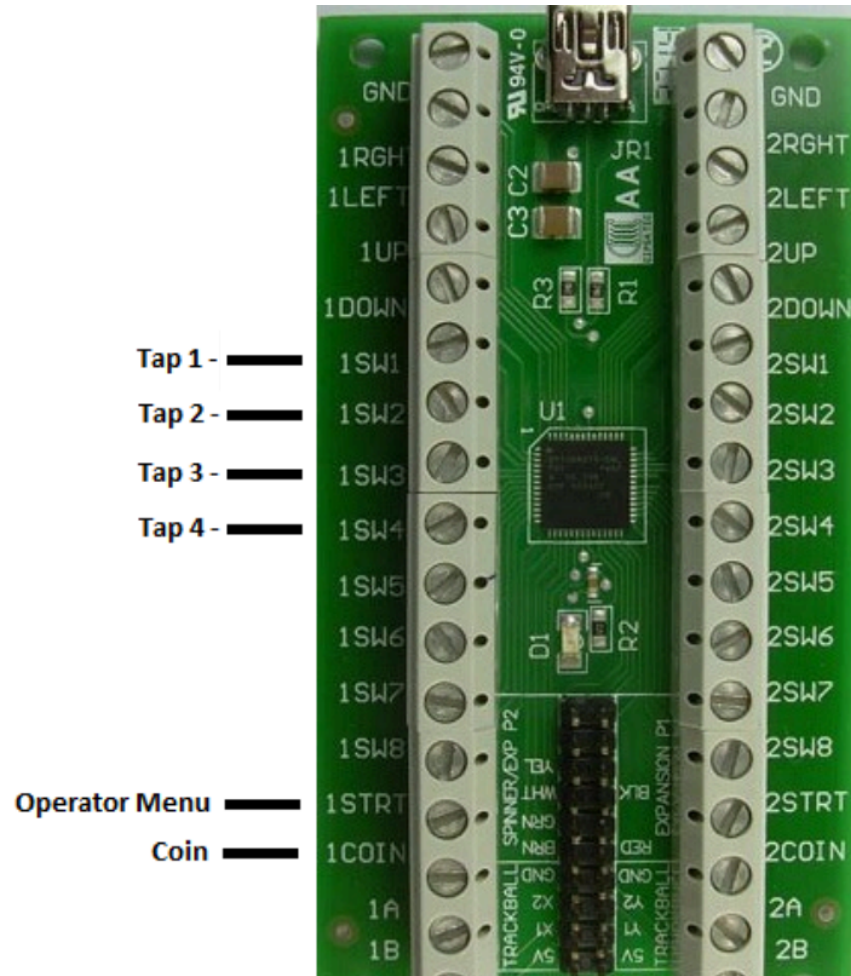

Technical Info

Electrical Requirements

- Input power: Please see the rear label on your machine for power requirements.
- Use a grounded outlet only.
- Do not connect additional high-draw equipment to the power strip inside the cabinet.

Ventilation Requirements

- Ensure adequate airflow around the cabinet to prevent overheating.
- Avoid placing the cabinet near heat sources such as heaters, direct sunlight, or other high-heat equipment.

Placement and Stability Requirements

- Place the cabinet on a flat, level surface.
- Ensure all feet are fully in contact with the floor to prevent wobbling.
- Do not place on unstable platforms or uneven flooring.

Maintenance Guidelines

Cleaning

- Power off and unplug the cabinet before cleaning.
- Use a soft, dry or slightly damp cloth to clean exterior surfaces.
- Avoid using harsh chemicals, solvents, or abrasive materials on artwork, screen, or controls.
- Clean the monitor using a microfiber cloth designed for screens.

Preventative Maintenance

- Periodically inspect power cables and connections for wear or damage.
- Ensure PC ventilation is dust free.
- Check that all external hardware (joystick handles, drink trays) remain secure.
- Reboot the cabinet periodically to allow software updates to install.

When to Contact Support

- Game fails to power on or intermittently loses power.
- Display issues such as no signal.
- Controls not responding or behaving inconsistently.
- Cabinet running excessively hot or shutting down unexpectedly.

If any of the above issues occur, discontinue use and contact support@dsmarcade.com for assistance.

Contact:

Contact support@dsmarcade.com for any additional questions you may have about your Perfect Pour Arcade Cabinet. The standard warranty is 12 months cabinetry, 9 months electronics. Warranty starts on the day of delivery. Support and repair options are always available, regardless of warranty.