



**MINECRAFT DUNGEONS ARCADE
SERIES 5 RELEASE
KIT BULLETIN
(REVISION A – 10-20-25)**

**IMPORTANT: TO USE SERIES 5 CARDS IN
MINECRAFT DUNGEONS ARCADE, SOFTWARE
UPDATE IS REQUIRED. UPON UPDATE, CARDS FROM
SERIES 1-4 WILL CONTINUE TO FUNCTION.**

For Additional Assistance, Please Contact Betson Enterprises at 1-800-753-2513.

Kit Description: 4P GAME

- (1) MDA V5.09 USB INSTALLER (RT P/N: 90-19-495-5)
- (1) SERIES 5 BELOW LCD TRANSLITE (RT P/N: R90-13-343)
- (2) SERIES 5 QR CODE DECAL (RT P/N: R90-13-345)
- (1) INSTALLATION INSTRUCTIONS BULLETIN (RT P/N: R90-12-53)

Kit Description: 2P GAME


- (1) MDA V5.09 USB INSTALLER (RT P/N: 90-19-495-5)
- (1) SERIES 5 SPEAKER PANEL TRANSLITE (RT P/N: R90-13-344)
- (1) INSTALLATION INSTRUCTIONS BULLETIN (RT P/N: R90-12-53)

Required Tools:

- (1) DRILL OR SCREWDRIVER W/ TT15 TAMPERPROOF TORX BIT


SOFTWARE UPDATE PROCEDURE: (~10-15 MINUTES TO COMPLETE)

NOTE: COINUP® CONNECTED GAMES RECEIVE AUTOMATIC SOFTWARE UPDATES AND MAY ALREADY BE UPDATED TO SERIES 5 SOFTWARE (V5.09 AND ABOVE) BY THE TIME YOU RECEIVE THIS KIT. BEFORE PROCEEDING WITH USB INSTALLER UPDATE, CHECK VERSION NUMBER IN UPPER LEFT CORNER OF TEST MENU.

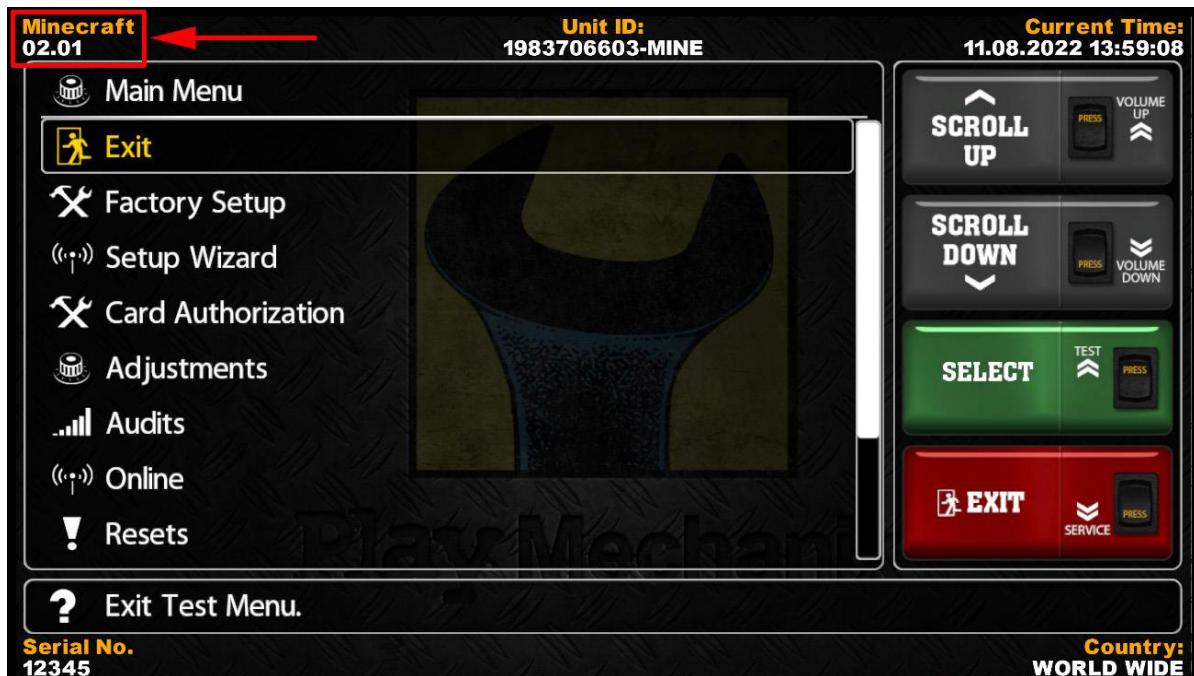


1. **WITH MACHINE POWERED OFF, PLUG USB DRIVE INTO OPEN USB SLOT ON TEST MENU BRACKET LOCATED BEHIND UPPER COIN DOOR BETWEEN P1/BLUE & P2/RED POSITIONS OF CONSOLE CABINET. ALTERNATIVELY, USB DRIVE CAN BE PLUGGED INTO USB 3.0 SLOT ON PC, ACCESSIBLE THROUGH LOWER BACK DOORS.**
2. **POWER CYCLE MACHINE USING ROCKER SWITCH AT BACK OF CONSOLE CABINET.**
3. **SOFTWARE UPDATE WILL BEGIN AUTOMATICALLY. CHECK PROGRESS PERIODICALLY. DO NOT INTERRUPT POWER OR RESET THE GAME DURING UPDATE.**
4. **WHEN THE INSTALL IS COMPLETE, A CONFIRMATION MESSAGE WILL APPEAR. NEXT:**
 - a. **REMOVE USB DRIVE.**
 - b. **POWER OFF MACHINE USING ROCKER SWITCH.**
 - c. **WAIT 30 SECONDS AND POWER CYCLE MACHINE.**
5. **ALLOW GAME TO RUN ITS FIRST BOOT PROCESS (THIS CAN TAKE SOME TIME).**

4P GAME ARTWORK UPDATE PROCEDURE: (~5-10 MINUTES TO COMPLETE)

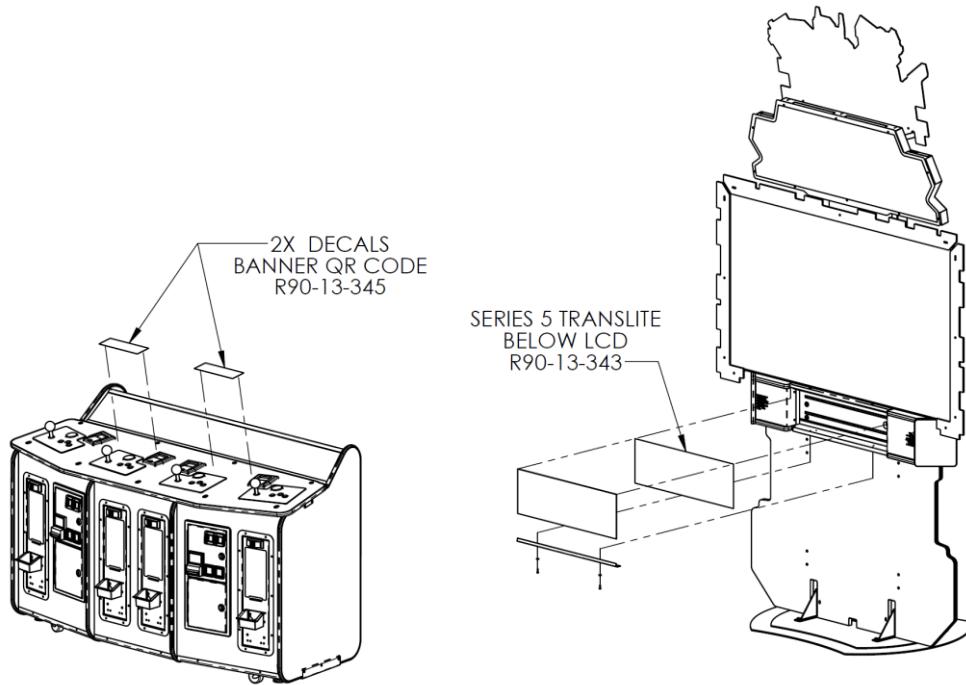

- **TRANSLITE SWAP (ARTWORK BELOW LCD ON STAND ASSEMBLY):**
 1. **USE TT15 TAMPERPROOF TORX BIT AND SCREWDRIVER TO REMOVE (2) SCREWS AND WASHERS SECURING BOTTOM BRACKET, CURRENT TRANSLITE AND CLEAR LENS (NOTE: TOP BRACKET MAY ALSO NEED TO BE LOOSENED).**
 2. **REUSE SCREWS AND WASHERS TO INSTALL NEW SERIES 5 TRANSLITE (R90-13-343) BEHIND CLEAR LENS WITH TT15 TAMPERPROOF TORX BIT AND SCREWDRIVER.**
- **QR DECAL INSTALLATION (ON CONTROL PANEL):**
 3. **CLEAN CONTROL PANEL SURFACE AS NEEDED. LOCATE (2) QR CODE DECALS (R90-13-345: 10" X 3") AND REMOVE PROTECTIVE BACKING TO EXPOSE ADHESIVE.**
 4. **FIRMLY PLACE DECALS IN SUGGESTED AREAS ABOVE P2/RED AND P3/GREEN POSITIONS ON CONTROL PANEL, CENTERING THE DECALS BETWEEN THE GREY CARD SCANNERS. IF CARD READERS (EMBED, SEMNOX, INTERCARD, ETC.) HAVE BEEN INSTALLED IN THESE AREAS, PLACE ONE OR BOTH DECALS IN A PLACE THAT ALLOWS FOR CONVENIENT SCANNING OF THE QR CODE.**
 - a. **THE QR CODE, WHEN SCANNED WITH SMARTPHONE, WILL LINK TO A VIRTUAL SERIES 5 BANNER, SHOWCASING ALL CARDS IN THE SET.**

2P GAME ARTWORK UPDATE PROCEDURE: (~5-10 MINUTES TO COMPLETE)

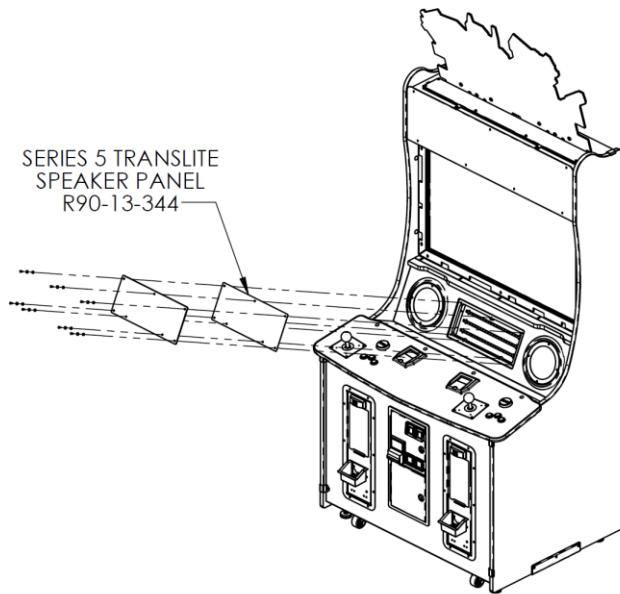

- ***TRANSLITE SWAP (ARTWORK BETWEEN SPEAKERS):***
- 1. ***USE TT15 TAMPERPROOF TORX BIT AND SCREWDRIVER TO REMOVE (7) SCREWS AND WASHERS SECURING CURRENT TRANSLITE AND CLEAR LENS.***
- 2. ***REUSE SCREWS AND WASHERS TO INSTALL NEW SERIES 5 TRANSLITE (R90-13-344) BEHIND CLEAR LENS WITH TT15 TAMPERPROOF TORX BIT AND SCREWDRIVER.***

MINECRAFT DUNGEONS ARCADE SERIES 5 FAQ:

Q: DOES SERIES 5 FEATURE NEW COLLECTABLE CARDS?

A: YES, WITH SERIES 5, MINECRAFT DUNGEONS ARCADE INTRODUCES THE FIRST-EVER “LEGENDARY” CARD – CHICKEN JOCKEY! INSPIRED BY THE VIRAL CHICKEN JOCKEY SENSATION AND DESIGNED TO ENCOURAGE REPEAT PLAY, THIS ULTRA-RARE, GOLD-HOLOGRAPHIC CARD UNLOCKS THE MOST POWERFUL PET IN THE GAME. MINECRAFT DUNGEONS ARCADE NOW OFFERS 144 UNIQUE CARDS FOR PLAYERS TO COLLECT.

Q: CAN PLAYERS STILL USE CARDS FROM SERIES 1, 2, 3, AND 4?

A: YES! PLAYERS CAN CONTINUE TO SCAN CARDS FROM SERIES 1, 2, 3, AND 4 IN ADDITION TO THE NEW SERIES 5 CARDS.

Q: WILL I NEED TO UPDATE MY SOFTWARE TO USE SERIES 5 CARDS?

A: YES, SUPPORT FOR SERIES 5 IS INCLUDED IN THE SOFTWARE UPDATE V5.09 AND ANY FUTURE UPDATES. V5.09 IS AVAILABLE ON THE USB DRIVE INCLUDED WITH THIS KIT.

SUGGESTED CARD DISPENSER MAINTENANCE:


RAW THRILLS SUGGESTS THE FOLLOWING MAINTENANCE TASKS ARE COMPLETED ON MINECRAFT DUNGEONS ARCADE DISPENSERS, SPECIFICALLY IF THE DISPENSERS HAVE STOPPED PERFORMING WELL AND JAMS ARE OCCURRING WITH HIGHER FREQUENCY. PER MANUFACTURER’S RECOMMENDATIONS, DISPENSER MAINTENANCE SHOULD BE PERFORMED AFTER 10,000 CARD DISPENSES.

FOR VIDEO INSTRUCTIONS, PLEASE VISIT: <https://rawthrills.com/card-dispenser-maintenance-video/>



Required Supplies and Tools:

7/16" SOCKET WRENCH
(2) PHILLIPS #0 SCREWDRIVERS
ISOPROPYL ALCOHOL (RUBBING ALCOHOL)
COTTON SWABS
CLEAN SMALL CLOTH OR PAPER TOWEL

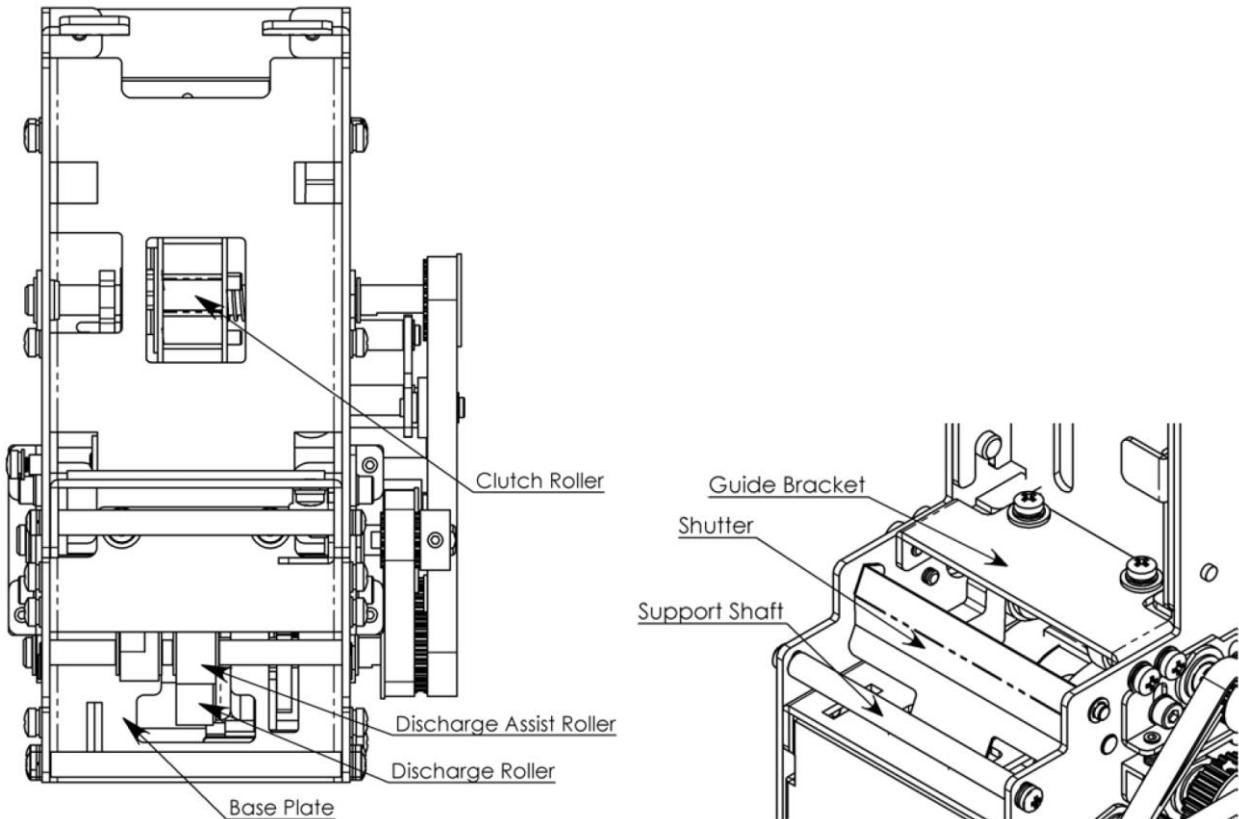

CAUTION: TAKE CARE THAT NO FINGERS, CLOTHING OR TOOLS ARE CAUGHT IN DISPENSER'S GEARS, BELTS, OR OTHER MOVING PARTS DURING MAINTENANCE.

MAINTENANCE PROCEDURE: COMPLETE FOR ALL DISPENSERS ON CABINET

1. REMOVE WEIGHT AND ALL CARDS FROM DISPENSER.
2. USE 7/16" SOCKET WRENCH TO LOOSEN (2) LOWER NUTS AND COMPLETELY REMOVE (2) UPPER NUTS SECURING CARD DISPENSER MOUNTING BRACKET TO INSIDE OF DOOR. USE WRENCH TO PROP UP DISPENSER FOR BETTER ACCESS TO BASE PLATE FOR CLEANING. (NOTE: VIDEO INSTRUCTIONS CONTAIN EXTRA STEPS RELATED TO SUPPORT SHAFT AND SHUTTER BRACKET, WHICH ARE NOT PRESENT ON MINECRAFT DUNGEONS ARCADE DISPENSERS)

3. REMOVE CARD HOPPER EXTENSION BY OPENING LATCH AT FRONT RIGHT OF DISPENSER, SLIDING HOPPER BACK AND LIFTING UPWARDS.
4. USING COTTON SWAB DAMPENED WITH ISOPROPYL ALCOHOL, CLEAN CLUTCH ROLLER, DISCHARGE ROLLER, AND DISCHARGE ASSIST ROLLERS.
 - a. USE TEST MENU TO ACCESS AND INITIATE DISPENSER TESTS TO ROTATE THESE (3) ROLLERS. BLACK LEVER NEXT TO CLUTCH ROLLER IS USED TO INDICATE WHEN HOPPER IS EMPTY AND MUST BE HELD DOWN FOR ROLLERS TO SPIN IN DISPENSER TESTS.
 - b. DISPENSER ERRORS WILL NEED TO BE CLEARED TO INITIATE SUBSEQUENT DISPENSER TESTS.
5. USING CLEAN SMALL CLOTH DAMPENED WITH ISOPROPYL ALCOHOL, WIPE DOWN ALL INTERNAL METAL SURFACES THAT CARDS WILL CONTACT, INCLUDING:
 - a. BASE PLATE AND INNER SIDE PLATES ON CARD DISPENSER
 - b. ALL INNER AND OUTER SURFACES OF CARD HOPPER EXTENSION
6. REINSTALL CARD HOPPER EXTENSION BY ALIGNING (4) TABS WITH CUTOOUTS IN BASE PLATE, AND SLIDING THE HOPPER FORWARD INTO PLACE ONCE TABS ARE BELOW BASE PLATE. LATCH WILL RETAIN PIN ON SIDE OF HOPPER.
NOTE: IMPROPER INSTALLATION OF HOPPER WILL CAUSE CARD JAMS AND DISPENSER MALFUNCTION.
7. REPLACE NUTS FOR CARD DISPENSER MOUNTING BRACKET, MAKING SURE THAT DISPENSER IS PROPERLY CENTERED ON CARD CUTOUT ON DOOR.
8. ONCE ALL ISOPROPYL ALCOHOL HAS COMPLETELY EVAPORATED, RELOAD CARDS AND CARD WEIGHT INTO HOPPER.
9. TEST CARD DISPENSER FUNCTION PRIOR TO EXITING TEST MENU AND RESUMING GAME OPERATION.

IF YOU DISCOVER BROKEN OR DAMAGED PARTS ON YOUR DISPENSERS OR PROBLEMS PERSIST, CONTACT BETSON ENTERPRISES FOR FURTHER SUPPORT AT 1-800-753-2513.