



ALPHA OPS VR STRIKE PC BIOS BATTERY INSTALL

Required on receipt of cabinets (PCs contain no BIOS batteries)



Parts needed:

3 x CR2032 Batteries (provided)



1 x USB keyboard (not provided)

1. Install battery in all 3 computers

- i. Remove the lid screw in the red box as shown in the picture, then unplug and remove the hard drive.

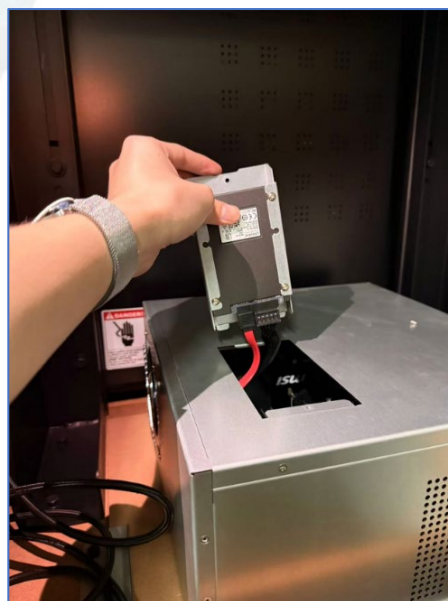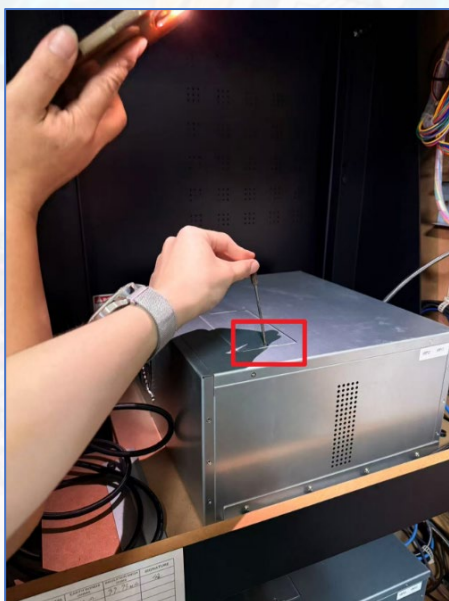

- ii. Use hands or tools to install the motherboard battery into the position marked in red in the picture below. **Note:** Please make sure the battery is fitted with POSITIVE side up as shown in below image.

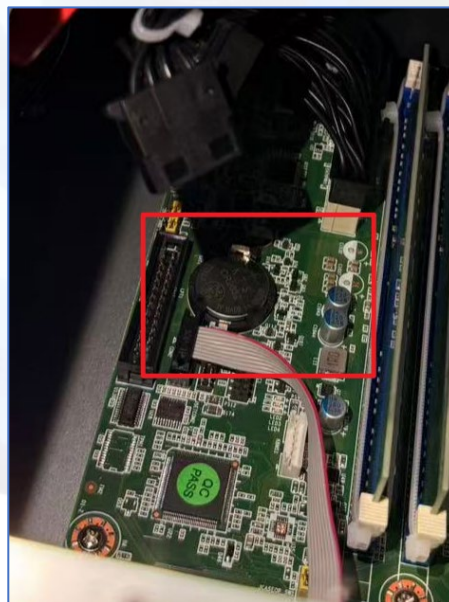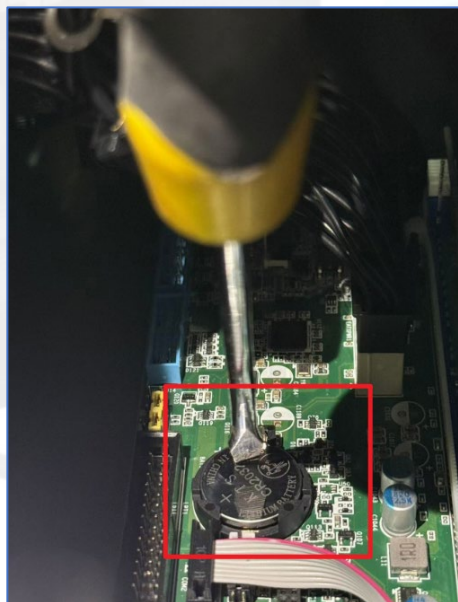





ALPHA OPS VR STRIKE PC BIOS BATTERY INSTALL

Required on receipt of cabinets (PCs contain no BIOS batteries)

2. Set the BIOS to default

- i. Connect a USB Keyboard to the PC
- ii. Power ON the PC and the BIOS screen will load
- iii. Press the “**F3**” key – screen will show “*Load Optimised Defaults?*”
- iv. Press “**ENTER**” key to accept
- v. Press “**F4**” key – screen will show “*Save Configuration and Exit?*”
- vi. Press “**ENTER**” key to accept – the PC will restart and load back to BIOS screen
- vii. Power OFF the PC and reinstall the hard drive
- viii. Repeat on the other two PCs in cabinet

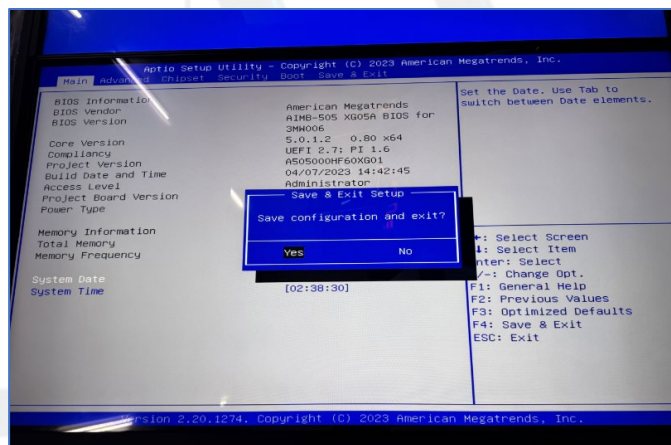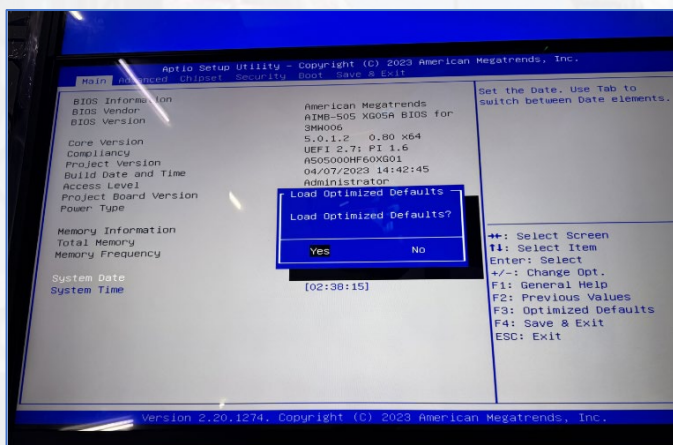

3. Power on Alpha Ops VR Strike cabinet

- i. Test game and close rear doors