


5. Game Errors and Troubleshooting

5.1 – I/O Connection Error



Cause	Troubleshooting
When I/O Board is not detected or connected.	<ol style="list-style-type: none"> 1) Switch off the machine. 2) Unplug the I/O Board USB cable and plug-in again. 3) Restart the machine.

5.2 – Cabinet ID Error

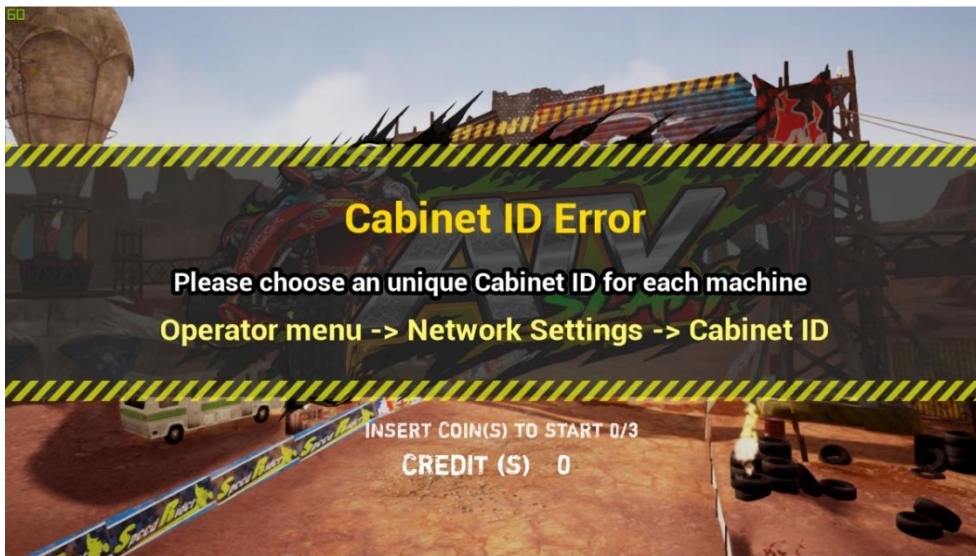

Cause	Troubleshooting
Each cabinet must be set for its unique ID when linked. When Cabinet ID is repeated in setting, error will occur.	<p>Choose an unique Cabinet ID for each linked machine.</p> <p>Enter operator menu, in Network Settings, reset Cabinet ID.</p>